

---

# 70/70A SERIES REPAIR MANUAL

## COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION .....	2
SECTION 10 - ENGINE .....	2
SECTION 21 - TRANSMISSION .....	7
SECTION 23 - DRIVE LINES .....	12
SECTION 25 - FRONT MECHANICAL DRIVE .....	12
SECTION 27 - REAR DRIVE AXLE .....	15
SECTION 31 - POWER TAKE-OFF .....	16
SECTION 33 - BRAKES AND CONTROLS .....	17
SECTION 35 - HYDRAULIC SYSTEMS .....	20
SECTION 41 - STEERING .....	29
SECTION 44 - TWO-WHEEL DRIVE AXLE AND WHEELS .....	30
SECTION 50 - CLIMATE CONTROL .....	32
SECTION 55 - ELECTRICAL SYSTEMS .....	33
SECTION 90 - PLATFORM, CAB, AND BODYWORK .....	40

The following pages are the collation of the contents pages from each section and chapter of the 70/70A Series Repair manual.

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the 70/70A Series Tractors.

---

## SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87018723

### Chapter 1 - General Information

#### CONTENTS

Section	Description	Page
00 000	Forward .....	2
	Precautionary Statements .....	3
	Safety Precautions .....	4
	Health and Safety Precautions .....	7
	Tractor Identification .....	14
	Service Techniques .....	21
	Sealer Specifications .....	23
	Hardware Torque Values .....	23
	Lubrication .....	26
	Recommended Lubricants and Coolants .....	26

## SECTION 10 - ENGINE

BOOK 1 - 87018723

### Chapter 1 - Engine and Lubrication System

#### CONTENTS

Section	Description	Page
10 000	Specifications .....	3
	Torque Values .....	12
	Grease and Sealants .....	14
	Special Tools .....	15
	Description of Operation .....	16
	Cylinder Head Assembly .....	22
	Camshaft Assembly .....	22
	Crankshaft Assembly .....	22
	Connecting Rods .....	22
	Pistons .....	22
	Manifolds .....	22
	Cylinder Block Assembly .....	22
	Timing Gears .....	22

---

# SECTION 10 - ENGINE

BOOK 1 - 87018723

## Chapter 1 - Engine and Lubrication System (Continued)

### CONTENTS

Section	Description	Page
	Engine Lubrication .....	23
	Troubleshooting .....	27
	Disassembly and Repair .....	30
	Cylinder Head .....	30
	Cylinder Head Reassembly .....	42
	Additional Information .....	45
	Crankcase Front Cassette Seal .....	47
	Parts Affected .....	47
	Additional Information .....	47
	Removal of Old Style Seal and Installation of the New Cassette Seal .....	47
	Front Cassette Seal Removal .....	53
	Engine Front Cover and Timing Gear .....	58
	Oil Pan .....	60
	Connecting Rods, Bearings, Pistons and Rings .....	61
	Cylinder Block Overhaul .....	64
	Piston Assembly Installation .....	69
	Main Bearings, Flywheel and Crankshaft .....	70
	Rear Cover Plate .....	72
	Oil Pump .....	75
	Oil Filter Support Assembly .....	77
	Crankshaft .....	78
	Camshaft .....	82
	Engine Timing Gears .....	84
	Engine Compression Test .....	85
	Test Procedure .....	85
	Test Reading .....	85
	Test Conclusion .....	85

---

## SECTION 10 - ENGINE

BOOK 1 - 87018723

### Chapter 2 - Cooling System

#### CONTENTS

Section	Description	Page
10 000	Specifications .....	2
	Description of Operation .....	4
	Cooling System .....	4
	Troubleshooting .....	6
	Disassembly and Repair .....	7
	Radiator .....	7
	Thermostat .....	9
	Temperature Warning Sender .....	10
	Fan Blade .....	10
	Viscous Clutch Assembly .....	10
	Fan Belt Tensioner .....	11
	Idler Pulley .....	11
	Water Pump .....	12

## SECTION 10 - ENGINE

BOOK 1 - 87018723

### Chapter 3 - Induction System

#### CONTENTS

Section	Description	Page
10 000	Specifications .....	2
	Description of Operation .....	4
	Air Cleaner .....	4
	Turbocharger .....	6
	Intercooler .....	9
	Troubleshooting .....	10
	Intercooler Leak Test .....	12
	Disassembly and Repair .....	13
	Air Cleaner .....	13
	Turbocharger .....	15
	Intercooler .....	21

---

# SECTION 10 - ENGINE

BOOK 1 - 87018723

## Chapter 4 - Fuel System

### CONTENTS

Section	Description	Page
10 000	Specifications . . . . .	3
	Fuel System Torque Chart . . . . .	4
	Special Tools . . . . .	4
	Description of Operation . . . . .	5
	Testing and Diagnosis . . . . .	19
	Low Pressure Fuel System . . . . .	20
	Fuel Tank Valves . . . . .	20
	Filter Inlet and Outlet Pressure Tests . . . . .	20
	High Pressure Fuel System . . . . .	25
	Injection Timing Check . . . . .	25
	Fuel Injector Nozzle Check . . . . .	28
	Injector Assembly Bench Testing . . . . .	28
	Preliminary Setup Procedure . . . . .	29
	Perform Opening Pressure Test . . . . .	29
	Perform Nozzle Seat Leakage Test . . . . .	30
	Perform Chatter and Spray Pattern Test . . . . .	31
	Surging . . . . .	31
	Fuel Shutoff Diagnosis . . . . .	32
	Shutoff Solenoid Specifications . . . . .	32
	Preliminary Checks . . . . .	32
	Checking Electrical Feed . . . . .	32
	Adjustments . . . . .	34
	Bleeding the Fuel System . . . . .	34
	Adjustment of Foot and Hand Throttle Cables . . . . .	35
	Adjustment of High Idle Speed . . . . .	35
	Adjustment of Low Idle and Antisurge . . . . .	36
	Removal and Installation . . . . .	37
	Fuel Lift Pump . . . . .	37
	Fuel Shutoff Solenoid . . . . .	38
	Fuel Injection Pump . . . . .	39
	Fuel Injection Lines . . . . .	47
	Low-pressure Fuel Injection Lines . . . . .	47
	High-pressure Fuel Lines . . . . .	48

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$