

SERVICE MANUAL

CR9090

EU built combine for NA - Series [1940 -] /

CX8080 Elevation / CX8090 Elevation

Tier 4A

Combine

Part number 47695751

1st edition English
March 2014



Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.254] Intake and exhaust manifolds and muffler	10.2
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment	10.3
[10.400] Engine cooling system	10.4
[10.418] Rotary screen	10.5
[10.450] Engine air compressor	10.6
Main gearbox and drive	14
[14.100] Main gearbox and drive	14.1
Transmission.....	21
[21.114] Mechanical transmission	21.1
[21.130] Mechanical transmission external controls.....	21.2
[21.145] Gearbox internal components.....	21.3
[21.182] Differential.....	21.4
Front axle system	25
[25.108] Final drive hub, steering knuckles, and shafts	25.1
[25.310] Final drives	25.2
Rear axle system.....	27
[27.124] Final drive hub, steering knuckles, and shafts	27.1
Hydrostatic drive.....	29
[29.100] Transmission and steering hydrostatic control	29.1
[29.204] Reservoir, cooler, and lines	29.2
[29.218] Pump and motor components.....	29.3
[29.202] Hydrostatic transmission	29.4
[29.300] Rear hydrostatic transmission.....	29.5

Brakes and controls	33
[33.202] Hydraulic service brakes	33.1
[33.110] Parking brake or parking lock	33.2
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2
[35.106] Variable displacement pump	35.3
[35.102] Pump control valves.....	35.4
[35.359] Main control valve	35.5
[35.322] Regulated/Low pressure system.....	35.6
[35.220] Auxiliary hydraulic pump and lines	35.7
[35.410] Header or attachment height system	35.8
[35.602] Header or attachment leveling system.....	35.9
[35.760] Header reverser drive	35.10
[35.992] Stone trapping system	35.11
[35.994] Positive Straw Discharge (PSD)	35.12
[35.796] Chaff spreader control	35.13
[35.440] Grain tank unload system.....	35.14
[35.450] Traction variator system.....	35.15
Steering.....	41
[41.101] Steering control	41.1
[41.200] Hydraulic control components.....	41.2
[41.432] Autoguidance steering	41.3
Tracks and track suspension.....	48
[48.130] Track frame and driving wheels.....	48.1
[48.134] Track tension units	48.2
[48.100] Tracks	48.3
Cab climate control	50

[50.100] Heating	50.1
[50.104] Ventilation	50.2
[50.200] Air conditioning	50.3
Electrical systems	55
[55.000] Electrical system	55.1
[55.100] Harnesses and connectors	55.2
[55.201] Engine starting system	55.3
[55.301] Alternator	55.4
[55.988] Selective Catalytic Reduction (SCR) electrical system	55.5
[55.640] Electronic modules	55.6
[55.029] Gearbox electric system	55.7
[55.019] Hydrostatic drive control system	55.8
[55.512] Cab controls	55.9
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls	55.10
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system	55.11
[55.662] Header height control	55.12
[55.628] Threshing electrical control	55.13
[55.427] Straw walker variator	55.14
[55.426] Harvest material flow control system	55.15
[55.624] Residue handling control	55.16
[55.785] Precision farming system	55.17
[55.911] Global Positioning System (GPS)	55.18
[55.680] Autopilot/Autoguidance	55.19
[55.518] Wiper and washer system	55.20
[55.404] External lighting	55.21
[55.405] External lighting switches and relays	55.22
[55.514] Cab lighting	55.23
[55.408] Warning indicators, alarms, and instruments	55.24

[55.DTC] FAULT CODES	55.25
Attachments/Headers	58
[58.900] Belt feeding	58.1
Product feeding	60
[60.105] Floating roll, feed chain, and drive	60.1
[60.110] Feeder housing.....	60.2
[60.150] Feeder drive system	60.3
[60.165] Feeder reverse system.....	60.4
[60.112] Stone trapping system	60.5
[60.260] Rotor	60.6
Threshing	66
[66.000] Threshing	66.1
[66.260] Threshing mechanism drive system	66.2
[66.331] Rotor	66.3
[66.330] Drum	66.4
[66.360] Drum/Rotor housing.....	66.5
[66.321] Drum/Rotor variator with electrical control	66.6
[66.105] Concave.....	66.7
[66.101] Concave conveyor plate	66.8
[66.110] Concave control system.....	66.9
Separation	72
[72.350] Beater	72.1
[72.220] Discharge beater	72.2
[72.420] Rotary separator	72.3
[72.440] Straw-flow beater	72.4
[72.110] Straw walker drive system	72.5
[72.101] Straw walkers and shafts	72.6
Residue handling	73

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$