

SERVICE MANUAL

E215C EVO
E245C EVO

Hydraulic Excavator

Part Number

48024961

1st Edition

English 11/2016





SERVICE MANUAL

E215C EVO CRAWLER EXCAVATOR - STANDARD MODEL - TIER3
E245C EVO CRAWLER EXCAVATOR - MASS EXCAVATOR MODEL - TIER3

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.216] Fuel tanks	10.2
[10.254] Intake and exhaust manifolds and muffler	10.3
[10.310] Aftercooler.....	10.4
[10.400] Engine cooling system	10.5
Hydraulic systems.....	35
[35.106] Variable displacement pump	35.1
[35.102] Pump control valves.....	35.2
[35.353] Hydraulic travel system	35.3
[35.359] Main control valve.....	35.4
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.5
[35.300] Reservoir, cooler, and filters.....	35.6
[35.304] Combination pump units	35.7
[35.357] Pilot system	35.8
[35.355] Hydraulic hand control	35.9
[35.356] Hydraulic foot control.....	35.10
[35.352] Hydraulic swing system	35.11
[35.354] Hydraulic central joint	35.12
[35.736] Boom hydraulic system	35.13
[35.737] Dipper hydraulic system.....	35.14
[35.738] Excavator and backhoe bucket hydraulic system.....	35.15
[35.360] Hammer and rotating bucket hydraulic system	35.16
Frames and ballasting	39

[39.140] Ballasts and supports	39.1
Tracks and track suspension	48
[48.130] Track frame and driving wheels	48.1
[48.100] Tracks	48.2
[48.134] Track tension units	48.3
[48.138] Track rollers	48.4
Cab climate control	50
[50.100] Heating	50.1
[50.200] Air conditioning	50.2
Electrical systems	55
[55.000] Electrical system	55.1
[55.010] Fuel injection system	55.2
[55.013] Engine oil system	55.3
[55.015] Engine control system	55.4
[55.201] Engine starting system	55.5
[55.640] Electronic modules	55.6
[55.036] Hydraulic system control	55.7
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls	55.8
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system	55.9
[55.100] Harnesses and connectors	55.10
[55.301] Alternator	55.11
[55.302] Battery	55.12
[55.404] External lighting	55.13
[55.416] Swing control system	55.14
[55.417] Travel control system	55.15
[55.530] Camera	55.16
[55.518] Wiper and washer system	55.17
[55.514] Cab lighting	55.18

[55.408] Warning indicators, alarms, and instruments	55.19
[55.512] Cab controls.....	55.20
[55.950] Hammer electric system	55.21
[55.992] Anti-theft system	55.22
[55.DTC] FAULT CODES.....	55.23
Booms, dippers, and buckets	84
[84.910] Boom.....	84.1
[84.912] Dipper arm	84.2
[84.100] Bucket.....	84.3
Platform, cab, bodywork, and decals	90
[90.100] Engine hood and panels	90.1
[90.120] Mechanically-adjusted operator seat.....	90.2
[90.150] Cab.....	90.3
[90.156] Cab windshield and windows	90.4

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$