

SERVICE MANUAL

L218 / L220

Tier 4B (final)

200 Series Skid Steer Loader

L218 PIN NDM449275 and above; L220 PIN NDM456673 and above

Part number 47851949

English

May 2015

Replaces part number 47712047



Link Product / Engine

| Product | Market Product | Engine |
|--------------------------------------|-----------------------|---------------|
| L218 TIER 4B Final [NDM449275 -] | North America | N4LDI-TA-45SL |
| L220 TIER 4B Final [NDM456673 -] | North America | N4LDI-TA-50SL |

Contents

INTRODUCTION

| | |
|---|------|
| Engine..... | 10 |
| [10.001] Engine and crankcase | 10.1 |
| [10.400] Engine cooling system | 10.2 |
| [10.414] Fan and drive | 10.3 |
| Power coupling..... | 19 |
| [19.121] Pump-drive assembly | 19.1 |
| Front axle system | 25 |
| [25.450] Chain drive system..... | 25.1 |
| Rear axle system..... | 27 |
| [27.650] Chain drive system..... | 27.1 |
| Hydrostatic drive..... | 29 |
| [29.202] Hydrostatic transmission | 29.1 |
| [29.134] Two-speed assembly..... | 29.2 |
| [29.200] Mechanical control | 29.3 |
| [29.218] Pump and motor components..... | 29.4 |
| Brakes and controls | 33 |
| [33.110] Parking brake or parking lock | 33.1 |
| Hydraulic systems..... | 35 |
| [35.000] Hydraulic systems..... | 35.1 |
| [35.104] Fixed displacement pump..... | 35.2 |
| [35.300] Reservoir, cooler, and filters..... | 35.3 |
| [35.359] Main control valve..... | 35.4 |
| [35.525] Auxiliary hydraulic valves and lines | 35.5 |
| [35.600] High flow hydraulics..... | 35.6 |
| [35.701] Front loader arm hydraulic system | 35.7 |

| | |
|--|-----------|
| [35.724] Front loader hydraulic system control | 35.8 |
| [35.734] Tool quick coupler hydraulic system | 35.9 |
| Frames and ballasting | 39 |
| [39.140] Ballasts and supports | 39.1 |
| Wheels | 44 |
| [44.511] Front wheels..... | 44.1 |
| [44.520] Rear wheels..... | 44.2 |
| Cab climate control | 50 |
| [50.100] Heating..... | 50.1 |
| [50.200] Air conditioning | 50.2 |
| Electrical systems | 55 |
| [55.000] Electrical system | 55.1 |
| [55.011] Fuel tank system | 55.2 |
| [55.012] Engine cooling system | 55.3 |
| [55.014] Engine intake and exhaust system..... | 55.4 |
| [55.019] Hydrostatic drive control system | 55.5 |
| [55.031] Parking brake electrical system | 55.6 |
| [55.036] Hydraulic system control | 55.7 |
| [55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system..... | 55.8 |
| [55.100] Harnesses and connectors..... | 55.9 |
| [55.302] Battery..... | 55.10 |
| [55.408] Warning indicators, alarms, and instruments | 55.11 |
| [55.512] Cab controls..... | 55.12 |
| [55.640] Electronic modules..... | 55.13 |
| [55.DTC] FAULT CODES..... | 55.14 |
| Front loader and bucket..... | 82 |
| [82.100] Arm..... | 82.1 |
| [82.300] Bucket..... | 82.2 |

| | |
|---|------|
| Platform, cab, bodywork, and decals | 90 |
| [90.150] Cab..... | 90.1 |
| [90.154] Cab doors and hatches | 90.2 |

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$