

SERVICE MANUAL

T4.75 PowerStar™ Tier 4B (final) Tractor

PIN ZDAH00008 and above

Part number 47711469

1st edition English
May 2014



Link Product / Engine

Product	Market Product	Engine
T4.75 Powerstar Less cab, Tier 4B (Final) [ZxAHxxxxx]	North America	F5DFL463A*F017
T4.75 Powerstar Less cab, Tier 4B (Final) [ZxAHxxxxx]	Latin America	F5DFL463A*F017
T4.75 Powerstar With cab, Tier 4B (Final) [ZxAHxxxxx]	North America	F5DFL463A*F017
T4.75 Powerstar With cab, Tier 4B (Final) [ZxAHxxxxx]	Latin America	F5DFL463A*F017

Contents

INTRODUCTION

Engine	10
[10.001] Engine and crankcase	10.1
[10.216] Fuel tanks	10.2
[10.501] Exhaust Gas Recirculation (EGR) - Diesel Particulate Filter (DPF) exhaust treatment	10.3
[10.414] Fan and drive	10.4
Clutch	18
[18.100] Clutch mechanical release control	18.1
[18.104] Clutch hydraulic release control.....	18.2
[18.110] Clutch and components	18.3
Transmission	21
[21.114] Mechanical transmission	21.1
[21.140] Mechanical transmission internal components.....	21.2
[21.112] Power shuttle transmission.....	21.3
[21.134] Power shuttle transmission external controls	21.4
[21.104] Power shuttle transmission lubrication system.....	21.5
[21.154] Power shuttle transmission internal components	21.6
[21.160] Creeper	21.7
[21.162] Reverser	21.8
[21.109] Transmission cooler and lines.....	21.9
Four-Wheel Drive (4WD) system	23
[23.101] Mechanical control	23.1
[23.202] Electro-hydraulic control	23.2
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2

[25.108] Final drive hub, steering knuckles, and shafts	25.3
[25.400] Non-powered front axle	25.4
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential	27.2
[27.120] Planetary and final drives	27.3
Power Take-Off (PTO).....	31
[31.101] Rear mechanical control	31.1
[31.104] Rear electro-hydraulic control.....	31.2
[31.110] One-speed rear Power Take-Off (PTO)	31.3
[31.114] Two-speed rear Power Take-Off (PTO)	31.4
Brakes and controls	33
[33.202] Hydraulic service brakes	33.1
[33.110] Parking brake or parking lock	33.2
Hydraulic systems.....	35
[35.104] Fixed displacement pump.....	35.1
[35.204] Remote control valves	35.2
[35.114] Three-point hitch control valve	35.3
[35.723] Front loader bucket hydraulic system.....	35.4
Hitches, drawbars, and implement couplings.....	37
[37.100] Drawbars and towing hitches	37.1
[37.110] Rear three-point hitch	37.2
Steering.....	41
[41.106] Tie rods.....	41.1
[41.206] Pump	41.2
[41.101] Steering control	41.3
[41.200] Hydraulic control components.....	41.4

[41.216] Cylinders	41.5
Wheels	44
[44.511] Front wheels	44.1
[44.520] Rear wheels	44.2
Cab climate control	50
[50.100] Heating	50.1
[50.104] Ventilation	50.2
[50.200] Air conditioning	50.3
Electrical systems	55
[55.100] Harnesses and connectors	55.1
[55.201] Engine starting system	55.2
[55.301] Alternator	55.3
[55.302] Battery	55.4
[55.640] Electronic modules	55.5
[55.048] Rear Power Take-Off (PTO) control system	55.6
[55.408] Warning indicators, alarms, and instruments	55.7
[55.DTC] FAULT CODES	55.8
Front loader and bucket	82
[82.300] Bucket	82.1
Platform, cab, bodywork, and decals	90
[90.150] Cab	90.1
[90.151] Cab interior	90.2
[90.160] Cab interior trim and panels	90.3
[90.154] Cab doors and hatches	90.4
[90.110] Operator platform less cab	90.5
[90.100] Engine hood and panels	90.6

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$