

SERVICE MANUAL

T4.80F / T4.80V / T4.90F / T4.90V T4.100F / T4.100V / T4.110F / T4.110V Tier 4A (interim) Tractor

*T4.80F with cab PIN ZGLH01657 and above; T4.80F without cab PIN ZGLH01068 and above;
T4.80V with cab PIN ZFLJ01935 and above; T4.80V without cab PIN ZFLJ02353 and above;
T4.90F with cab PIN ZGLH01601 and above; T4.90F without cab PIN ZGLH00695 and above;
T4.90V with cab PIN ZGLJ03134 and above; T4.90V without cab PIN ZGLJ02059 and above;
T4.100F with cab PIN ZGLH00384 and above; T4.100F without cab PIN ZGLH00644 and above;
T4.100V with cab PIN ZGLJ02249 and above; T4.100V without cab PIN ZGLJ02246 and above;
T4.110F with cab PIN ZFLH00040 and above; T4.110F without cab PIN ZFLH02101 and above;
T4.110V with cab PIN ZGLJ01295 and above; T4.110V without cab PIN ZFLJ00805 and above*

Part number 51430128

1st edition English
December 2017





SERVICE MANUAL

**T4.100F With cab [ZGLH00384 -], T4.100F Without cab [ZGLH00644 -],
T4.100V With cab [ZGLJ02249 -], T4.100V Without cab [ZGLJ02246 -],
T4.110F With cab [ZFLH00040 -], T4.110F Without cab [ZFLH02101 -],
T4.110V With cab [ZGLJ01295 -], T4.110V Without cab [ZFLJ00805 -],
T4.80F With cab [ZGLH01657 -], T4.80F Without cab [ZGLH01068 -], T4.80V
With cab [ZFLJ01935 -], T4.80V Without cab [ZFLJ02353 -], T4.90F With
cab [ZGLH01601 -], T4.90F Without cab [ZGLH00695 -], T4.90V With cab
[ZGLJ03134 -], T4.90V Without cab [ZGLJ02059 -]**

Link Product / Engine

Product	Market Product	Engine
T4.100F With cab [ZGLH00384 -]	North America	F5DFL413K*A010
T4.100F Without cab [ZGLH00644 -]	North America	F5DFL413K*A010
T4.110F With cab [ZFLH00040 -]	North America	F5DFL413J*A011
T4.110F Without cab [ZFLH02101 -]	North America	F5DFL413J*A011
T4.80F With cab [ZGLH01657 -]	North America	F5DFL413A*E009
T4.80F Without cab [ZGLH01068 -]	North America	F5DFL413A*E009
T4.90F With cab [ZGLH01601 -]	North America	F5DFL413L*A007
T4.90F Without cab [ZGLH00695 -]	North America	F5DFL413L*A007
T4.100V With cab [ZGLJ02249 -]	North America	F5DFL413K*A010
T4.100V Without cab [ZGLJ02246 -]	North America	F5DFL413K*A010
T4.110V With cab [ZGLJ01295 -]	North America	F5DFL413J*A011
T4.110V Without cab [ZFLJ00805 -]	North America	F5DFL413J*A011
T4.80V With cab [ZFLJ01935 -]	North America	F5DFL413A*E009
T4.80V Without cab [ZFLJ02353 -]	North America	F5DFL413A*E009
T4.90V With cab [ZGLJ03134 -]	North America	F5DFL413L*A007
T4.90V Without cab [ZGLJ02059 -]	North America	F5DFL413L*A007

Contents

INTRODUCTION

Engine	10
[10.001] Engine and crankcase	10.1
[10.114] Pump drives	10.2
[10.216] Fuel tanks	10.3
[10.206] Fuel filters	10.4
[10.220] Throttle linkage.....	10.5
[10.202] Air cleaners and lines	10.6
[10.254] Intake and exhaust manifolds and muffler	10.7
[10.501] Exhaust Gas Recirculation (EGR) exhaust treatment.....	10.8
[10.400] Engine cooling system	10.9
[10.414] Fan and drive	10.10
[10.310] Aftercooler.....	10.11
[10.304] Engine lubrication system.....	10.12
Clutch	18
[18.100] Clutch mechanical release control	18.1
[18.104] Clutch hydraulic release control.....	18.2
[18.110] Clutch and components	18.3
Transmission	21
[21.114] Mechanical transmission	21.1
[21.130] Mechanical transmission external controls.....	21.2
[21.100] Mechanical transmission hydraulic components	21.3
[21.140] Mechanical transmission internal components.....	21.4
[21.112] Power shuttle transmission.....	21.5
[21.134] Power shuttle transmission external controls	21.6
[21.104] Power shuttle transmission hydraulic components	21.7
[21.154] Power shuttle transmission internal components	21.8

[21.145] Gearbox internal components.....	21.9
[21.160] Creeper	21.10
[21.162] Reverser	21.11
[21.168] Hi-Lo unit	21.12
[21.109] Transmission cooler and lines.....	21.13
[21.118] Transmission/Rear drive	21.14
[21.182] Differential.....	21.15
Four-Wheel Drive (4WD) system	23
[23.202] Electro-hydraulic control	23.1
[23.304] Four-Wheel Drive (4WD) gearbox	23.2
[23.314] Drive shaft.....	23.3
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
[25.310] Final drives	25.4
[25.400] Non-powered front axle	25.5
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential	27.2
[27.120] Planetary and final drives	27.3
[27.126] Spur gear and final drives.....	27.4
Power Take-Off (PTO).....	31
[31.101] Rear mechanical control	31.1
[31.142] Front Power Take-Off (PTO) control	31.2
[31.146] Front Power Take-Off (PTO)	31.3
Brakes and controls	33

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$