

SERVICE MANUAL

T4.90 FB / T4.100 FB / T4.110 FB
Tractor

Part number 51427780
English
April 2018



Chapter N°	Description
1	INTRODUCTION
2	ENGINE
3	CLUTCH HOUSING
4	GEARBOX
5	REAR DIFFERENTIAL
6	REAR FINAL DRIVE UNITS
7	FRONT AXLE
8	TRANSFER CASE
9	REAR POWER TAKE OFF
10	BRAKES
12	HYDRAULIC SYSTEM
13	PLATFORM
14	CAB
15	REAR HITCH
17	ELECTRICAL SYSTEM
18	SPECIAL TOOLS

I : Introduction

Index

I.1	Reading this manual	1-3
1.1.1	Introduction	1-4
1.1.2	Structure of this manual.....	1-4
1.1.3	Identifying the tractor.....	1-5
I.2	Safety rules	1-7
1.2.1	Essential preventive guidelines.....	1-8
1.2.2	Using the tractor safely	1-16
I.3	General	1-19
1.3.1	Spare parts	1-20
1.3.2	Specific tools.....	1-20
1.3.3	Oil seals for rotating shafts	1-20
1.3.4	Adjuster shims.....	1-20
1.3.5	O-ring seals.....	1-21
1.3.6	Sealants used.....	1-21
1.3.7	Spring pins	1-21
I.4	Technical characteristics	1-23
1.4.1	Engine	1-24
1.4.2	Transmission	1-25
1.4.3	Brakes.....	1-25
1.4.4	Steering wheel.....	1-25
1.4.5	Rear power take off	1-26
1.4.6	Front Power Take Off	1-26
1.4.7	Rear lift	1-26
1.4.8	Front lift.....	1-26
1.4.9	Hydraulic System	1-27
1.4.10	Electrical system	1-27
1.4.11	Driver zone.....	1-27
1.4.12	Cab.....	1-28
1.4.13	Towing devices	1-28
1.4.14	Towable masses.....	1-29
1.4.15	Ballast weights	1-29
1.4.16	Weights and dimensions	1-30
1.4.17	Lubricants	1-33
1.4.18	Speed	1-34
1.4.19	Conversion tables.....	1-37

I.5	Tightening torques and sealants	I-39
I.5.1	Tightening torques for nuts.....	I-40
I.5.2	Tightening torques for ring nuts	I-40
I.5.3	Tightening torques for hex head screws.....	I-41
I.5.4	Tightening torques for stud bolts	I-41
I.5.5	Tightening torques for tapered plugs.....	I-41
I.5.6	Loctite sealant types	I-42
I.6	General assembly instructions	I-43
I.6.1	Oil seals	I-44
I.6.2	O-Rings	I-45
I.6.3	Bearings.....	I-46

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$