

# SERVICE MANUAL

**T7.290 AutoCommand™**

**T7.315 AutoCommand™**

**Tier 4B (final)**

**Tractor**

*PIN ZFEA01001 and above*

**Part number 48193174**

1<sup>st</sup> edition English  
November 2017





## **SERVICE MANUAL**

**T7.290 AutoCommand™ Sidewinder II [ZFEA01001 - ZGEA02931], T7.290 AutoCommand™ Sidewinder II [ZGEA02932 - ZGEA04528], T7.290 AutoCommand™ Sidewinder II [ZGEA04529 - ], T7.315 AutoCommand™ Sidewinder II [ZFEA01001 - ZGEA02931], T7.315 AutoCommand™ Sidewinder II [ZGEA02932 - ZGEA04528], T7.315 AutoCommand™ Sidewinder II [ZGEA04529 - ]**

## Link Product / Engine

Product	Market Product	Engine
T7.290 AutoCommand™ Sidewinder II [ZFEA01001 - ZGEA02931]	North America	F4DFE617M*B001
T7.290 AutoCommand™ Sidewinder II [ZGEA02932 - ZGEA04528]	North America	F4DFE617M*B001
T7.290 AutoCommand™ Sidewinder II [ZGEA04529 - ]	North America	F4DFE617M*B001
T7.315 AutoCommand™ Sidewinder II [ZFEA01001 - ZGEA02931]	North America	F4DFE617L*B002
T7.315 AutoCommand™ Sidewinder II [ZGEA02932 - ZGEA04528]	North America	F4DFE617L*B002
T7.315 AutoCommand™ Sidewinder II [ZGEA04529 - ]	North America	F4DFE617L*B002

# Contents

---

## INTRODUCTION

<b>Engine</b> .....	<b>10</b>
[10.001] Engine and crankcase .....	10.1
[10.216] Fuel tanks .....	10.2
[10.202] Air cleaners and lines .....	10.3
[10.254] Intake and exhaust manifolds and muffler .....	10.4
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment.....	10.5
[10.400] Engine cooling system .....	10.6
[10.414] Fan and drive .....	10.7
[10.310] Aftercooler.....	10.8
<b>Clutch</b> .....	<b>18</b>
[18.112] Slip clutch or flywheel damper .....	18.1
<b>Transmission</b> .....	<b>21</b>
[21.504] Continuously Variable Transmission (CVT) .....	21.1
[21.505] Continuously Variable Transmission (CVT) external controls.....	21.2
[21.506] Continuously Variable Transmission (CVT) hydraulic components .....	21.3
[21.507] Continuously Variable Transmission (CVT) internal components .....	21.4
<b>Four-Wheel Drive (4WD) system</b> .....	<b>23</b>
[23.202] Electro-hydraulic control .....	23.1
[23.314] Drive shaft.....	23.2
<b>Front axle system</b> .....	<b>25</b>
[25.100] Powered front axle .....	25.1
[25.102] Front bevel gear set and differential .....	25.2
[25.108] Final drive hub, steering knuckles, and shafts .....	25.3
[25.122] Axle suspension control.....	25.4
<b>Rear axle system</b> .....	<b>27</b>

[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential.....	27.2
[27.120] Planetary and final drives .....	27.3
<b>Power Take-Off (PTO).....</b>	<b>31</b>
[31.104] Rear electro-hydraulic control.....	31.1
[31.119] Four-speed rear Power Take-Off (PTO).....	31.2
[31.142] Front Power Take-Off (PTO) control .....	31.3
[31.146] Front Power Take-Off (PTO) .....	31.4
<b>Brakes and controls .....</b>	<b>33</b>
[33.202] Hydraulic service brakes .....	33.1
[33.110] Parking brake or parking lock .....	33.2
[33.240] Emergency brake .....	33.3
[33.220] Trailer brake hydraulic control.....	33.4
[33.224] Trailer brake pneumatic control .....	33.5
[33.204] Front axle brake .....	33.6
[33.200] Brake cooling.....	33.7
[33.350] Anti-lock Brake System (ABS) .....	33.8
<b>Hydraulic systems.....</b>	<b>35</b>
[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2
[35.106] Variable displacement pump .....	35.3
[35.230] Priority valves .....	35.4
[35.204] Remote control valves .....	35.5
[35.220] Auxiliary hydraulic pump .....	35.6
[35.114] Three-point hitch control valve .....	35.7
[35.116] Three-point hitch cylinder .....	35.8
[35.124] Three-point hitch hydraulic adjustment .....	35.9
[35.160] Front hitch controls and lines .....	35.10

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$