

SERVICE MANUAL

T8.270 / T8.295 / T8.325

T8.355 / T8.385

Tractor

Part number 84417609

English

March 2014





SERVICE MANUAL



T8.270 18x6, with cabin
T8.295 18x6, with cabin
T8.325 18x6, with cabin
T8.355 18x6, with cabin
T8.385 18x6, with cabin

Link Product / Engine

Product	Market Product	Engine
null 18x6, with cabin [HCCZ8270JDCN13409 -]	Latin America	F2CFA613P*A010
null 18x6, with cabin [ZBCN40989 -]	Latin America	F2CFA613P*A010
null 18x6, with cabin [HCCZ8295JDCN13409 -]	Latin America	F2CFA613N*A010
null 18x6, with cabin [ZBCN40989 -]	Latin America	F2CFA613N*A010
null 18x6, with cabin [HCCZ8325JDCN13409 -]	Latin America	F2CFA613J*A010
null 18x6, with cabin [ZBCN40989 -]	Latin America	F2CFA613J*A010
null 18x6, with cabin [HCCZ8355JDCN13409 -]	Latin America	F2CFA613F*A010
null 18x6, with cabin [ZBCN40989 -]	Latin America	F2CFA613F*A010
null 18x6, with cabin [HCCZ8385JDCN13409 -]	Latin America	F2CFA613C*A010
null 18x6, with cabin [ZBCN40989 -]	Latin America	F2CFA613C*A010

Contents

INTRODUCTION

Engine	10
[10.001] Engine and crankcase	10.1
[10.101] Cylinder heads	10.2
[10.114] Pump drives	10.3
[10.202] Air cleaners and lines	10.4
[10.216] Fuel tanks	10.5
[10.254] Intake and exhaust manifolds and muffler	10.6
[10.310] Aftercooler.....	10.7
[10.400] Engine cooling system	10.8
[10.414] Fan and drive	10.9
Power coupling	19
[19.100] Drive shaft.....	19.1
Transmission	21
[21.105] Powershift transmission lubrication system	21.1
[21.113] Powershift transmission	21.2
[21.135] Powershift transmission external controls.....	21.3
[21.155] Powershift transmission internal components.....	21.4
[21.200] Dropbox	21.5
Four-Wheel Drive (4WD) system	23
[23.202] Electro-hydraulic control	23.1
[23.314] Drive shaft.....	23.2
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3

Rear axle system	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential.....	27.2
[27.120] Planetary and final drives.....	27.3
Power Take-Off (PTO)	31
[31.104] Rear electro-hydraulic control.....	31.1
[31.110] One-speed rear Power Take-Off (PTO).....	31.2
[31.114] Two-speed rear Power Take-Off (PTO).....	31.3
[31.146] Front Power Take-Off (PTO).....	31.4
Brakes and controls	33
[33.110] Parking brake or parking lock.....	33.1
[33.202] Hydraulic service brakes.....	33.2
Hydraulic systems	35
[35.000] Hydraulic systems.....	35.1
[35.102] Pump control valves.....	35.2
[35.106] Variable displacement pump.....	35.3
[35.114] Three-point hitch control valve.....	35.4
[35.204] Remote control valves.....	35.5
[35.300] Reservoir, cooler, and filters.....	35.6
[35.304] Combination pump units.....	35.7
Pneumatic system	36
[36.100] Pneumatic system.....	36.1
Hitches, drawbars, and implement couplings	37
[37.110] Rear three-point hitch.....	37.1
Steering	41
[41.101] Steering control.....	41.1
[41.200] Hydraulic control components.....	41.2
[41.206] Pump.....	41.3

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$