

---

# TC18, TC21D, TC24D REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION .....	2
SECTION 10 - ENGINE SYSTEMS .....	3
SECTION 18 - SINGLE CLUTCH .....	4
SECTION 21 - TRANSMISSION SYSTEMS .....	4
SECTION 25 - FRONT AXLE - FRONT WHEEL DRIVE .....	5
SECTION 27 - DIFFERENTIAL AND REAR AXLE .....	5
SECTION 29 - HYDROSTATIC TRANSMISSION .....	6
SECTION 31 - POWER TAKE-OFF SYSTEMS .....	6
SECTION 33 - BRAKES .....	7
SECTION 35 - HYDRAULIC SYSTEM .....	7
SECTION 41 - STEERING SYSTEM .....	8
SECTION 44 - FRONT AXLE AND RELATED PARTS .....	8
SECTION 55 - ELECTRICAL SYSTEM .....	9
SECTION 90 - PLATFORM .....	12

The following pages are the collation of the contents pages from each section and chapter of the TC18, TC21D and TC24D Tractor Repair manual. Complete Repair part # 87012847.

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the TC18, TC21D and TC24D Tractors.

---

# SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87032525

## Chapter 1 - General Information

### CONTENTS

<b>Section</b>	<b>Description</b>	<b>Page</b>
	Introduction .....	2
	Precautionary Statements .....	3
	Safety .....	4
	The Tractor .....	4
	Servicing the Tractor .....	4
	Operating the Tractor .....	5
	Driving the Tractor .....	5
	Operating the PTO .....	6
	Diesel Fuel .....	6
	Safety Frame (ROPS) .....	6
	Safety Decals .....	7
	Instruction Decals .....	9
	Product Identification Plate .....	13
	International Symbols .....	14
	Specifications - TC18 .....	15
	General Dimensions - TC18 .....	20
	Specifications - TC21D, TC24D .....	23
	General Dimensions - TC21D, TC24D .....	30
	Minimum Hardware Tightening Torques .....	31
	Lubricants .....	33
	Adjustments .....	34

---

## SECTION 10 - ENGINE SYSTEMS

BOOK 1 - 87032525

### Chapter 1 - Engine Systems

#### CONTENTS

Section	Description	Page
	General Information .....	2
	Engine Overhaul .....	4
	Disassembly, Inspection, and Assembly of Component Assemblies .....	14
	Engine Reassembly .....	35
	Engine Lubrication System .....	46
	Cooling System .....	52
	Cooling System Overhaul .....	55
	Troubleshooting .....	63
	Specifications .....	69
	Torque Specifications .....	77
	Special Tools .....	78

## SECTION 10 - ENGINE SYSTEMS

BOOK 1 - 87032525

### Chapter 2 - Fuel System

#### CONTENTS

Section	Description	Page
	Injection Pump .....	2
	Injection Pump Removal and Installation .....	8
	Timing and Governor Adjustments .....	9
	Injectors .....	20
	Injector Repair and Adjustment .....	21
	Troubleshooting - General .....	23
	Troubleshooting - Fuel Injectors .....	26
	Troubleshooting - Governor .....	27
	Specifications .....	28

---

# SECTION 18 - SINGLE CLUTCH

BOOK 1 - 87032525

## Chapter 1 - Single Clutch

### CONTENTS

Section	Description	Page
	General Information .....	2
	Single Clutch Overhaul .....	4
	Separating the Tractor - Between the Engine and Clutch Housing - 6 x 2 and 9 x 3 Transmissions .....	4
	Servicing Clutch-Related Components .....	25
	Troubleshooting .....	32
	Specifications .....	33
	Special Tools .....	34

# SECTION 21 - TRANSMISSION SYSTEMS

BOOK 1 - 87032525

## Chapter 1 - Transmission Systems

### CONTENTS

Section	Description	Page
	Introduction .....	2
	6 x 2 Gear Transmission Description and Operation .....	3
	6 x 2 Gear Transmission Overhaul .....	9
	Separating the Tractor - Between the Clutch Housing and the Rear Transmission - 6 x 2 Transmission .....	10
	Reconnecting the Tractor - When Separated Between the Clutch Housing and the Rear Transmission - 6 x 2 Transmission .....	42
	9 x 3 Gear Transmission Description and Operation .....	45
	9 x 3 Gear Transmission Overhaul .....	48
	Separating the Tractor - Between the Clutch Housing and the Rear Transmission - 9 x 3 Transmission .....	49
	Reconnecting the Tractor - When Separated Between the Engine and Clutch Housing - 6 x 2 and 9 x 3 Transmissions .....	83

---

## SECTION 25 - FRONT AXLE - FRONT WHEEL DRIVE

BOOK 2 - 87032526

### Chapter 1 - Front Axle - Front Wheel Drive

#### CONTENTS

Section	Description	Page
	Front Axle - Front Wheel Drive .....	2
	Front-Wheel Drive Front Axle Removal .....	3
	Front-Wheel Drive Front Axle Installation .....	14
	Backlash Adjustment .....	14
	Troubleshooting - Front Axle .....	15
	Specifications .....	16

## SECTION 27 - DIFFERENTIAL AND REAR AXLE

BOOK 2 - 87032526

### Chapter 1 - Differential and Rear Axle

#### CONTENTS

Section	Description	Page
	General Information .....	2
	Overhaul .....	8
	Specifications .....	20

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$