

# Service Manual

## cardiolife Defibrillator

TEC-5521/TEC-5531

TEC-5500 series  
TEC-5521B  
TEC-5521C  
TEC-5521E  
TEC-5521K  
TEC-5531B  
TEC-5531C  
TEC-5531E  
TEC-5531K

In order to use this product safely and fully understand all its functions, make sure to read this manual before using the product.

Keep this manual near the instrument or in the reach of the operator and refer to it whenever the operation is unclear.

This product stores personal patient information. Manage and operate the information appropriately.

Patient names on the screen shots and recording examples in this manual are fictional and any resemblance to any person living or dead is purely coincidental.

The contents of this manual are subject to change without notice.

---

#### **Copyright Notice**

The entire contents of this manual are copyrighted by Nihon Kohden. All rights are reserved. No part of this document may be reproduced, stored, or transmitted in any form or by any means (electronic, mechanical, photocopied, recorded, or otherwise) without the prior written permission of Nihon Kohden.

---

#### **Trademark**



The mark printed on the SD card that is used in this instrument is a trademark. The company name and model name are trademarks and registered trademarks of each company.

---



# Contents

1

2

3

4

5

GENERAL HANDLING PRECAUTIONS .....	i
WARRANTY POLICY .....	ii
EMC RELATED CAUTION.....	iii
Conventions Used in this Manual and Instrument .....	v
Warnings, Cautions and Notes .....	v
Explanations of the Symbols in this Manual and Instrument .....	vi

## **Section 1**    **General..... 1.1**

Introduction .....	1.2
Models and Functions .....	1.2
General Information on Servicing .....	1.3
Service Policy, Service Parts and Patient Safety Checks .....	1.5
Service Policy .....	1.5
Service Parts .....	1.5
Patient Safety Checks.....	1.6
Maintenance Equipment.....	1.6
Specifications.....	1.7
Defibrillator .....	1.7
Noninvasive Pacing (TEC-5531 Only) .....	1.9
External Paddle (ND-552VB/VE/VK) .....	1.9
Battery .....	1.9
Clock Accuracy .....	1.9
Environment.....	1.9
Safety.....	1.9
Monitor.....	1.10
ECG Amplifier.....	1.10
Recorder.....	1.10
Rhythm Recognition Detector.....	1.11
Power Requirements .....	1.11
Dimensions and Weight.....	1.11
Electromagnetic Compatibility .....	1.11
Electromagnetic Emissions .....	1.12
Electromagnetic Immunity .....	1.12
Recommended Separation Distances between Portable and Mobile RF Communications Equipment.....	1.15
Panel Description.....	1.16
Front Panel .....	1.16
Top Panel (TEC-5531 series Only) .....	1.17
External Paddles.....	1.18
Left Side Panel .....	1.18
Rear Panel.....	1.19
Composition.....	1.20
Standard Components.....	1.20
Options .....	1.22

Board/Unit Location .....	1.24
Block Diagram.....	1.25

**Section 2    *Troubleshooting* ..... 2.1**

How to Troubleshoot .....	2.2
Error Code .....	2.3
Defibrillation.....	2.4
Operation Panel.....	2.5
Communication.....	2.6
Data Error .....	2.7
Pacing (TEC-5531 series Only) .....	2.7
Message .....	2.8
Troubleshooting.....	2.9
General.....	2.9
Defibrillation.....	2.10
Monitoring.....	2.10
Recording .....	2.12
Battery .....	2.12
Pacing (TEC-5531 series Only) .....	2.13

**Section 3    *Disassembly* ..... 3.1**

Before You Begin.....	3.2
Warnings, Cautions and Notes .....	3.2
Required Tools.....	3.3
Connection Diagram .....	3.4
Removing the Lower Casing.....	3.6
Removing the Paddles.....	3.6
Removing the Battery Pack .....	3.6
Removing the Lower Casing.....	3.7
Removing the CPU Board and Mother Board.....	3.8
Removing the CPU Board .....	3.8
Removing the Mother Board.....	3.9
Removing the Front Chassis.....	3.10
Removing the Side Casing .....	3.11
Removing the Recorder Unit .....	3.12
Removing the Biphasic HV Unit.....	3.13
Removing the HV Capacitor .....	3.15
Attaching the HV Capacitor .....	3.16
Removing the AC/DC Unit .....	3.17
Removing the Test Load Board.....	3.18
Removing the Pacer Board (TEC-5531 series Only) .....	3.19
Removing the LCD Unit .....	3.20
Removing the Key Board .....	3.21
Removing the Energy/Mode Select Control Knob .....	3.21
Removing the Speaker .....	3.22
Removing the Paddle Lock Springs.....	3.23
Removing the AC SOURCE Socket.....	3.24

**Section 4 Maintenance ..... 4.1**

General ..... 4.2

- Daily Checks ..... 4.2
- Monthly Checks ..... 4.2

System Maintenance Screen ..... 4.4

- Calling Up the System Maintenance Screen ..... 4.4
- About the Menu Items ..... 4.5
  - System Maintenance Screen Flowchart ..... 4.6
  - Default Settings ..... 4.7
- Flash Save Procedure ..... 4.8
- Configuration Screen ..... 4.9
- Adjust AD Screen ..... 4.10
  - Adjust ECG A/D Screen ..... 4.11
  - Adjust HV AD Screen ..... 4.13
  - Adjust Battery AD Screen ..... 4.16
  - Paddle Contact A/D Screen ..... 4.17
- Check Hardware Screen ..... 4.18
  - Check Key Screen ..... 4.18
  - Check LED Screen ..... 4.20
  - Check LCD Screen ..... 4.20
  - Check Recorder Screen ..... 4.20
  - Check Time Constant Screen ..... 4.21
  - Check Memory Screen ..... 4.22
  - Check Buzzer Screen ..... 4.22
  - Check Voice Screen ..... 4.23
  - Check ECG Frequency Screen ..... 4.24
- A/D View Screen ..... 4.25
- Operation Time Screen ..... 4.25
- Version Up Screen ..... 4.26
- Debug Mode Screen ..... 4.26
  - Check String Screen ..... 4.27
  - Memory Dump Screen ..... 4.27

Periodic Replacement Schedule ..... 4.28

Maintenance Check Sheet ..... 4.29

**Section 5 Replaceable Parts List ..... 5.1**

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$