

AXIAL-FLOW® 5130
AXIAL-FLOW® 6130
AXIAL-FLOW® 7130
Tier 4a
Combine

SERVICE MANUAL

Part number 84564628

1st edition English

October 2012





SERVICE MANUAL

**AXIAL-FLOW 5130 [YCG007403 -] , AXIAL-FLOW 5130 [YCG008901 -] ,
AXIAL-FLOW 6130 [YCG007403 -] , AXIAL-FLOW 6130 [YCG008901 -] ,
AXIAL-FLOW 7130 [YCG007403 -] , AXIAL-FLOW 7130 [YCG008901 -]**

Contents

INTRODUCTION

Engine.....	10
Engine and crankcase.....	10.001
Air cleaners and lines.....	10.202
Aftercooler.....	10.310
Engine cooling system	10.400
Rotary screen.....	10.418
Main gearbox and drive	14
Main gearbox and drive	14.100
Transmission.....	21
Mechanical transmission	21.114
Gearbox internal components	21.145
Differential	21.182
Front axle system	25
Final drives	25.310
Rear axle system.....	27
Powered rear axle	27.100
Final drive hub, steering knuckles, and shafts	27.124
Hydrostatic drive.....	29
Transmission and steering hydrostatic control	29.100
Hydrostatic transmission	29.202
Reservoir, cooler, and lines.....	29.204
Pump and motor components	29.218
Brakes and controls	33
Parking brake / Parking lock.....	33.110
Hydraulic service brakes	33.202

Hydraulic systems.....	35
Hydraulic systems	35.000
Pump control valves	35.102
Variable displacement pump	35.106
Auxiliary hydraulic pump and lines	35.220
Reservoir, cooler, and filters	35.300
Regulated/Low pressure system	35.322
Main control valve	35.359
Header/Attachment height system	35.410
Grain tank unload system	35.440
Crop processor system.....	35.536
Header reverser drive	35.760
Chaff spreader control.....	35.796
Steering.....	41
Steering control.....	41.101
Tie rods	41.106
Hydraulic control components.....	41.200
Pump	41.206
Wheels.....	44
Front wheels.....	44.511
Cab climate control	50
Cab pressurizing system	50.300
Electrical systems	55
Electrical system	55.000
Fuel injection system	55.010
Engine cooling system	55.012
Engine oil system.....	55.013
Engine intake and exhaust system.....	55.014
Engine control system.....	55.015

Parking brake electrical system	55.031
Hydraulic system control	55.036
Heating, Ventilation, and Air-Conditioning (HVAC) control system	55.050
Harnesses and connectors	55.100
Engine starting system	55.201
Cold start aid	55.202
Alternator	55.301
Battery	55.302
External lighting switches and relays	55.405
Warning indicators, alarms, and instruments	55.408
Feeding control system	55.421
Cleaning control system	55.423
Harvest material flow control system	55.426
Cab controls	55.512
Wiper/Washer system	55.518
Cab harvesting controls	55.520
Ground speed control	55.610
Threshing electrical control	55.628
Electronic modules	55.640
Cab header controls	55.661
Header height control	55.662
Sieve electric control	55.834
Rotary separator control	55.836
Selective Catalytic Reduction (SCR) electrical system	55.988
FAULT CODES	55.DTC
Attachments/Headers	58
Attachment/Header reel control system	58.105
Product feeding	60
Floating roll, feed chain, and drive	60.105

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$