



# **BOMAG**

**FAYAT GROUP**

## **Service - Manual**

---

**BW 211 D-4 / PD-4**

---

**BW 213 D-4 / PD-4**

---

**BW 214 D-4**

---

S/N 101 583 09 ....> S/N 101 583 10 ....>  
S/N 101 583 08 ....> S/N 101 583 13 ....>  
S/N 101 583 42 ....> S/N 101 584 15 ....>



---

**Single drum roller**

---



<b>General</b>	<b>9</b>
1.1 Introduction	10
1.2 Safety regulations	11
1.3 General repair instructions	16
1.4 Tightening torques	28
<b>Technical data</b>	<b>33</b>
2.1 Technical data	34
<b>Maintenance</b>	<b>43</b>
3.1 General notes on maintenance	44
3.2 Fuels and lubricants	45
3.3 Table of fuels and lubricants	48
3.4 Running-in instructions	49
<b>Caddy wiring diagrams</b>	<b>51</b>
4.1 Understanding circuit diagrams	52
4.2 Circuit symbols in the circuit diagram	57
4.3 Identification of switch blocks in the Caddy wiring diagram	58
4.4 Designation of components in the wiring diagram	59
4.5 Terminal designations in wiring diagram	60
<b>E-Plan wiring diagrams</b>	<b>63</b>
5.1 Understanding wiring diagrams	64
5.2 Circuit symbols in the circuit diagram	73
5.3 Identification of switch blocks in the wiring diagram	76
5.4 Designation of components in the wiring diagram	77
5.5 Terminal designations in wiring diagram	78
<b>Electrics</b>	<b>81</b>
6.1 Battery ground and analog ground	82
6.2 Current and voltage	82
6.3 Pulse Width Modulation (PWM)	85
6.4 Resistance	87
6.5 Series / parallel connection	89
6.6 Ohm's law	91
6.7 Electrical energy	91
6.8 Formula diagram	92
6.9 Metrology	93
6.10 Diodes, relays, fuses	97
6.11 Telemecanique switch	100
6.12 Plug connectors	102
6.13 Magnetic coil plug	102
6.14 Deutsch plug, series DT and DTM	104
6.15 Plugs and terminals in spring clamping technology	109
6.16 Acceleration transducer	113
6.17 Proximity switches	114
6.18 Level sensor in diesel tank (R03)	116
6.19 Differential pressure switch for hydraulic oil filter, B21	117
6.20 Oil pressure switch, B06	118
6.21 Air filter vacuum switch, B03	119

## Table of Contents

---

6.22	Sensor, water in fuel filter, B124	120
6.23	Charge control light (H08), operating hour meter (P00)	121
6.24	Float switch, coolant tank, B55	122
6.25	Coolant temperature switch, B30	123
6.26	Disassembling and assembling the coolant temperature switch	124
6.27	Boost fuel solenoid valve	125
6.28	Engine solenoid to shut down the engine, Y13	126
6.29	Electric throttle control	129
6.30	Fuel preheating, R79	130
6.31	Heating flange on engine, R19	131
6.32	Checking the heating flange control	133
6.33	Engine monitoring	135
6.34	Batteries	139
6.35	Battery service	143
6.36	Main battery fuse	144
6.37	Starting with jump wires	144
6.38	Generator	145
6.39	Replacing the voltage regulator	154
6.40	Electric starter	156
6.41	Disassembling and assembling the starter	161
6.42	Overview of electric components	163
6.43	Operator's stand, old design	179
6.44	Operator's stand, new design	181
6.45	Cabin	182
6.46	Fuses, old design	183
6.47	Fuses, new design	184
6.48	Electronic control units	185
6.49	Checking the voltage supply for the control unit	188
6.50	Diagnostics concept	196
<b>Electronic modules</b>		<b>199</b>
7.1	BEM, BOMAG Evib-meter	201
7.2	Electrics module A68	265
7.3	Electric module K04	273
7.4	Electric module A72, old design	277
7.5	Electric module A108	283
<b>Speedometer Module</b>		<b>287</b>
8.1	Speedometer module	288
<b>582 502 15 dust protection / 582 502 16 gasket</b>		<b>291</b>
9.1	Assembling the dust protection	292
<b>Hydraulics</b>		<b>297</b>
10.1	Hydraulic circuit	298
10.2	Connection overview	300
10.3	Travel pump 075	302
10.4	Vibration pump 42R 041	306
10.5	Axial piston swash plate principle / pump	309
10.6	Troubleshooting axial piston pumps	311
10.7	Travel motor 51 C/D 110	314

10.8	Trouble shooting, variable displacement axial piston motor	316
10.9	Drum drive motor MSE 02	318
10.10	Vibration motor A10FM 45	321
10.11	Axial piston swash plate principle / motor	322
10.12	External gear pumps	324
10.13	Travel circuit	326
10.14	Stopping the machine, operating the parking brake	330
10.15	Towing in case of an engine failure	330
10.16	Adjust the parking brake	332
10.17	Vibration circuit	333
10.18	Steering circuit	338
10.19	Check the hydraulic oil level	344
10.20	Changing hydraulic oil and breather filter	344
10.21	Changing the hydraulic oil filter	345
10.22	Changing the bypass filter	346
<b>Tests and adjustments</b>		<b>347</b>
11.1	Special tools, tests and adjustments	348
11.2	Checking the rotation speeds	352
11.3	Checking / adjusting the neutral positions of the travel pump	354
11.4	Pressure tests in the travel circuit	356
11.5	Checking / adjusting the vibrator shaft speeds	358
11.6	Pressure measurements in the vibration circuit	359
11.7	Check the leakage rate of the vibration motor	360
11.8	Pressure test in steering circuit	361
<b>Flushing and bleeding</b>		<b>363</b>
12.1	Special tools for flushing	364
12.2	Flushing - general	369
12.3	Flushing schematic travel circuit (distribution travel pump)	371
12.4	Flushing the travel circuit (travel pump distribution)	373
12.5	Flushing schematic travel circuit (distribution axle motor)	379
12.6	Flushing the travel circuit (axle motor distribution)	384
12.7	Flushing schematic for vibration drive	389
12.8	Flushing the vibration circuit	390
12.9	Bleeding the travel circuit	394
12.10	Bleeding the vibration circuit	396
<b>Engine</b>		<b>399</b>
13.1	Diesel engine	400
13.2	Fuel filter and check valve	408
13.3	Check, clean the water separator	411
13.4	Change the fuel pre-filter cartridge	411
13.5	Change the fuel filter cartridge	413
13.6	Changing engine oil and oil filter cartridges	413
13.7	Removing and installing the thermostat	415
13.8	Checking the thermostat in disassembled state	416
13.9	Change the coolant	417
13.10	Checking the anti-freeze concentration	418
13.11	Checking / replacing the ribbed V-belt	419
13.12	Combustion air filter service	420

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$