

**1150M**  
**Stage IIIB**  
**Crawler Dozer**

*PIN NGC105100 and above*

**SERVICE MANUAL**

Part number 48080034

1<sup>st</sup> edition English

April 2017

© 2017 CNH Industrial America LLC. All Rights Reserved.

**CASE**  
CONSTRUCTION



## **SERVICE MANUAL**

**1150M Long Track (LT) - Tier 4B (final) and Stage IIIB [NGC105100 - ]  
1150M Wide Track (WT) / Low Ground Pressure (LGP) - Tier 4B (final) and  
Stage IIIB [NGC105100 - ]**

# Link Product / Engine

---

<b>Product</b>	<b>Market Product</b>	<b>Engine</b>
1150M Long Track (LT) - Tier 4B (final) and Stage IIIB [NGC105100 - ]	Europe	F4HFE613F*A002
1150M Wide Track (WT) / Low Ground Pressure (LGP) - Tier 4B (final) and Stage IIIB [NGC105100 - ]	Europe	F4HFE613F*A002

# Contents

---

## INTRODUCTION

<b>Engine</b> .....	<b>10</b>
[10.001] Engine and crankcase .....	10.1
[10.202] Air cleaners and lines .....	10.2
[10.206] Fuel filters .....	10.3
[10.216] Fuel tanks .....	10.4
[10.304] Engine lubrication system.....	10.5
[10.310] Aftercooler.....	10.6
[10.400] Engine cooling system .....	10.7
[10.414] Fan and drive .....	10.8
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment.....	10.9
<b>Hydrostatic drive</b> .....	<b>29</b>
[29.218] Pump and motor components.....	29.1
<b>Brakes and controls</b> .....	<b>33</b>
[33.110] Parking brake or parking lock .....	33.1
[33.202] Hydraulic service brakes .....	33.2
<b>Hydraulic systems</b> .....	<b>35</b>
[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2
[35.104] Fixed displacement pump.....	35.3
[35.105] Charge pump.....	35.4
[35.359] Main control valve .....	35.5
[35.741] Dozer blade cylinders .....	35.6
<b>Tracks and track suspension</b> .....	<b>48</b>
[48.130] Track frame and driving wheels .....	48.1
[48.100] Tracks .....	48.2

[48.134] Track tension units .....	48.3
[48.138] Track rollers .....	48.4
[48.140] Dropbox and final drive .....	48.5
[48.AAA] Tracks and track suspension generic sub-group .....	48.6
<b>Cab climate control .....</b>	<b>50</b>
[50.100] Heating .....	50.1
[50.104] Ventilation .....	50.2
[50.200] Air conditioning .....	50.3
<b>Electrical systems .....</b>	<b>55</b>
[55.000] Electrical system .....	55.1
[55.011] Fuel tank system .....	55.2
[55.014] Engine intake and exhaust system.....	55.3
[55.015] Engine control system.....	55.4
[55.030] Service brake electrical system .....	55.5
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system.....	55.6
[55.100] Harnesses and connectors.....	55.7
[55.201] Engine starting system .....	55.8
[55.202] Cold start aid .....	55.9
[55.301] Alternator.....	55.10
[55.302] Battery.....	55.11
[55.408] Warning indicators, alarms, and instruments .....	55.12
[55.512] Cab controls.....	55.13
[55.518] Wiper and washer system.....	55.14
[55.988] Selective Catalytic Reduction (SCR) electrical system .....	55.15
[55.DTC] FAULT CODES.....	55.16
<b>Dozer blade and arm.....</b>	<b>86</b>
[86.110] Dozer blade .....	86.1
[86.124] Dozer pushbeams and struts .....	86.2

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$