

**621F  
TIER 4  
Wheel Loader**

**Service Manual**

Print No. 47387703

**CASE**  
CONSTRUCTION

**621F**

**Loader**

47387703

Use for Repair Manual



# 621F Wheel Loader Repair Manual 47387703 Table of Contents

Description	Section No.
<b>General</b> <span style="float: right;"><b>Tab 1</b></span>	
Section Index - General	
General Torque Specifications	1001
Fluids and Lubricants	1002
Metric Conversion Chart	1003
<b>Engines</b> <span style="float: right;"><b>Tab 2</b></span>	
Section Index - Engines	
Engine and Radiator Removal and Installation	2000
Stall Tests	2002
After Cooler	2003
SCR System Sensors	2020
SCR Catalyst	2030
Engine Intake Temperature/Humidity Sensor	2040
DEF/ADBLUE Heater Control Valve	2050
DEF/ADBLUE DNOx Supply Module	2060
DEF/ADBLUE Dosing Injector	2070
DEF/ADBLUE Supply Tank	2080
DEF/ADBLUE Supply Tank Level and Temperature Sensor/Pick-up and Heater	2090
DEF/ADBLUE Supply Filters	2100
For Engine Repair, See the Engine Service Manual (sold separately)	84392428
<b>Fuel System</b> <span style="float: right;"><b>Tab 3</b></span>	
Section Index - Fuel System	
For Fuel System Repair, See the Engine Service Manual (sold separately)	84392428
<b>Electrical</b> <span style="float: right;"><b>Tab 4</b></span>	
Section Index - Electrical	
Removal and Installation of Starter and Alternator	4001
Electrical Specifications and Troubleshooting	4002
Batteries	4003
Instrument Cluster	4005

**621F Wheel Loader  
Repair Manual  
47387703  
Table of Contents**

Description	Section No.
<b>Steering</b>	<b>Tab 5</b>
Section Index - Steering	
Removal and Installation of Steering Components	5001
Steering Specifications, Pressure Checks, and Troubleshooting	5002
Steering Cylinders	5005
Center Pivot	5006
Auxiliary Steering Motor and Pump	5008
Joystick Steering System (JSS)	5009
<b>Power Train</b>	<b>Tab 6</b>
Section Index - Power Train	
Removal and Installation of Power Train Components	6001
Transmission Specifications, Pressure Checks, and Troubleshooting	6002
4 Speed Transmission	6003
Front Axle	6004
Rear Axle	6004
Drive Shafts, Center Bearing, and Universal Joints	6005
Wheels and Tires	6006
<b>Brakes</b>	<b>Tab 7</b>
Section Index - Brakes	
Removal and Installation of Brake Components	7001
Hydraulic Brake Troubleshooting	7002
Brake Pump	7003
Brake Accumulators	7004
Parking Brake	7008
<b>Hydraulics</b>	<b>Tab 8</b>
Section Index - Hydraulics	
How to Read Hydraulic Schematics	8000
Removal and Installation of Hydraulic Components	8001
Hydraulic Specifications, Troubleshooting, and Pressure Checks	8002
Cleaning the Hydraulic System	8003
Loader Control Valve	8005

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$