

CASE Engines 668T/M2 and 668T/E2

Service Manual

Bur 6-47950NA




REPAIR MANUAL FOR ENGINES


F4GE0684F - (668T/M2)

F4HE0684J - (668T/E2)

6-47950NA

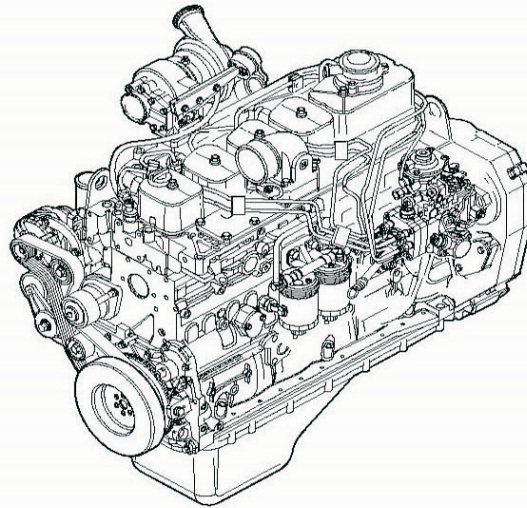

F4GE0684F

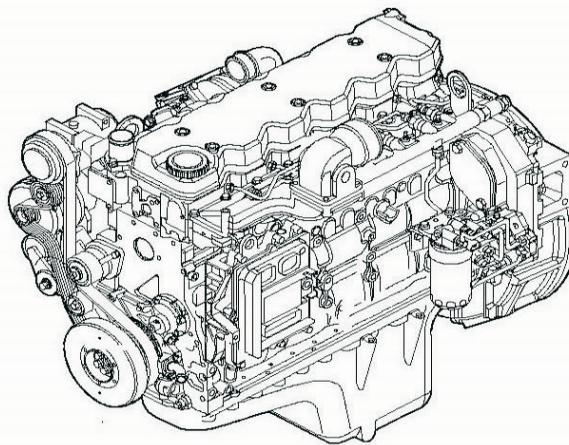

F4HE0684J

Every information, illustration and specification contained in the present manual is based on the most recent information available at the time of printing.

CNH America LLC reserves the right to modify the text at any time without prior communication.

INTRODUCTION


TO THE READER

- This manual was written for a skilled technician and contains all the technical information needed to repair this vehicle.
- Read this manual carefully for the information concerning repairing operations.

FURTHER REFERENCES**PAGE NUMBER**

- Every page carries a number on the top right corner. Every page contains the following information:

Example:: T 1 - 2 - 3

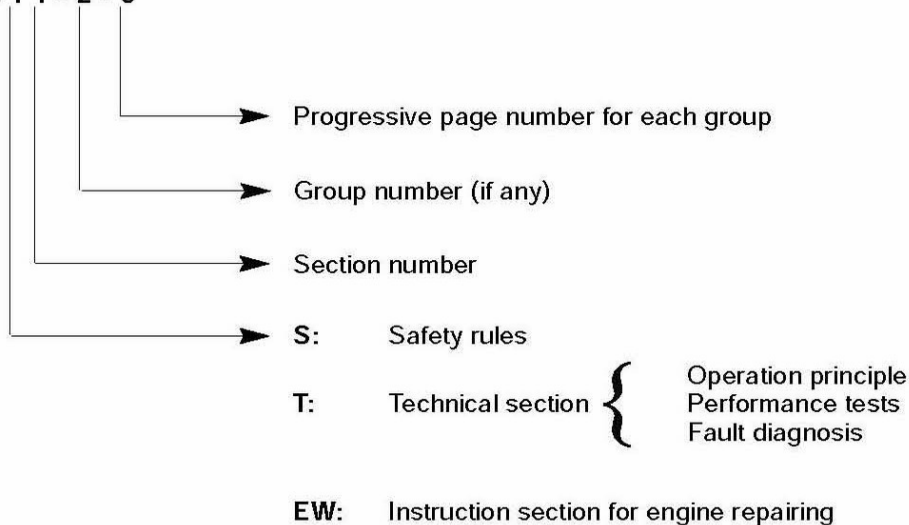**SYMBOLS**

This manual contains safety warning symbols and indications referring to possible injuries or vehicle damages.



This symbol regards safety.

Use great care when you see this symbol because possible injuries to the personnel may occur. Strictly observe the precautions marked with this symbol.

The safety warning symbol is used also to draw attention on the weight of a component or an element. Make sure you are always using the right equipment and lifting techniques when handling heavy loads, in order to prevent injuries or damages.

ENGINES

F4GE0684F - F4HE0684J OVERHAUL



INDEX

Engine coding	EW-3-4	Engine F4GE0684F cooling	EW-3-43
Main engine features	EW-3-5	Engine F4HE0684J cooling	EW-3-44
Assembling play / specifications ...	EW-3-8	Water pump	EW-3-45
Tightening torque	EW-3-14	Engine F4GE0684F mechanic	
Tools	EW-3-15	injection feeding system	EW-3-46
Graphic indications and symbols ...	EW-3-16	Fuel prefilter	EW-3-46
General remarks	EW-3-17	Fuel filters	EW-3-46
Engine F4GE0684F	EW-3-17	Mechanic fuel pump	EW-3-47
Engine F4HE0684J	EW-3-18	Engine F4GE0684F Injection	
Description of main mechanic		assembly	EW-3-48
engine components	EW-3-19	Engine F4HE0684J fuel supply	
Crankcase	EW-3-19	system	EW-3-49
Drive shaft	EW-3-20	Engine F4HE0684J fuel system	
Drive shaft seal rings	EW-3-20	diagram	EW-3-50
Connecting rods	EW-3-21	Fuel prefilter	EW-3-51
Pistons	EW-3-22	Fuel filter	EW-3-52
Distributing shaft	EW-3-23	Mechanical feed pump	EW-3-53
Engine F4GE0684F valve control	EW-3-24	Normal operating condition	EW-3-53
Engine F4HE0684J valve control	EW-3-25	Outlet overpressure condition	EW-3-53
Engine F4GE0684F cylinder head	EW-3-26	Bleed conditions	EW-3-54
Engine F4HE0684F cylinder head	EW-3-27	High pressure pump	EW-3-54
Engine F4GE0684F valves and valve		Operating principle	EW-3-56
seats	EW-3-28	Engine F4GE0684F bench-overhaul	EW-3-59
Engine F4HE0684J valves and valve		Disassembling the engine	EW-3-59
seats	EW-3-29	Replacing the seal ring	EW-3-62
Engine F4GE0684F valve guides	EW-3-30	Removing the injection pump	EW-3-62
Engine F4HE0684J valve guides	EW-3-31	Removing the rocker arm assembly ...	EW-3-65
Valve control bridges		Repair work on cylinder cluster	EW-3-67
F4HE0684J	EW-3-31	Checks and measurements	EW-3-67
Grinding cylinder head valve seats F4HE0684J	EW-3-31	Checking the surface supporting the	
Engine flywheel	EW-3-32	head on the cylinder cluster	EW-3-68
Engine F4GE0684F auxiliary component		Valve gear	EW-3-69
drive	EW-3-33	Distributing shaft	EW-3-69
Engine F4HE0684J auxiliary component		Checking the eccentric lift and the pin	
drive	EW-3-34	alignment	EW-3-69
Engine F4GE0684F Lubrication	EW-3-35	Bushings	EW-3-70
Engine F4HE0684J Lubrication	EW-3-36	Replacing the bushings	EW-3-71
Heat exchanger	EW-3-37	Tappets	EW-3-71
Oil pump	EW-3-38	Mounting the tappets – Distributing shaft	EW-3-71
Engine F4GE0684F oil sump	EW-3-39	Drive shaft	EW-3-72
Engine F4HE0684J oil sump	EW-3-40	Measuring the journals and crankpins .	EW-3-72
Engine F4GE0684F oil vapour		Replacing the oil pump drive gears	EW-3-75
recirculation	EW-3-41	Mounting the main bearings	EW-3-75
Engine F4HE0684J oil vapour		Measuring the journal assembling play	EW-3-75
recirculation	EW-3-42	Checking the drive shaft shoulder play .	EW-3-76
		Connecting rod-piston assembly ...	EW-3-77

INDEX

Pistons	EW-3-78	Cam lift check and pin alignment check	EW-3-113
Measuring the piston diameter	EW-3-78	Bushes	EW-3-113
Piston pins	EW - 3 - 79	Head face check on the cylinder group	EW-3-115
Conditions for correct pin/piston matching	EW-3-79	Timing system	EW-3-115
Piston rings	EW-3-79	Camshaft	EW-3-115
Connecting rods	EW-3-80	Bush replacement	EW-3-116
Bushings	EW-3-81	Tappets	EW-3-116
Checking the connecting rods	EW-3-81	Fitting tappets – camshaft	EW-3-116
Checking the torsion	EW-3-81	Output shaft	EW-3-117
Checking the flexion	EW-3-81	Measuring journals and crankpins	EW-3-117
Mounting the connecting rod-piston assembly	EW-3-82	Replacing oil pump control gear	EW-3-119
Connecting rod-piston match	EW-3-82	Fitting main bearings	EW-3-119
Mounting the piston rings	EW-3-82	Finding journal clearance	EW-3-119
Mounting the connecting rod/piston assemblies in the cylinder liners	EW-3-83	Checking output shaft shoulder clearance	EW-3-120
Measuring the crankpin assembling play	EW-3-83	Connecting rod - piston assembly	EW-3-120
Checking piston protrusion	EW-3-84	Pistons	EW-3-121
Valve gear	EW-3-85	Measuring piston diameter	EW-3-121
Distribution gearbox case	EW-3-85	Piston pin diameter	EW - 3 - 122
Valve timing	EW-3-85	Conditions for proper pin-piston coupling	EW-3-122
Injection pump – 1st phase	EW-3-86	Split rings	EW-3-122
Timing	EW-3-86	Connecting rods	EW-3-123
Flywheel cover case	EW-3-87	Bushes	EW-3-123
Engine flywheel	EW-3-88	Checking torsion	EW-3-124
Replacing the engine flywheel ring gear	EW-3-88	Checking connecting rods	EW-3-124
Injection pump – 2nd phase	EW-3-89	Checking bending	EW-3-124
Mounting the injection pump – 2nd phase	EW-3-89	Fitting connecting rod-piston assembly	EW-3-124
Mounting the oil and water pumps	EW-3-89	Connecting rod-piston coupling	EW-3-124
Mounting the oil sump	EW-3-90	Fitting split rings	EW-3-125
Mounting the water / oil heat exchanger	EW-3-91	Fitting connecting rod-piston assembly into cylinder barrels	EW-3-125
Cylinder head	EW-3-92	Finding crankpin clearance	EW-3-126
Removing the valves	EW-3-92	Checking piston protrusion	EW-3-127
Checking the cylinder head supporting surface	EW-3-93	Timing	EW-3-128
Checking the cylinder head water seal	EW-3-93	Flywheel housin	EW-3-128
Valves	EW-3-93	Engine flywheel	EW-3-129
Valve descaling, check and grinding	EW-3-94	Replacing engine flywheel ring gear	EW-3-129
Checking the play between the valve stem, valve guide and valve centring	EW-3-94	Cylinder head	EW-3-133
Valve guide	EW-3-94	Removing the valves	EW-3-133
Valve seats	EW-3-94	Removing carbon deposits, checking and grinding valves	EW-3-135
Valve seat reconditioning – replacement	EW-3-94	Checking cylinder head supporting surface	EW-3-134
Valve springs	EW-3-96	Valves	EW-3-135
Mounting the cylinder head	EW-3-96	Removing carbon deposits, checking and grinding valves	EW-3-135
Reattaching the cylinder head	EW-3-96	Checking clearance between valve stem and valve guide and valve centering	EW-3-135
Rocker arm assembly	EW-3-97	Valve guide	EW-3-135
Mounting the injectors	EW-3-98	Valve seats	EW-3-136
Replacing the injectors	EW-3-101	Regrinding – replacing the valve seats	EW-3-136
Removal	EW-3-101	Valve springs	EW-3-137
Reassembling	EW-3-101	Fitting cylinder head	EW-3-138
Adjusting the tappets	EW-3-103	Refitting the cylinder head	EW-3-138
Rocker arm removal/reassembling	EW-3-103	Fitting injectors	EW-3-139
Removal	EW-3-103	Rods	EW-3-140
Reassembling	EW-3-103	Rocker assembly	EW-3-140
Valve timing	EW-3-103	Tappet clearance adjustment	EW-3-141
Removal of EDC7 components		Harness support	EW - 3 -143
F4HE0684J	EW-3-104		
Disassembly of the engine	EW-3-104		
Repair interventions	EW-3-113		
Cylinder group	EW-3-113		
Controls and measurements	EW-3-113		

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$