

821E **Wheel Loader**

Service Manual

Part Number

71114025

1st Edition

English 02/2016

CASE
CONSTRUCTION



SERVICE MANUAL

**821E Tier3 Z-bar. [N7AE13000 -]
821E ZBAR SUGAR**

Link Product / Engine

Product	Market Product	Engine
821E Tier3 Z-bar. [N7AE13000 -]	Latin America	F4HE9684E*J100
821E ZBAR SUGAR	Latin America	F4HE9684E*J100

Contents

INTRODUCTION

Engine	10
[10.001] Engine and crankcase	10.1
[10.400] Engine cooling system	10.2
[10.310] Aftercooler.....	10.3
Transmission	21
[21.113] Powershift transmission	21.1
[21.135] Powershift transmission external controls.....	21.2
[21.155] Powershift transmission internal components.....	21.3
[21.145] Gearbox internal components.....	21.4
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
Rear axle system	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential	27.2
[27.120] Planetary and final drives	27.3
Brakes and controls	33
[33.202] Hydraulic service brakes	33.1
Hydraulic systems	35
[35.000] Hydraulic systems.....	35.1
[35.359] Main control valve	35.2
[35.701] Front loader arm hydraulic system	35.3
Steering	41
[41.910] Auxiliary steering	41.1

Wheels	44
[44.511] Front wheels	44.1
Cab climate control	50
[50.200] Air conditioning	50.1
Electrical systems	55
[55.000] Electrical system	55.1
[55.100] Harnesses and connectors	55.2
[55.015] Engine control system	55.3
[55.201] Engine starting system	55.4
[55.301] Alternator	55.5
[55.302] Battery	55.6
[55.202] Cold start aid	55.7
[55.011] Fuel tank system	55.8
[55.012] Engine cooling system	55.9
[55.519] Cab brake controls	55.10
[55.030] Service brake electrical system	55.11
[55.031] Parking brake electrical system	55.12
[55.512] Cab controls	55.13
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls	55.14
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system	55.15
[55.047] Steering control system	55.16
[55.524] Cab controls (Lift arm, Boom, Dipper, Bucket)	55.17
[55.415] Loader arm and bucket control system	55.18
[55.518] Wiper and washer system	55.19
[55.510] Cab or platform harnesses and connectors	55.20
[55.408] Warning indicators, alarms, and instruments	55.21
[55.DTC] FAULT CODES	55.22
Platform, cab, bodywork, and decals	90

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$