

**CX210B  
CX230B  
CX240B**  
**CX210B Forestry Machine**  
Crawler Excavator

**SERVICE MANUAL**

Part number 47915916

English

July 2015

© 2015 CNH Industrial Italia S.p.A. All Rights Reserved.

**CASE**  
CONSTRUCTION

# CRAWLER EXCAVATOR CX210B-CX230B-CX240B CRAWLER EXCAVATOR CX210B Forestry machine SERVICE MANUAL

## TABLE OF CONTENTS

DIVISION/SECTION	SECTION N°
<b>1 GENERAL INFORMATION</b>	
Safety, general information and torque specifications.....	1001
Specifications and special torque settings.....	1002
Specifications and special torque settings (CX210B Forestry machine).....	1002
<b>2 ENGINE</b>	
Removal and installation of the engine.....	2000
Fuel-cooler, engine inter-cooler, radiator and oil-cooler.....	2001
Removal and installation of the turbo charger.....	2004
Removal and installation of EGR cooler and EGR valve.....	2005
Removal and installation of the engine hood.....	2006
Engine specifications.....	*
Disassembly and assembly of the engine.....	*
<b>3 FUEL SYSTEM</b>	
Removal and installation of the fuel tank.....	3001
Removal and installation of the supply pump and common rail.....	3004
Removal and installation of the injectors.....	3005
Fuel engine system.....	*
<b>4 ELECTRICAL SYSTEM</b>	
Service connector kit.....	4000
Electrical and engine functions and service support.....	4001
Removal and installation of the starter motor.....	4004
Removal and installation of the alternator.....	4005
Electrical equipment and electrical circuit diagrams.....	4020
Electrical equipment and electrical circuit diagrams (CX210B Forestry machine).....	4020
Engine error code (DTC).....	4021
Main body error code (DTC).....	4022
Troubleshooting, 4HK1 engine.....	4023
<b>5 UNDERCARRIAGE</b>	
Removal and installation of tracks.....	5001
Upper and lower rollers.....	5003
Take-up roller.....	5005
<b>6 DRIVE TRAIN</b>	
Removal and installation of the drive motor and final drive transmission.....	6001
Disassembly and assembly of the drive motor and final drive transmission.....	6002
Removal and installation of the swing motor and swing reduction gear, CX210B-CX230B.....	6003
Removal and installation of the swing motor and swing reduction gear, CX240B.....	6003
Disassembly and assembly of the swing reduction gear, CX210B-CX230B ...	6004
Disassembly and assembly of the swing reduction gear, CX240B.....	6004
<b>7 UNDERCARRIAGE HYDRAULICS</b>	

\* Consult the Engine Service Manual

**8 UPPERSTRUCTURE HYDRAULICS**

Specifications, troubleshooting, inspections and hydraulic pressure settings .....	8001
hydraulic pressure settings (CX210B Forestry machine).....	8001
Removal and installation of the hydraulic reservoir .....	8002
Removal and installation of the main hydraulic pump.....	8003
Removal and installation of the main hydraulic control valve.....	8004
Removal and installation of the attachment cylinders.....	8005
Removal and installation of the hydraulic swivel .....	8006
Removal and installation of the pilot function blocks.....	8007
Disassembly and assembly of the main hydraulic pump .....	8010
Disassembly and assembly of the main hydraulic pump, CX210B NLC.....	8010
Disassembly and assembly of the main hydraulic control valve .....	8011
Disassembly and assembly of the attachment cylinders .....	8012
Disassembly and assembly of the attachment cylinders (CX210B Forestry machine .....	8012
Disassembly and assembly of the hand control levers .....	8013
Disassembly and assembly of the foot control pedals.....	8014
Disassembly and assembly of the cushion control valve.....	8016
Removal and installation of the safety valve .....	8017
Disassembly and assembly of the swing motor, CX210B-CX230B .....	8019
Disassembly and assembly of the swing motor, CX240B.....	8019
Hydraulic functions .....	8020
Hydraulic component functions.....	8030

**9 UPPERSTRUCTURE**

Removal and installation of the counterweight .....	9002
Removal and installation of the boom, dipper and bucket .....	9003
Removal and installation of the seat.....	9004
Removal and installation of the cab and cab equipment .....	9005
Air conditioner functions and troubleshooting.....	9006
Air conditioning unit .....	9007
Air conditioning components.....	9009
Large size hydraulic schematics, CX210B.....	Pocket
Large size hydraulic schematics, CX210B LR .....	Pocket
Large size hydraulic schematics, CX210B-CX230B NLC & 2PC .....	Pocket
Large size hydraulic schematics, CX240B.....	Pocket
Large size hydraulic schematics, CX240B LR .....	Pocket
Large size electrical schematics CX210B Forestry Machine.....	Pocket
Large size electrical schematics CX210B Forestry Machine.....	Pocket

NOTE: CNH Industrial Italia S.p.A. reserves the right to make changes in the specification and design of the machine without prior notice and without incurring any obligation to modify units previously sold.

The description of the models shown in this manual has been made in accordance with the technical specifications known as of the date of design of this document.

All data given in this manual is subject to production variations. Dimensions and weights are provided with approximate values and the machine fitting shown in the illustrations may not correspond with standard models. For precise information on specific machine models and versions, please contact your CASE dealer.

Reproduction or translation, even partial, is prohibited without written authorization from CNH Industrial Italia S.p.A.

# Section

# 1001

**SAFETY, GENERAL INFORMATION  
AND TORQUE SPECIFICATIONS**

## TABLE OF CONTENTS

GENERAL INFORMATION .....	3
SAFETY.....	4
STANDARD TORQUE DATA FOR CAP SCREWS AND NUTS.....	6



**WARNING :** *This symbol is used in this manual to indicate important safety messages. Whenever you see this symbol, carefully read the message that follows, as there is a risk of serious injury.*

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$