



1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

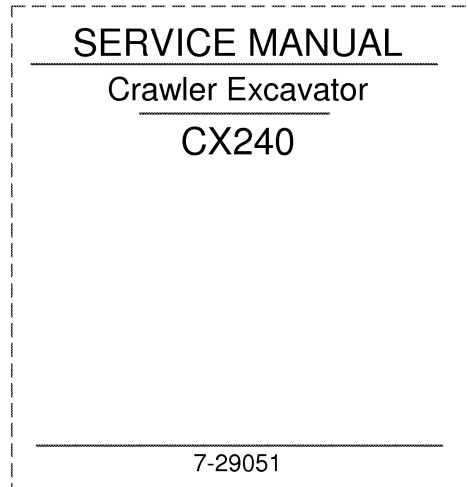


1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

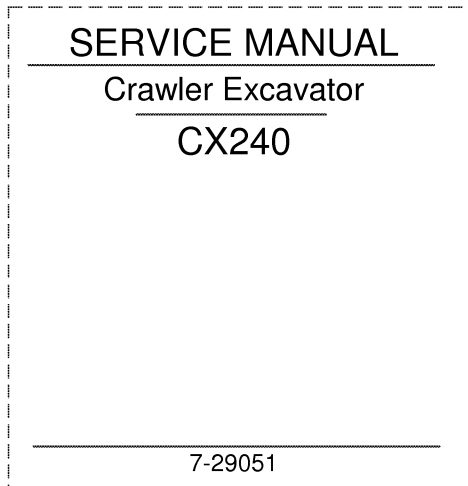

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

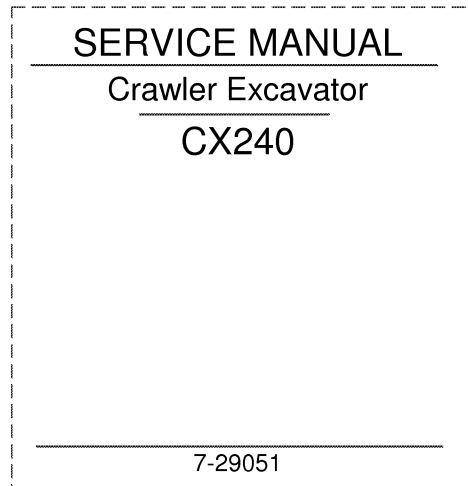

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

# CX240 Crawler Excavators

## Table of Contents

DIVISION/SECTION	SECTION N°	REFERENCE N°
<b>1 GENERAL INFORMATION</b>		
Safety, general information and standard torque data .....	1001	7-28590
General specifications and special torque setting .....	1002	7-28671
Numerical value conversion table .....	1003	9-35540
<b>2 ENGINE</b>		
Removal and installation of the engine .....	2000	██████████
Radiator and oil-cooler .....	2001	██████████
Engine specifications .....	*	
Disassembly and assembly of the engine .....	*	
<b>3 FUEL SYSTEM</b>		
Fuel tank .....	3001	7-27970GB
Fuel engine system .....	*	
<b>4 ELECTRICAL SYSTEM</b>		
Electrical system, electrical and electronic troubleshooting .....	4001	7-28361
Inspection and maintenance of batteries and connecting a booster battery ...	4002	7-27921GB
<b>5 UNDERCARRIAGE</b>		
Removal and installation of tracks .....	5001	7-27750GB
Rollers .....	5003	7-27770GB
Sprocket .....	5004	7-27781GB
Idler wheel and tension shock absorber .....	5005	7-27801GB
<b>6 DRIVE TRAIN</b>		
Drive motor and final drive transmission removal and installation .....	6001	7-27841GB
Drive motor and final drive transmission disassembly and assembly .....	6002	7-28090GB
Swing reduction gear, removal and installation .....	6003	██████████
Swing reduction gear, disassembly and assembly .....	6004	7-28390GB
<b>7 UNDERCARRIAGE HYDRAULICS</b>		
<b>8 UPPERSTRUCTURE HYDRAULICS</b>		
Depressurising and decontaminating the hydraulic system, use of the vacuum pump and bleeding the components .....	8000	7-27951GB
Specifications, troubleshooting, checks and hydraulic pressure settings .....	8001	7-28551
Hydraulic reservoir removal and installation .....	8002	7-27990GB
Main and pilot pumps, removal and installation .....	8003	██████████
Main hydraulic control valve, removal and installation .....	8004	7-27890GB
Attachment cylinders, removal and installation .....	8005	7-27791GB
Hydraulic swivel, removal and installation .....	8006	7-27811GB
Pilot blocs, removal and installation .....	8007	9-35590
Swing motor, removal and installation .....	8008	██████████
Disassembly and assembly of the free swing valve .....	8009	9-35530
Main hydraulic pump, disassembly and assembly .....	8010	██████████
Main hydraulic control valve, disassembly and assembly .....	8011	██████████
Attachment cylinders, disassembly and assembly .....	8012	9-35500
Hand control levers, disassembly and assembly .....	8013	7-28110GB
Foot control levers, disassembly and assembly .....	8014	7-28210GB
Six-solenoid valves, disassembly and assembly .....	8015	7-27910GB
Caution valve, disassembly and assembly .....	8016	7-27940GB
Safety valve .....	8017	7-29630GB
Hydraulic swivel, disassembly and assembly .....	8018	7-28080GB
Swing motor, disassembly and assembly .....	8019	7-29760GB
Hydraulic functions .....	8020	7-28610

Reprinted

DIVISION/SECTION	SECTION N°	REFERENCE N°
<b>9 UPPERSTRUCTURE</b>		
Upperstructure, turntable and counterweight.....	9002	7-27981GB
Boom, dipper and bucket.....	9003	7-27961GB
Seat and seat belt.....	9004	7-28120GB
Cab and cab equipment.....	9005	██████████
Air conditioner troubleshooting and system checks.....	9006	9-88730GB
Air conditioning unit disassembly and assembly.....	9007	██████████
Air conditioning servicing.....	9008	██████████
Air conditioning components.....	9009	██████████
Large format hydraulic and electrical schematics.....	Pocket	7-28530

\* Consult the Engine Service Manual

██████████ Sections to be distributed at a later date

NOTE: CASE Company reserves the right to make changes in the specification and design of the machine without prior notice and without incurring any obligation to modify units previously sold.

The description of the models shown in this manual has been made in accordance with the technical specifications known as of the date of design of this document.

# Section

# 1001

## SAFETY, GENERAL INFORMATION AND STANDARD TORQUE DATA

## TABLE OF CONTENTS

GENERAL INFORMATION .....	3
SAFETY .....	4
STANDARD TORQUE DATA FOR CAP SCREWS AND NUTS.....	6

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$