



SERVICE MANUAL
CRAWLER EXCAVATOR
CX290B

87673891 B
Replaces 87673891

Issued February 2010

CRAWLER EXCAVATOR CX290B SERVICE MANUAL

TABLE OF CONTENTS

DIVISION/SECTION	SECTION N°	REFERENCE N°
1 GENERAL INFORMATION		
Safety, general information and standard torque data	1001	7-27691EN
General specifications and special torque setting	1002	SM290B1002-1NA
2 ENGINE		
Removal and installation of the engine	2000	SM290B2000-0EN
Removal and installation of the fuel cooler, engine inter-cooler, radiator and oil cooler	2001	SM290B2001-0EN
Removal and installation of the turbo charger	2004	SM290B2004-0EN
Removal and installation of EGR cooler and EGR valve	2005	SM350B2005-0EN
Removal and installation of the engine hood	2006	SM350B2006-0EN
Engine specifications	*	
Disassembly and assembly of the engine	*	
3 FUEL SYSTEM		
Removal and installation of the fuel tank	3001	SM290B3001-0EN
Removal and installation of the supply pump and common rail	3004	SM290B3004-0EN
Removal and installation of the injectors	3005	SM350B3005-0EN
Fuel engine system	*	
4 ELECTRICAL SYSTEM		
Service connector kit	4000	SM350B4000-1EN
Electrical and engine functions and service support	4001	SC210B4001-2EN
Removal and installation of the starter motor	4004	SM290B4004-0EN
Removal and installation of the alternator	4005	SM350B4005-0EN
Electrical equipment and electrical circuit diagrams	4020	SM210B4020-1EN
Engine error code (DTC)	4021	SM350B4021-0EN
Main body error code (DTC)	4022	SM210B4022-0EN
Troubleshooting, 6HK1 engine	4023	SM350B4023-0EN
5 UNDERCARRIAGE		
Removal and installation of tracks	5001	SM290B5001-0EN
Rollers	5003	SM290B5003-0EN
Take-up roller	5005	SM290B5005-0EN
Removal and installation of grease cylinder	5006	SM290B5006-0EN
Disassembly and assembly of grease cylinder	5007	SM290B5007-0EN
6 DRIVE TRAIN		
Removal and installation of the drive motor and final drive transmission	6001	SM350B6001-0EN
Disassembly and assembly of the drive motor and final drive transmission	6002	SM350B6002-0EN
Removal and installation of the swing motor and swing reduction gear	6003	SM290B6003-0EN
Disassembly and assembly of the swing reduction gear	6004	SM350B6004-0EN
7 UNDERCARRIAGE HYDRAULICS		

* Consult the Engine Service Manual

8 UPPERSTRUCTURE HYDRAULICS

Specifications, troubleshooting, checks and hydraulic pressure settings.....	8001	SC290B8001-ONA
Removal and installation of the hydraulic reservoir	8002	SM290B8002-OEN
Removal and installation of the main hydraulic pump.....	8003	SM350B8003-OEN
Removal and installation of the main hydraulic control valve.....	8004	SM290B8004-OEN
Removal and installation of the attachment cylinders.....	8005	SM350B8005-OEN
Removal and installation of the hydraulic swivel.....	8006	SM290B8006-OEN
Removal and installation of the pilot blocs.....	8007	SM290B8007-OEN
Disassembly and assembly of the main hydraulic pump	8010	SM290B8010-OEN
Disassembly and assembly of the main hydraulic control valve	8011	SM350B8011-OEN
Disassembly and assembly of the attachment cylinders	8012	SM130B8012-OEN
Disassembly and assembly of the hand control levers	8013	SM130B8013-OEN
Disassembly and assembly of the foot control levers	8014	SM160B8014-1EN
Disassembly and assembly of the cushion valve.....	8016	SM290B8016-OEN
Removal and installation of the safety valve	8017	SM350B8017-OEN
Disassembly and assembly of the hydraulic swivel	8018	SM290B8018-OEN
Disassembly and assembly of the swing motor	8019	SM290B8019-OEN
Hydraulic functions	8020	SC290B8020-ONA
Hydraulic component functions.....	8030	SC290B8030-ONA

9 UPPERSTRUCTURE

Removal and installation of the counterweight	9002	SM290B9002-OEN
Removal and installation of the boom, dipper and bucket	9003	SM350B9003-OEN
Removal and installation of the seat.....	9004	SM130B9004-OEN
Removal and installation of the cab and cab equipment	9005	SM130B9005-OEN
Air conditioner functions and troubleshooting.....	9006	SC210B9006-3EN
Air conditioning unit	9007	SM130B9007-OEN
Air conditioning components.....	9009	SM290B9009-OEN
Large size hydraulic schematics	Pocket	87601004A
Large size electrical schematics	Pocket	87601010A

NOTE: CNH France S.A. Company reserves the right to make changes in the specification and design of the machine without prior notice and without incurring any obligation to modify units previously sold.

The description of the models shown in this manual has been made in accordance with the technical specifications known as of the date of design of this document.

All data given in this manual is subject to production variations. Dimensions and weights are provided with approximate values and the machine fitting shown in the illustrations may not correspond with standard models. For precise information on specific machine models and versions, please contact your CASE dealer.

Reproduction or translation, even partial, is prohibited without written authorization from CNH France SA Company.

Section 1001

**SAFETY, GENERAL INFORMATION
AND TORQUE SPECIFICATIONS**

TABLE OF CONTENTS

GENERAL INFORMATION	3
SAFETY.....	4
STANDARD TORQUE DATA FOR CAP SCREWS AND NUTS.....	6



WARNING : *This symbol is used in this manual to indicate important safety messages. Whenever you see this symbol, carefully read the message that follows, as there is a risk of serious injury.*

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$