



1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

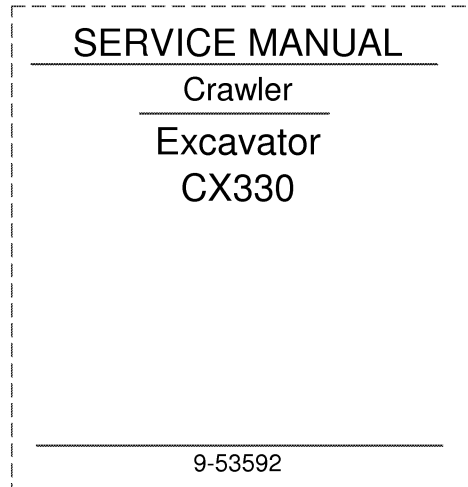


1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

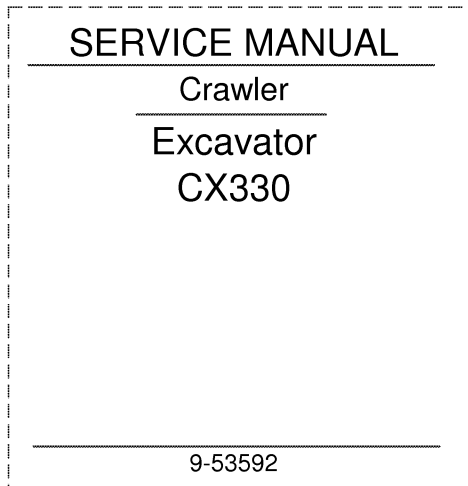

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

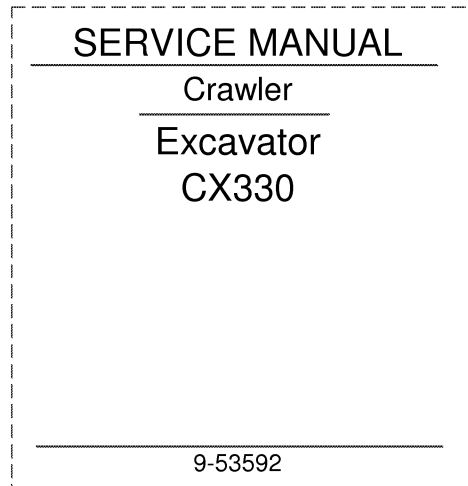

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

CX330 Crawler Excavators

Table of Contents

DIVISION/SECTION	SECTION N°	REFERENCE N°
1 GENERAL INFORMATION		
Safety, general information and standard torque data	1001	9-53360
General specifications and special torque setting.....	1002	9-53630
2 ENGINE		
Removal and installation of the engine	2000	9-43540GB
Radiator and oil-cooler	2001	9-43480GB
Engine specifications	*	
Disassembly and assembly of the engine.....	*	
3 FUEL SYSTEM		
Fuel tank	3001	9-43470GB
Fuel engine system.....	*	
4 ELECTRICAL SYSTEM		
Electrical system, electrical and electronic troubleshooting.....	4001	9-53640
Inspection and maintenance of batteries and connecting a booster battery....	4002	9-43460GB
Main and engine electronic control boxes.....	4003	9-43450GB
5 UNDERCARRIAGE		
Removal and installation of tracks	5001	9-42910GB
Rollers	5003	9-42920GB
Sprocket.....	5004	9-36890GB
Idler wheel and tension shock absorber	5005	9-43000GB
6 DRIVE TRAIN		
Drive motor and final drive transmission removal and installation	6001	9-43140GB
Swing reduction gear, removal and installation.....	6003	9-43210GB
Swing reduction gear, disassembly and assembly.....	6004	9-43220GB
Travel reduction gear assembly and disassembly.....	6005	9-43150GB
7 UNDERCARRIAGE HYDRAULICS		
8 UPPERSTRUCTURE HYDRAULICS		
Depressurising and decontaminating the hydraulic system, use of the vacuum pump and bleeding the components	8000	9-43500GB
Specifications, troubleshooting, checks and hydraulic pressure settings.....	8001	9-53650
Hydraulic reservoir removal and installation	8002	9-43230GB
Main and pilot pumps, removal and installation	8003	9-43530GB
Main hydraulic control valve, removal and installation	8004	9-43260GB
Attachment cylinders, removal and installation	8005	9-43250GB
Hydraulic swivel, removal and installation.....	8006	9-43390GB
Pilot blocs, removal and installation	8007	9-43400
Swing motor, removal and installation.....	8008	9-43200GB
Free swing disassembly and assembly	8009	9-35530
Main hydraulic pump, disassembly and assembly (UCHIDA)	8010	9-43240GB
Main hydraulic pump, disassembly and assembly (KAWASAKI)	8010	9-43330GB
Main hydraulic control valve, disassembly and assembly	8011	9-43550GB
Attachment cylinders, disassembly and assembly.....	8012	9-43320GB
Hand control levers, disassembly and assembly	8013	9-43340GB
Foot control levers, disassembly and assembly	8014	7-28300GB
Six-solenoid valves, disassembly and assembly.....	8015	9-43360GB
Caution valve, disassembly and assembly.....	8016	7-27942GB
Anti-hose burst valve.....	8017	9-43380GB
Hydraulic swivel, disassembly and assembly.....	8018	9-43190GB
Swing motor, disassembly and assembly	8019	9-43440GB
Hydraulic functions.....	8020	9-53660
Travel hydraulic motor, disassembly and assembly.....	8021	9-43160GB

DIVISION/SECTION	SECTION N°	REFERENCE N°
9 UPPERSTRUCTURE		
Upperstructure, turntable bearing and counterweight.....	9002	9-43410GB
Boom, dipper and bucket	9003	9-43420GB
Seat and seat belt	9004	9-40960GB
Cab and cab equipment.....	9005	9-43430GB
Air conditioner troubleshooting and system checks	9006	9-88730GB
Air conditioning unit disassembly and assembly.....	9007	██████████
Air conditioning servicing	9008	██████████
Air conditioning components.....	9009	██████████
Attachment reinforcement procedures	9012	9-43920
Large format hydraulic and electrical schematics	Pocket	9-42721

* Consult the Engine Service Manual

██████████ Sections to be distributed at a later date

NOTE: CASE Company reserves the right to make changes in the specification and design of the machine without prior notice and without incurring any obligation to modify units previously sold.

The description of the models shown in this manual has been made in accordance with the technical specifications known as of the date of design of this document.

Section 1001

SAFETY, GENERAL INFORMATION

TABLE OF CONTENTS

GENERAL INFORMATION	3
SAFETY	4
STANDARD TORQUE DATA FOR CAP SCREWS AND NUTS.....	6

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$