

The CASE logo is displayed in a bold, white, sans-serif font. It is positioned on a black background that is part of a trapezoidal shape pointing to the left. A horizontal orange bar is located directly beneath the letters 'A', 'S', and 'E'.


PROFESSIONAL PARTNER

# **SERVICE MANUAL CRAWLER EXCAVATOR**

## **CX330 TIER III**


87565293 NA

Issued 05-2006

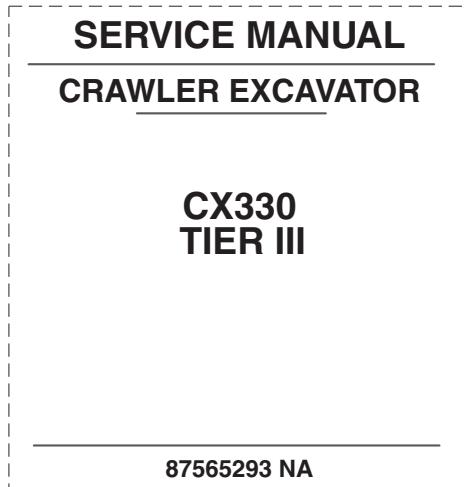


1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

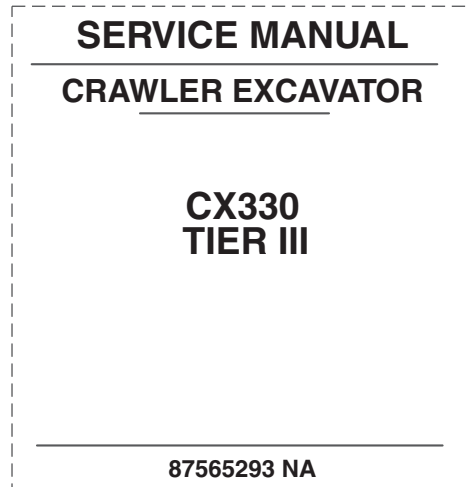


1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

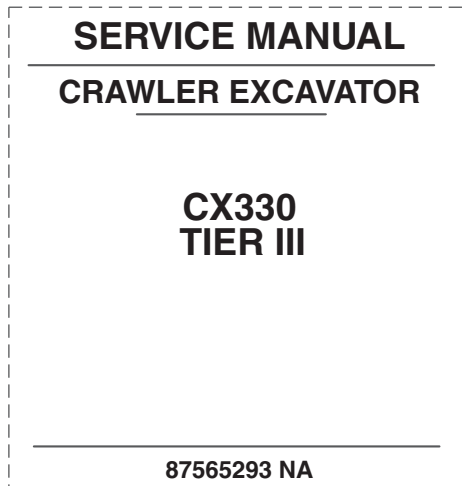

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

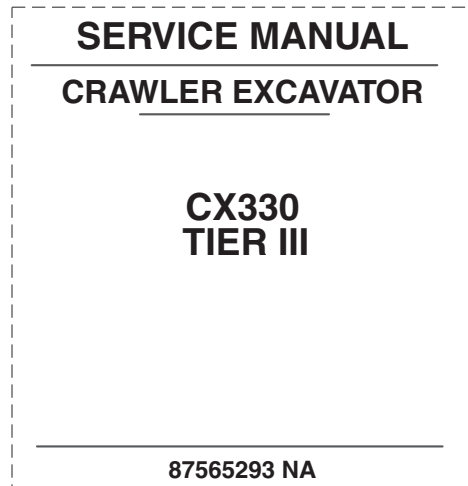

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4



---

# SERVICE MANUAL

---

CRAWLER EXCAVATOR

**CX330 TIER III**

---

---

CNH America, LLC reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

All data given in this publication is subject to production variations. Dimensions and weights are only approximate. Illustrations do not necessarily show products in standard condition. For exact information about any particular product, please consult your Dealer

REVISION HISTORY			
Issue	Issue Date	Applicable Machines	Remarks
First Edition	05-2006	CX330 TIER III Crawler Excavator	87565293 NA

# CX330 Tier 3 Crawler Excavators

## Table of Contents

DIVISION/SECTION	SECTION N°	REFERENCE N°
<b>1 GENERAL INFORMATION</b>		
Safety, general information and standard torque data .....	1001	7-27691NA
General specifications and special torque setting .....	1002	9-94170NA
Numerical value conversion table .....	1003	9-35540
<b>2 ENGINE</b>		
Radiator and engine, removal and installation .....	2001	9-94830NA
Engine specifications .....	*	
Disassembly and assembly of the engine .....	*	
<b>3 FUEL SYSTEM</b>		
Fuel tank .....	3001	9-43471NA
Fuel engine system .....	*	
<b>4 ELECTRICAL SYSTEM</b>		
Electrical system, electrical and electronic troubleshooting .....	4001	9-94180NA
Inspection and maintenance of batteries and connecting a booster battery .....	4002	9-43460NA
Main and engine electronic control boxes .....	4003	9-43451NA
<b>5 UNDERCARRIAGE</b>		
Removal and installation of tracks .....	5001	9-42910NA
Rollers .....	5003	9-42921NA
Sprocket .....	5004	9-36890NA
Idler wheel and tension shock absorber .....	5005	9-94790NA
<b>6 DRIVE TRAIN</b>		
Drive motor and final drive transmission removal and installation .....	6001	9-43141NA
Swing reduction gear, removal and installation .....	6003	9-43210NA
Swing reduction gear, disassembly and assembly .....	6004	9-43221NA
Travel reduction gear disassembly and assembly .....	6005	9-43151NA
<b>7 UNDERCARRIAGE HYDRAULICS</b>		
<b>8 UPPERSTRUCTURE HYDRAULICS</b>		
Depressurising and decontaminating the hydraulic system, use of the vacuum pump and bleeding the components .....	8000	9-43501NA
Specifications, troubleshooting, checks and hydraulic pressure settings .....	8001	9-94190NA
Hydraulic reservoir removal and installation .....	8002	9-43230NA
Main and pilot pumps, removal and installation .....	8003	9-94840NA
Main hydraulic control valve, removal and installation .....	8004	9-43261NA
Attachment cylinders, removal and installation .....	8005	9-43251NA
Hydraulic swivel, removal and installation .....	8006	9-43390NA
Pilot blocs, removal and installation .....	8007	9-43400NA
Swing motor, removal and installation .....	8008	9-43200NA
Main hydraulic pump, disassembly and assembly .....	8010	9-94850NA
Main hydraulic control valve, disassembly and assembly .....	8011	9-43551NA
Attachment cylinders, disassembly and assembly .....	8012	9-94760NA
Hand control levers, disassembly and assembly .....	8013	9-94630NA
Foot control levers, disassembly and assembly .....	8014	7-28301NA
Six-solenoid valves, disassembly and assembly .....	8015	9-43361NA
Caution valve, disassembly and assembly .....	8016	9-94770NA
Hydraulic swivel, disassembly and assembly .....	8018	9-43190NA
Swing motor, disassembly and assembly .....	8019	9-43441NA
Hydraulic functions .....	8020	9-94200NA
Travel hydraulic motor, disassembly and assembly .....	8021	9-43161NA
Hydraulic component functions .....	8030	9-94210NA

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$