

CRAWLER EXCAVATOR CX75SR/CX80 TIER 3 SERVICE MANUAL

TABLE OF CONTENTS

DIVISION/SECTION	SECTION N°	REFERENCE N°
1 GENERAL INFORMATION		
Safety, general information and standard torque data.....	1001	7-27691EN
General specifications and special torque setting	1002	SC75SRCX80-1002-2EN
2 ENGINE		
Removal and installation of the engine.....	2000	SM75SR2000-0EN
Engine specifications.....	*	
Disassembly and assembly of the engine	*	
3 FUEL SYSTEM		
Removal and installation of the fuel tank.....	3001	SM75SR3001-0EN
Fuel engine system	*	
4 ELECTRICAL SYSTEM		
Electrical and engine functions and service support	4001	SC75SRCX80-4001-0EN
Electrical equipment and electrical circuit diagrams.....	4020	SC75SRCX80-4020-0EN
5 UNDERCARRIAGE		
Removal and installation of tracks	5001	SM75SR5001-0EN
Rollers	5003	SM75SR5003-0EN
Take-up roller.....	5005	SM75SR5005-0EN
6 DRIVE TRAIN		
Removal and installation of the drive motor and final drive transmission.....	6001	SM75SR6001-0EN
Disassembly and assembly of the drive motor and final drive transmission.....	6002	SM75SR6002-0EN
Removal and installation of the swing motor and swing reduction gear	6003	SM75SR6003-0EN
Disassembly and assembly of the swing reduction gear	6004	See 8019
7 UNDERCARRIAGE HYDRAULICS		

* Consult the Engine Service Manual

DIVISION/SECTION	SECTION N°	REFERENCE N°
8 UPPERSTRUCTURE HYDRAULICS		
Specifications, troubleshooting, checks and hydraulic pressure settings.....	8001	SC75SRCX80-8001-1EN
Removal and installation of the hydraulic reservoir	8002	SM75SR8002-0EN
Removal and installation of the main hydraulic pump.....	8003	SM75SR8003-0EN
Removal and installation of the main hydraulic control valve - CX75SR	8004	SM75SR8004-0EN
Removal and installation of the main hydraulic control valve - CX80	8004	SM80-8004-0EN
Removal and installation of the attachment cylinders.....	8005	SM75SR8005-0EN
Removal and installation of the hydraulic swivel.....	8006	SM75SR8006-0EN
Removal and installation of the pilot blocs.....	8007	SM75SR8007-0EN
Disassembly and assembly of the main hydraulic pump	8010	SM75SR8010-0EN
Disassembly and assembly of the main hydraulic control valve - CX75SR	8011	SM75SR8011-0EN
Disassembly and assembly of the main hydraulic control valve - CX80	8011	SM80-8011-0EN
Disassembly and assembly of the attachment cylinders	8012	SM75SR8012-0EN
Disassembly and assembly of the hand control levers	8013	SM75SR8013-0EN
Disassembly and assembly of the foot control levers	8014	SM75SR8014-0EN
Disassembly and assembly of the solenoid valve block	8015	SM75SR8015-0EN
Disassembly and assembly of the cushion valve.....	8016	SM75SR8016-0EN
Disassembly and assembly of the hydraulic swivel	8018	SM75SR8018-0EN
Disassembly and assembly of the swing motor	8019	SM75SR8019-0EN
Hydraulic functions	8020	SC75SRCX80-8020-0EN
Hydraulic component functions.....	8030	SC75SRCX80-8030-0EN
9 UPPERSTRUCTURE		
Air conditioning unit	9007	SM75SR9007-0EN
Large size hydraulic schematics - CX75SR.....	Pocket	87725706A
Large size electrical schematics - CX75SR.....	Pocket	87732675A
Large size hydraulic schematics - CX80.....	Pocket	KAJ11600-E00
Large size electrical schematics - CX80.....	Pocket	KAJ11060-E00

NOTE: CNH Company reserves the right to make changes in the specification and design of the machine without prior notice and without incurring any obligation to modify units previously sold.

The description of the models shown in this manual has been made in accordance with the technical specifications known as of the date of design of this document.

Section 1001

**SAFETY, GENERAL INFORMATION
AND TORQUE SPECIFICATIONS**

TABLE OF CONTENTS

GENERAL INFORMATION	3
SAFETY.....	4
STANDARD TORQUE DATA FOR CAP SCREWS AND NUTS.....	6



WARNING : *This symbol is used in this manual to indicate important safety messages. Whenever you see this symbol, carefully read the message that follows, as there is a risk of serious injury.*

GENERAL INFORMATION

Cleanning

Clean all metal parts except bearings, in a suitable cleaning solvent or by steam cleaning. Do not use caustic soda for steam cleaning. After cleaning, dry and put oil on all parts. Clean oil passages with compressed air. Clean bearings in a suitable cleaning solvent, dry the bearings completely and put oil on the bearings.

Inspection

Check all parts when the parts are disassembled. Replace all parts that have wear or damage. Small scoring or grooves can be removed with a hone or crocus cloth. Complete a visual inspection for indications of wear, pitting and the replacement of parts necessary to prevent early failures.

Bearings

Check bearings for easy action. If bearings have a loose fit or rough action replace the bearing. Wash bearings with a suitable cleaning solvent and permit to air dry. **DO NOT DRY BEARINGS WITH COMPRESSED AIR.**

Needle bearings

Before you press needle bearings in a bore always remove any metal protrusions in the bore or edge of the bore. Before you press bearings into position put petroleum jelly on the inside and outside diameter of the bearings.

Gears

Check all gears for wear and damage. Replace gears that have wear or damage.

Oil seals, O-rings and gaskets

Always install new oil seals, O-rings and gaskets. Put petroleum jelly on seals and O-rings.

Shafts

Check all shafts that have wear or damage. Check the bearing and oil seal surfaces of the shafts for damage.

Service parts

Always install genuine Case service parts. When ordering refer to the Parts Catalog for the correct part number of the genuine Case replacement items. Failures due to the use of other than genuine Case replacement parts are not covered by warranty.

Lubrication

Only use the oils and lubricants specified in the Operator's or Service Manuals. Failures due to the use of non-specified oils and lubricants are not covered by warranty.

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$