
DX48, DX55 REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL INFORMATION	2
SECTION 10 - ENGINE	3
SECTION 18 - CLUTCH	11
SECTION 21 - TRANSMISSION	12
SECTION 23 - FWD DRIVELINE	19
SECTION 25 - FWD FRONT AXLE	20
SECTION 27 - DIFFERENTIAL, REAR AXLE	21
SECTION 31 - POWER TAKE-OFF (PTO)	23
SECTION 33 - BRAKES	24
SECTION 35 - HYDRAULIC SYSTEM	24
SECTION 41 - STEERING	28
SECTION 44 - WHEELS AND TIRES	30
SECTION 55 - ELECTRICAL SYSTEM	31
SECTION 90 - PLATFORM	39

The following pages are the collation of the contents pages from each section and chapter of the DX48, DX55 Repair manual. Complete Repair part # 87367132.

The sections used through out all Case IH product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the DX48, DX55 Tractors.

SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87367133

Chapter 1 - General Information

CONTENTS

Section	Description	Page
	Precautionary Statements	2
	Safety	3
	Safety Decals	6
	Instruction Decals	9
	Decal Placement Guide	12
	Ecology and the Environment	14
	Universal Symbols	15
	General Information	16
	Minimum Hardware Tightening Torques	17
	Lubrication	19
	Recommended Lubricants	20
	Lubrication and Maintenance Chart	21
	Lubrication Fittings	22
	Diesel Fuel	22
	Specifications	23
	Transmission Speeds	26
	General Dimensions	31
	Wheel Tread Settings	34
	Front Axle (2WD) Adjustable	34
	Liquid Ballast	38
	Tire Pressure	38
	Rear Tire Liquid	38

SECTION 10 - ENGINE

BOOK 1 - 87367133

Chapter 1 - Engine Dismantling Sequence

CONTENTS

Section	Description	Page
	Specifications	6
	Metric Bolt Torque Specifications	10
	Special Tools	11
	Compression Test and Tools	12
	Description of Operation - General Information	13
	Troubleshooting	14
	Cylinder Head and Valve Train Components	18
	Cylinder Block Assembly	18
	Engine	20
	Removal	20
	Installation	21
	Overhaul	22
	Engine	22
	Alternator	22
	Removal	22
	Cooling Fan and Pulley	22
	Removal	22
	Glow Plug and Connector	22
	Removal	22
	Nozzle/Holder	23
	Removal	23
	Fuel Injection Pipe	23
	Removal	23
	Injector	23
	Removal	23
	Water Pump	23
	Removal	23
	Cover/Intake Manifold/Exhaust Manifold	24
	Removal	24
	External Oil Pipe	24
	Removal	24
	Rocker Assembly	25
	Removal	25

SECTION 10 - ENGINE

BOOK 1 - 87367133

Chapter 1 - Engine Dismantling Sequence (Continued)

CONTENTS

Section	Description	Page
	Cylinder Head	25
	Removal	25
	Tappets	25
	Removal	25
	Fuel Stop Solenoid	26
	Removal	26
	Timing Gear Cover	26
	Removal	26
10 106	Timing Gears and Camshaft	28
	Removal	28
	Front End Plate	29
	Removal	29
10 102	Oil Sump	29
	Removal	29
	Oil Suction Pipe and Strainer	30
	Removal	30
10 110	Balancer Assembly	30
	Removal	30
10 105	Connecting Rods, Bearings and Pistons, Rings	31
	Removal	31
10 103	Flywheel	31
	Removal	31
	Backplate and Oil Seal	32
	Removal	32
	Crankshaft and Main Bearings	32
	Removal	32
	Rocker Arm Assembly	33
	Disassembly	33
	Inspection and Repair	33
10 106	Timing Gear	34
	Inspection	34
	Camshaft	34
	Disassembly	34
	Inspection	34

SECTION 10 - ENGINE

BOOK 1 - 87367133

Chapter 1 - Engine Dismantling Sequence (Continued)

CONTENTS

Section	Description	Page
	Oil Pump	35
	Disassembly	35
	Inspection	35
	Assembly (see Idler Gear)	35
10 101	Cylinder Head	36
	Disassembly	36
	Inspection and Repair	36
	Valves	37
	Valve Guides	37
	Valve Seat	38
	Valve Springs	39
	Rocker Arms	40
	Push Rods	41
	Cylinder Block	42
	Inspection and Repair	42
	Piston and Piston Rings	43
	Disassembly	43
	Inspection	43
	Connecting Rods	45
	Pistons, Rings and Connecting Rod	47
	Assembly	47
10 103	Crankshaft Main Bearing and Thrust Washer	48
	Removal and Inspection	48
	Crankshaft Bearing (Bushing)	49
	Inspection	49
	Removal	50
	Replacement	50
	Crankshaft Main Bearing	51
	Installation	51
	Port Block	51
	Removal	51
	Installation	51
10 103	Crankshaft and Bearing Holder	52
	Installation	52

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$