

**FARMALL® 50A**  
**FARMALL® 60A**  
**FARMALL® 70A**  
**Tier 4B (final)**  
Tractor

**SERVICE MANUAL**

**Part number 47866582**

1<sup>st</sup> edition English  
December 2015





## **SERVICE MANUAL**

**Farmall® 50A**  
**Farmall® 60A**  
**Farmall® 70A**

## Link Product / Engine

---

<b>Product</b>	<b>Market Product</b>	<b>Engine</b>
Farmall® 50A Compact tractor, 2WD, 50 HP, TIER 4B (FINAL)	North America	R 753 IE4
Farmall® 50A Compact tractor, 4WD, 50 HP, TIER 4B (FINAL)	North America	R 753 IE4
Farmall® 60A Compact tractor, 4WD, 60 HP, TIER 4B (FINAL)	North America	R 753 IE4
Farmall® 60A Compact tractor, 2WD, 60 HP, TIER 4B (FINAL)	North America	R 753 IE4
Farmall® 70A Compact tractor, 4WD, 70 HP, TIER 4B (FINAL)	North America	R 753 IE4
Farmall® 70A Compact tractor, 2WD, 70 HP, TIER 4B (FINAL)	North America	R 753 IE4

# Contents

---

## INTRODUCTION

<b>Engine</b> .....	<b>10</b>
[10.001] Engine and crankcase .....	10.1
[10.103] Crankshaft and flywheel.....	10.2
[10.202] Air cleaners and lines .....	10.3
[10.206] Fuel filters .....	10.4
[10.216] Fuel tanks .....	10.5
[10.310] Aftercooler.....	10.6
[10.400] Engine cooling system .....	10.7
<b>Clutch</b> .....	<b>18</b>
[18.100] Clutch mechanical release control .....	18.1
[18.110] Clutch and components .....	18.2
<b>Transmission</b> .....	<b>21</b>
[21.114] Mechanical transmission .....	21.1
[21.130] Mechanical transmission external controls.....	21.2
[21.140] Mechanical transmission internal components.....	21.3
[21.145] Gearbox internal components.....	21.4
[21.200] Dropbox .....	21.5
<b>Four-Wheel Drive (4WD) system</b> .....	<b>23</b>
[23.314] Drive shaft.....	23.1
<b>Front axle system</b> .....	<b>25</b>
[25.100] Powered front axle .....	25.1
[25.102] Front bevel gear set and differential .....	25.2
[25.108] Final drive hub, steering knuckles, and shafts .....	25.3
[25.310] Final drives .....	25.4
[25.400] Non-powered front axle .....	25.5

<b>Rear axle system</b> .....	<b>27</b>
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential.....	27.2
[27.120] Planetary and final drives .....	27.3
<b>Power Take-Off (PTO)</b> .....	<b>31</b>
[31.101] Rear mechanical control .....	31.1
[31.110] One-speed rear Power Take-Off (PTO) .....	31.2
[31.114] Two-speed rear Power Take-Off (PTO) .....	31.3
<b>Brakes and controls</b> .....	<b>33</b>
[33.120] Mechanical service brakes .....	33.1
<b>Hydraulic systems</b> .....	<b>35</b>
[35.000] Hydraulic systems.....	35.1
[35.100] Main lift system.....	35.2
[35.104] Fixed displacement pump .....	35.3
[35.204] Remote control valves .....	35.4
[35.300] Reservoir, cooler, and filters.....	35.5
[35.355] Hydraulic hand control .....	35.6
[35.359] Main control valve.....	35.7
<b>Steering</b> .....	<b>41</b>
[41.101] Steering control .....	41.1
[41.200] Hydraulic control components.....	41.2
[41.206] Pump .....	41.3
[41.216] Cylinders .....	41.4
<b>Wheels</b> .....	<b>44</b>
[44.511] Front wheels.....	44.1
[44.520] Rear wheels.....	44.2
<b>Electrical systems</b> .....	<b>55</b>
[55.000] Electrical system .....	55.1

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$