

FARMALL® 80N
FARMALL® 80V
FARMALL® 90N
FARMALL® 90V
FARMALL® 100N
FARMALL® 100V
FARMALL® 110N
FARMALL® 110V
Tier 4A (interim)
Tractor

SERVICE MANUAL

Part number 51430129

1st edition English

December 2017

CASE II
AGRICULTURE



SERVICE MANUAL

Farmall® 100N With cab [ZGLL03072 -], Farmall® 100N Without cab [ZGLL04308 -], Farmall® 100V With cab, Farmall® 100V Without cab, Farmall® 110N With cab [ZGLL03153 -], Farmall® 110N Without cab [ZGLL03317 -], Farmall® 110V With cab [ZGLL03383 -], Farmall® 110V Without cab [ZGLL03058 -], Farmall® 80N With cab [ZGLL02982 -], Farmall® 80N Without cab [ZGLL03560 -], Farmall® 80V With cab [ZGLL03152 -], Farmall® 80V Without cab [ZGLL03079 -], Farmall® 90N With cab, Farmall® 90N Without cab, Farmall® 90V With cab, Farmall® 90V Without cab

Link Product / Engine

Product	Market Product	Engine
Farmall® 100N With cab [ZGLL03072 -]	North America	F5DFL413K*A010
Farmall® 100N Without cab [ZGLL04308 -]	North America	F5DFL413K*A010
Farmall® 110N With cab [ZGLL03153 -]	North America	F5DFL413J*A011
Farmall® 110N Without cab [ZGLL03317 -]	North America	F5DFL413J*A011
Farmall® 80N With cab [ZGLL02982 -]	North America	F5DFL413A*E009
Farmall® 80N Without cab [ZGLL03560 -]	North America	F5DFL413A*E009
Farmall® 90N With cab	North America	F5DFL413L*A007
Farmall® 90N Without cab	North America	F5DFL413L*A007
Farmall® 100V With cab	North America	F5DFL413K*A010
Farmall® 100V Without cab	North America	F5DFL413K*A010
Farmall® 110V With cab [ZGLL03383 -]	North America	F5DFL413J*A011
Farmall® 110V Without cab [ZGLL03058 -]	North America	F5DFL413J*A011
Farmall® 80V With cab [ZGLL03152 -]	North America	F5DFL413A*E009
Farmall® 80V Without cab [ZGLL03079 -]	North America	F5DFL413A*E009
Farmall® 90V With cab	North America	F5DFL413L*A007
Farmall® 90V Without cab	North America	F5DFL413L*A007

Contents

INTRODUCTION

Engine	10
[10.001] Engine and crankcase	10.1
[10.114] Pump drives	10.2
[10.216] Fuel tanks	10.3
[10.206] Fuel filters	10.4
[10.220] Throttle linkage.....	10.5
[10.202] Air cleaners and lines	10.6
[10.254] Intake and exhaust manifolds and muffler	10.7
[10.501] Exhaust Gas Recirculation (EGR) exhaust treatment.....	10.8
[10.400] Engine cooling system	10.9
[10.414] Fan and drive	10.10
[10.310] Aftercooler.....	10.11
[10.304] Engine lubrication system.....	10.12
Clutch	18
[18.100] Clutch mechanical release control	18.1
[18.104] Clutch hydraulic release control.....	18.2
[18.110] Clutch and components	18.3
Transmission	21
[21.114] Mechanical transmission	21.1
[21.130] Mechanical transmission external controls.....	21.2
[21.100] Mechanical transmission hydraulic components	21.3
[21.140] Mechanical transmission internal components.....	21.4
[21.112] Power shuttle transmission.....	21.5
[21.134] Power shuttle transmission external controls	21.6
[21.104] Power shuttle transmission hydraulic components	21.7
[21.154] Power shuttle transmission internal components	21.8

[21.145] Gearbox internal components.....	21.9
[21.160] Creeper	21.10
[21.162] Reverser	21.11
[21.168] Hi-Lo unit	21.12
[21.109] Transmission cooler and lines.....	21.13
[21.118] Transmission/Rear drive	21.14
[21.182] Differential.....	21.15
Four-Wheel Drive (4WD) system	23
[23.202] Electro-hydraulic control	23.1
[23.304] Four-Wheel Drive (4WD) gearbox	23.2
[23.314] Drive shaft.....	23.3
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
[25.310] Final drives	25.4
[25.400] Non-powered front axle	25.5
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential	27.2
[27.120] Planetary and final drives	27.3
[27.126] Spur gear and final drives.....	27.4
Power Take-Off (PTO).....	31
[31.101] Rear mechanical control	31.1
[31.142] Front Power Take-Off (PTO) control	31.2
[31.146] Front Power Take-Off (PTO)	31.3
Brakes and controls	33

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$