

**FARMALL® 85C**  
**FARMALL® 95C**  
**FARMALL® 105C**  
**FARMALL® 115C**  
**With Hi-Lo Transmission**  
**With Mechanical or Power Shuttle Transmission**  
**Tractor**

*With Hi-Lo Transmission PIN ZxJV0xxxx and above*  
*With Mechanical or Power Shuttle Transmission PIN ZxJV5xxxx and above*

# SERVICE MANUAL

**Part number 47840678**

English

March 2015

Replaces part number 47561951





## SERVICE MANUAL

**Farmall® 105C less cab, with hi-lo transmission [ZxJV0xxxx] , Farmall® 105C less cab, with mechanical or power shuttle transmission [ZxJV5xxxx] , Farmall® 105C with cab, with hi-lo transmission [ZxJV0xxxx] , Farmall® 105C with cab, with mechanical or power shuttle transmission [ZxJV5xxxx] , Farmall® 115C less cab, with hi-lo transmission [ZxJV0xxxx] , Farmall® 115C less cab, with mechanical or power shuttle transmission [ZxJV5xxxx] , Farmall® 115C with cab, with hi-lo transmission [ZxJV0xxxx] , Farmall® 115C with cab, with mechanical or power shuttle transmission [ZxJV5xxxx] , Farmall® 85C less cab, with hi-lo transmission [ZxJV0xxxx] , Farmall® 85C less cab, with mechanical or power shuttle transmission [ZxJV5xxxx] , Farmall® 85C with cab, with hi-lo transmission [ZxJV0xxxx] , Farmall® 85C with cab, with mechanical or power shuttle transmission [ZxJV5xxxx] , Farmall® 95C less cab, with hi-lo transmission [ZxJV0xxxx] , Farmall® 95C less cab, with mechanical or power shuttle transmission [ZxJV5xxxx] , Farmall® 95C with cab, with hi-lo transmission [ZxJV0xxxx] , Farmall® 95C with cab, with mechanical or power shuttle transmission [ZxJV5xxxx]**

## Link Product / Engine

<b>Product</b>	<b>Market Product</b>	<b>Engine</b>
Farmall® 105C less cab, with mechanical or power shuttle transmission [ZxJV5xxxx]	North America	F5DFL413J*A002
Farmall® 105C with cab, with mechanical or power shuttle transmission [ZxJV5xxxx]	North America	F5DFL413J*A002
Farmall® 105C less cab, with hi-lo transmission [ZxJV0xxxx]	North America	F5DFL413A*A001
Farmall® 105C with cab, with hi-lo transmission [ZxJV0xxxx]	North America	F5DFL413A*A001
Farmall® 85C less cab, with mechanical or power shuttle transmission [ZxJV5xxxx]	North America	F5DFL413L*A002
Farmall® 85C with cab, with mechanical or power shuttle transmission [ZxJV5xxxx]	North America	F5DFL413L*A002
Farmall® 85C less cab, with hi-lo transmission [ZxJV0xxxx]	North America	F5DFL413J*A001
Farmall® 85C with cab, with hi-lo transmission [ZxJV0xxxx]	North America	F5DFL413J*A001
Farmall® 95C less cab, with mechanical or power shuttle transmission [ZxJV5xxxx]	North America	F5DFL413K*A002
Farmall® 95C with cab, with mechanical or power shuttle transmission [ZxJV5xxxx]	North America	F5DFL413K*A002
Farmall® 95C less cab, with hi-lo transmission [ZxJV0xxxx]	North America	F5DFL413K*A001
Farmall® 95C with cab, with hi-lo transmission [ZxJV0xxxx]	North America	F5DFL413K*A001

# Contents

---

## INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase .....	10.1
[10.216] Fuel tanks .....	10.2
[10.501] Exhaust Gas Recirculation (EGR) - Diesel Particulate Filter (DPF) exhaust treatment .....	10.3
[10.400] Engine cooling system .....	10.4
[10.414] Fan and drive .....	10.5
[10.310] Aftercooler.....	10.6
Clutch .....	18
[18.100] Clutch mechanical release control .....	18.1
[18.104] Clutch hydraulic release control.....	18.2
[18.110] Clutch and components .....	18.3
Transmission.....	21
[21.130] Mechanical transmission external controls.....	21.1
[21.112] Power shuttle transmission.....	21.2
[21.110] Master clutch housing .....	21.3
[21.134] Power shuttle transmission external controls .....	21.4
[21.154] Power shuttle transmission internal components .....	21.5
[21.160] Creeper .....	21.6
[21.162] Reverser .....	21.7
[21.168] Hi-Lo unit.....	21.8
[21.109] Transmission cooler and lines.....	21.9
[21.118] Transmission/Rear drive .....	21.10
[21.148] Transmission/Rear drive internal components .....	21.11
[21.AAA] Transmission generic sub-group .....	21.12
Four-Wheel Drive (4WD) system .....	23

[23.101] Mechanical control .....	23.1
[23.202] Electro-hydraulic control .....	23.2
[23.314] Drive shaft.....	23.3
<b>Front axle system .....</b>	<b>25</b>
[25.100] Powered front axle .....	25.1
[25.102] Front bevel gear set and differential .....	25.2
[25.108] Final drive hub, steering knuckles, and shafts .....	25.3
[25.400] Non-powered front axle .....	25.4
<b>Rear axle system.....</b>	<b>27</b>
[27.106] Rear bevel gear set and differential.....	27.1
[27.120] Planetary and final drives .....	27.2
[27.100] Powered rear axle.....	27.3
<b>Power Take-Off (PTO).....</b>	<b>31</b>
[31.101] Rear mechanical control .....	31.1
[31.104] Rear electro-hydraulic control.....	31.2
[31.110] One-speed rear Power Take-Off (PTO) .....	31.3
[31.114] Two-speed rear Power Take-Off (PTO) .....	31.4
[31.146] Front Power Take-Off (PTO) .....	31.5
<b>Brakes and controls .....</b>	<b>33</b>
[33.202] Hydraulic service brakes .....	33.1
[33.110] Parking brake or parking lock .....	33.2
<b>Hydraulic systems.....</b>	<b>35</b>
[35.000] Hydraulic systems.....	35.1
[35.104] Fixed displacement pump.....	35.2
[35.160] Front hitch controls and lines .....	35.3
[35.204] Remote control valves .....	35.4
[35.114] Three-point hitch control valve .....	35.5
[35.116] Three-point hitch cylinder .....	35.6

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$