

Farmall 45A
Farmall 50A
Tractor

SERVICE MANUAL

Part number 51453914

1st edition English

May 2018

© 2018 CNH Industrial (India) Pvt.Ltd. All Rights Reserved.





SERVICE MANUAL

Farmall® 45A

Farmall® 50A 50 Hp, Tier 2 Utility tractor, Two-Wheel Drive (2WD), Europe
Farmall® 50A 50 Hp, Tier 2 utility tractor, Four-Wheel Drive (4WD), Europe

Link Product / Engine

Product	Market Product	Engine
Farmall® 45A 45 Hp, Tier 2 utility tractor, Four-Wheel Drive (4WD), Europe	Europe	N844LT
Farmall® 50A 50 Hp, Tier 2 Utility tractor, Two-Wheel Drive (2WD), Europe	Europe	N844L
Farmall® 50A 50 Hp, Tier 2 utility tractor, Four-Wheel Drive (4WD), Europe	Europe	N844L

Contents

INTRODUCTION

Engine	10
[10.001] Engine and crankcase	10.1
[10.102] Pan and covers	10.2
[10.106] Valve drive and gears	10.3
[10.101] Cylinder heads	10.4
[10.105] Connecting rods and pistons.....	10.5
[10.103] Crankshaft and flywheel.....	10.6
[10.110] Balancer and damper	10.7
[10.114] Pump drives	10.8
[10.218] Fuel injection system.....	10.9
[10.254] Intake and exhaust manifolds and muffler	10.10
[10.400] Engine cooling system	10.11
[10.414] Fan and drive	10.12
[10.304] Engine lubrication system.....	10.13
[10.216] Fuel tanks	10.14
Clutch	18
[18.104] Clutch hydraulic release control.....	18.1
[18.110] Clutch and components	18.2
Transmission	21
[21.114] Mechanical transmission	21.1
[21.130] Mechanical transmission external controls.....	21.2
[21.140] Mechanical transmission internal components.....	21.3
[21.112] Power shuttle transmission.....	21.4
[21.134] Power shuttle transmission external controls	21.5
[21.154] Power shuttle transmission internal components	21.6
Four-Wheel Drive (4WD) system	23

[23.304] Four-Wheel Drive (4WD) gearbox	23.1
[23.314] Drive shaft.....	23.2
Front axle system	25
[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential	27.2
[27.120] Planetary and final drives	27.3
Power Take-Off (PTO).....	31
[31.101] Rear mechanical control	31.1
[31.114] Two-speed rear Power Take-Off (PTO)	31.2
Brakes and controls	33
[33.120] Mechanical service brakes	33.1
[33.110] Parking brake or parking lock	33.2
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2
[35.104] Fixed displacement pump.....	35.3
[35.102] Pump control valves.....	35.4
[35.350] Safety and main relief valves	35.5
[35.322] Regulated/Low pressure system	35.6
[35.204] Remote control valves	35.7
Hitches, drawbars, and implement couplings.....	37
[37.110] Rear three-point hitch	37.1
Steering.....	41

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$