
JX1080U, JX1090U, JX1100U REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL	2
SECTION 10 - ENGINE	3
SECTION 18 - CLUTCH	4
SECTION 21 - TRANSMISSIONS	5
SECTION 23 - MFD TRANSFER BOX	9
SECTION 25 - MFD AXLE	10
SECTION 27 - REAR AXLE MECHANICAL TRANSMISSION	11
SECTION 31 - POWER TAKE-OFF	12
SECTION 33 - BRAKES	13
SECTION 35 - HYDRAULIC SYSTEMS	14
SECTION 41 - STEERING	21
SECTION 44 - AXLES AND WHEELS	22
SECTION 50 - AUXILIARY UNITS	23
SECTION 55 - ELECTRICAL SYSTEMS	25
SECTION 90 - CAB, PLATFORM AND BODYWORK	35

The following pages are the collation of the contents pages from each section and chapter of the JX1080U, JX1090U, JX1100U Repair manual. Complete Repair part # 87054727.

The sections used through out all Case IH product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the JX1080U, JX1090U, JX1100U Tractors.

SECTION 00 - GENERAL

BOOK 1 - 87054728

Chapter 1 - General

CONTENTS

Section	Description	Page
	General Instructions	3
	Health and Safety	5
	Precautionary Statements	15
	Safety	16
	Ecology and the Environment	19
	Minimum Hardware Tightening Torques	20
	Federal Emissions Warranty	22
	California Emission Control Warranty Statement	23
	Filling and Topping-Up Operations	25

SECTION 10 - ENGINE

BOOK 1 - 87054728

Chapter 1 - Engine

CONTENTS

Section	Description	Page
	Specifications	3
	Tightening Torques	12
	Torque Settings with Angle	13
	Special Tools	14
	Description and Operation	15
	Sectional Views	15
	Troubleshooting	22
	Overhaul	26
10 001 10	Engine	26
	Removal	26
	Installation	43
	Disassembly	46
	Assembly	57

SECTION 10 - ENGINE

BOOK 1 - 87054728

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Checks, Measurements and Repairs	80
	Cylinder Block Liners	80
	Crankshaft	83
	Connecting Rods	85
	Pistons	87
	Camshaft and Valves	91
	Cylinder Head	95
	Oil Pressure Indicator	96
	Oil Filter	96
	Cooling System	97
	Crankshaft Front Seal	98
	Removal	98
	Installation	100
10 102 74	Crankshaft Rear Seal	101
	Removal	101
	Installation	102
10 106 12	Valve Tappet and Rocker Arm	104
	Clearance Adjustment	104
10 218 30	Fuel Injectors	107
	Removal	107
	Installation	108
10 246 14	Bosch Injection Pump	110
	Removal	110
	Installation	113
	Timing Procedure	115
	Fuel Circuit Air Bleeding	117
	Turbocharged Diesel Engine	118
10 402 10	Coolant Pump	121
	Removal	121
	Installation	122

SECTION 10 - ENGINE

BOOK 1 - 87054728

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
10 402 30	Thermostart Valve	123
	Removal	123
	Installation	124
10 406 10	Radiator	125
	Removal	125
	Installation	129
10 414 10	Coolant Pump and Alternator Drive Belts	131
	Tension Adjustment	131

SECTION 18 - CLUTCH

BOOK 1 - 87054728

Chapter 1 - Clutch

CONTENTS

Section	Description	Page
	Specifications	2
	Tightening Torques	3
	Special Tools	3
	Description and Operation	4
	Cross Sectional Views	4
	Troubleshooting	5
	Overhaul	6
	Inspection and Adjustment	6
	12" Clutch	6
	Clutch Pedal	7
18 110 10	Clutch	8
	Removal	8
	Installation	9
	Adjust Release Levers	11

SECTION 21 - TRANSMISSIONS

BOOK 2 - 87054729

Chapter 1 - 12 x 12 Synchronized Mechanical Shuttle Transmission

CONTENTS

Section	Description	Page
	12 x 12 Synchronized Mechanical Shuttle Transmission	3

SECTION 21 - TRANSMISSIONS

BOOK 2 - 87054729

Chapter 2 - Reverser (12 x 12 Synchronized Mechanical Shuttle Transmissions)

CONTENTS

Section	Description	Page
	Specifications	2
	Tightening Torques	3
	Special Tools	4
	Sectional Views	4
	Description and Operation	6
	Troubleshooting	6
	Overhaul	7
21 110 85	Clutch-Reverser Casing	7
	Removal	7
	Disassembly	7
	Assembly	10
	Installation	10

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$