

Magnum™ 250
Magnum™ 280
Magnum™ 310
Magnum™ 340
Magnum™ 380
Magnum™ 310 Rowtrac™
Magnum™ 340 Rowtrac™
Magnum™ 380 Rowtrac™
Continuously Variable Transmission (CVT)
Tractor
PIN ZERF08100 and above

SERVICE MANUAL

Part number 47748111

1st edition English
October 2014

CASE II
AGRICULTURE



SERVICE MANUAL

Magnum™ 250 696110723 CVT TIER 4B [ZERF08100 -] , Magnum™ 280 696110733 CVT TIER 4B [ZERF08100 -] , Magnum™ 310 696110743 CVT TIER 4B [ZERF08100 -] , Magnum™ 310 Rowtrac™ 696110773 CVT TIER 4B [ZERF08100 -] , Magnum™ 340 696110753 CVT TIER 4B [ZERF08100 -] , Magnum™ 340 Rowtrac™ 696110783 CVT TIER 4B [ZERF08100 -] , Magnum™ 380 696110763 CVT TIER 4B [ZERF08100 -] , Magnum™ 380 Rowtrac™ 696110793 CVT TIER 4B [ZERF08100 -]

Link Product / Engine

Product	Market Product	Engine
Magnum™ 250 696110723 CVT TIER 4B [ZERF08100 -]	North America	F2CFE613G*B001
Magnum™ 280 696110733 CVT TIER 4B [ZERF08100 -]	North America	F2CFE614G*B002
Magnum™ 310 696110743 CVT TIER 4B [ZERF08100 -]	North America	F2CFE614D*B002
Magnum™ 340 696110753 CVT TIER 4B [ZERF08100 -]	North America	F2CFE614C*B002
Magnum™ 380 696110763 CVT TIER 4B [ZERF08100 -]	North America	F2CFE614A*B002
Magnum™ 310 Rowtrac™ 696110773 CVT TIER 4B [ZERF08100 -]	North America	F2CFE614D*B002
Magnum™ 340 Rowtrac™ 696110783 CVT TIER 4B [ZERF08100 -]	North America	F2CFE614C*B002
Magnum™ 380 Rowtrac™ 696110793 CVT TIER 4B [ZERF08100 -]	North America	F2CFE614A*B002

Contents

INTRODUCTION

Engine	10
[10.001] Engine and crankcase	10.1
[10.101] Cylinder heads	10.2
[10.202] Air cleaners and lines	10.3
[10.216] Fuel tanks	10.4
[10.218] Fuel injection system.....	10.5
[10.304] Engine lubrication system.....	10.6
[10.310] Aftercooler.....	10.7
[10.400] Engine cooling system	10.8
[10.414] Fan and drive	10.9
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment.....	10.10
Power coupling	19
[19.100] Drive shaft.....	19.1
[19.110] Flywheel damper	19.2
[19.120] Drive shaft shield assembly	19.3
Transmission	21
[21.504] Continuously Variable Transmission (CVT)	21.1
[21.505] Continuously Variable Transmission (CVT) external controls.....	21.2
[21.506] Continuously Variable Transmission (CVT) lubrication system	21.3
[21.507] Continuously Variable Transmission (CVT) internal components.....	21.4
[21.900] Hydraulic pump drive.....	21.5
Four-Wheel Drive (4WD) system	23
[23.202] Electro-hydraulic control	23.1
[23.314] Drive shaft.....	23.2
Front axle system	25

[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
[25.122] Axle suspension control.....	25.4
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential.....	27.2
[27.610] Rear axle track yoke assembly	27.3
Power Take-Off (PTO).....	31
[31.104] Rear electro-hydraulic control.....	31.1
[31.110] One-speed rear Power Take-Off (PTO)	31.2
[31.114] Two-speed rear Power Take-Off (PTO)	31.3
[31.146] Front Power Take-Off (PTO)	31.4
Brakes and controls	33
[33.110] Parking brake or parking lock	33.1
[33.202] Hydraulic service brakes	33.2
[33.220] Trailer brake hydraulic control.....	33.3
[33.224] Trailer brake pneumatic control	33.4
[33.240] Emergency brake	33.5
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.102] Pump control valves.....	35.2
[35.106] Variable displacement pump	35.3
[35.114] Three-point hitch control valve	35.4
[35.124] Three-point hitch hydraulic adjustment	35.5
[35.204] Remote control valves	35.6
[35.300] Reservoir, cooler, and filters.....	35.7
[35.304] Combination pump units	35.8

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$