


Service Manual B3.9, B4.5, B4.5 RGT, and B5.9 Volume 2

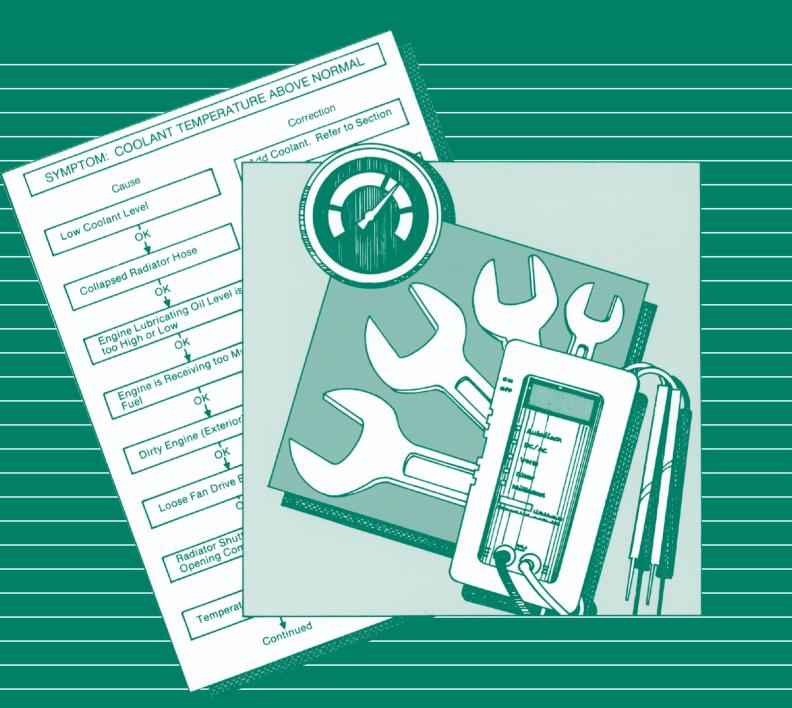










## Service Manual B3.9, B4.5, B4.5 RGT, and B5.9 Volume 2

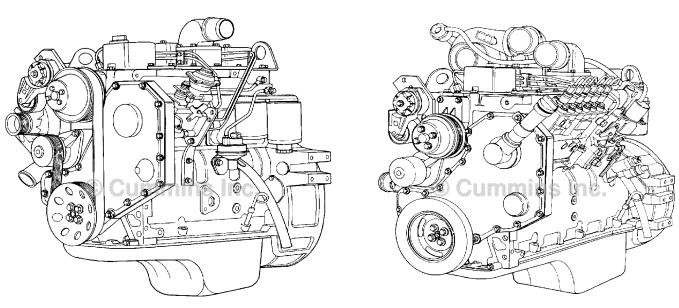

© Cumnos Inc.

© Cumnos Inc.

**B4.5 RGT** 

00900463

## Foreword

This manual contains instructions for troubleshooting and repairing this engine in the chassis, complete rebuild procedures and specifications. Disassembly, cleaning, inspection, and assembly instructions are included. A listing of accessory and component suppliers is located in Section M - Component Manufacturers. Suppliers can be contacted directly for any information not covered in this manual.

Read and follow all safety instructions. Refer to the WARNING in the General Safety Instructions in Section i - Introduction.

The manual is organized to guide a service technician through the logical steps of identifying and correcting problems related to the engine. This manual does not cover vehicle or equipment problems. Consult the vehicle or equipment manufacturer for repair procedures.

The repair procedures in this manual are based on the engine or component removed from chassis. Some rebuild procedures require the use of special service tools. Make sure the correct tools are used as described in the procedures.

When a specific brand name, number, or special tool is referenced in this manual, an equivalent product can be used in place of the recommended item.

A series of specific service manuals (for example: Troubleshooting and Repair, Specifications, and Alternative Repair) are available and can be ordered by Contacting your local area Cummins Regional office. A Cummins Regional office listing is located in Service Literature (Section L).

Cummins Inc. encourages the user of this manual to report errors, omissions, and recommendations for improvement. Please use the postage paid, pre-addressed Literature Survey Form in the back of this manual for communicating your comments.

The specifications and rebuild information in this manual is based on the information in effect at the time of printing. Cummins Inc. reserves the right to make any changes at any time without obligation. If differences are found between your engine and the information in this manual, contact a Cummins Authorized Repair Location or call 1-800-DIESELS (1-800-343-7357) toll free in the U.S. and Canada.

The latest technology and the highest quality components are used to manufacture Cummins engines. When replacement parts are needed, we recommend using only genuine Cummins or ReCon® exchange parts.

## **Table of Contents**

|                                     | Section |
|-------------------------------------|---------|
| Introduction                        | i       |
| Fuel System - Group 05              | 5       |
| Injectors and Fuel Lines - Group 06 | 6       |
| Lubricating Oil System - Group 07   | 7       |
| Cooling System - Group 08           | 8       |
| Drive Units - Group 09              | 9       |
| Air Intake System - Group 10        | 10      |
| Exhaust System - Group 11           | 11      |
| Compressed Air System - Group 12    | 12      |
| Electrical Equipment - Group 13     | 13      |
| Engine Testing - Group 14           | 14      |
| Mounting Adaptations - Group 16     | 16      |
| Miscellaneous - Group 17            | 17      |
| Service Literature                  | L       |
| Specifications                      | ٧       |

It's a preview. You can download the full file by clicking the link below.

## https://shopservicemanual.com/

Service Manuals from 2\$