

FARMALL® 75N / FARMALL® 85N / FARMALL® 95N / FARMALL® 105N / FARMALL® 105V Tier 3

*FARMALL® 75N with cab PIN Z8JF19102 - ZCJF10907; FARMALL® 75N with cab PIN ZCJF06107 and above;
FARMALL® 75N without cab PIN Z9JF01865 - ZCJF07697; FARMALL® 75N without cab PIN ZCJF07813 and above;
FARMALL® 85N with cab PIN Z8JF17086 - ZCJF09425; FARMALL® 85N with cab PIN ZCJF08828 and above;
FARMALL® 85N without cab PIN Z9JF01936 - ZCJF10868; FARMALL® 85N without cab PIN ZCJF16077 and above;
FARMALL® 95N with cab PIN Z9JF00469 - ZCJF10732; FARMALL® 95N with cab PIN ZCJF13045 and above;
FARMALL® 95N without cab PIN Z9JF01090 - ZCJF05141; FARMALL® 95N without cab PIN ZCJF15989 and above;
FARMALL® 105N with cab PIN ZBJF20417 and above; FARMALL® 105N without cab PIN ZCJF16900 and above;
FARMALL® 105V with cab PIN ZBJF20562 and above; FARMALL® 105V without cab PIN ZDJF09419 and above*

Tractor

SERVICE MANUAL

Part number 47888397

1st edition English

July 2016

CASE II
AGRICULTURE



SERVICE MANUAL

Farmall® 105N With cab [ZBJF20417 -], Farmall® 105N Without cab [ZCJF16900 -], Farmall® 105V With Cab [ZBJF20562 -], Farmall® 105V Without cab [ZDJF09419 -], Farmall® 75N With cab - Model Year 2012 [ZCJF06107 -], Farmall® 75N With cab [Z8JF19102 - ZCJF10907], Farmall® 75N Without cab [Z9JF01865 - ZCJF07697], Farmall® 75N Without cab - Model Year 2012 [ZCJF07813 -], Farmall® 85N With cab - Model Year 2012 [ZCJF08828 -], Farmall® 85N With cab [Z8JF17086 - ZCJF09425], Farmall® 85N Without cab - Model Year 2012 [ZCJF16077 -], Farmall® 85N Without cab [Z9JF01936 - ZCJF10868], Farmall® 95N With cab - Model Year 2012 [ZCJF13045 -], Farmall® 95N With cab [Z9JF00469 - ZCJF10732], Farmall® 95N Without cab - Model Year 2012 [ZCJF15989 -], Farmall® 95N Without cab [Z9JF01090 - ZCJF05141]

Link Product / Engine

| Product | Market Product | Engine |
|--|-----------------------|---------------|
| Farmall® 105N With cab [ZBJF20417 -] | North America | F4CE9484 |
| Farmall® 105N Without cab [ZCJF16900 -] | North America | F4CE9484 |
| Farmall® 75N With cab [Z8JF19102 - ZCJF10907] | North America | F5AE9484B |
| Farmall® 75N Without cab [Z9JF01865 - ZCJF07697] | North America | F5AE9484B |
| Farmall® 75N With cab - Model Year 2012 [ZCJF06107 -] | North America | F5AE9484B |
| Farmall® 75N Without cab - Model Year 2012 [ZCJF07813 -] | North America | F5AE9484B |
| Farmall® 85N With cab [Z8JF17086 - ZCJF09425] | North America | F5AE9484G |
| Farmall® 85N Without cab [Z9JF01936 - ZCJF10868] | North America | F5AE9484G |
| Farmall® 85N With cab - Model Year 2012 [ZCJF08828 -] | North America | F5AE9484G |
| Farmall® 85N Without cab - Model Year 2012 [ZCJF16077 -] | North America | F5AE9484G |
| Farmall® 95N With cab [Z9JF00469 - ZCJF10732] | North America | F4CE9484 |
| Farmall® 95N Without cab [Z9JF01090 - ZCJF05141] | North America | F4CE9484 |
| Farmall® 95N With cab - Model Year 2012 [ZCJF13045 -] | North America | F4CE9484 |
| Farmall® 95N Without cab - Model Year 2012 [ZCJF15989 -] | North America | F4CE9484 |
| Farmall® 105V With Cab [ZBJF20562 -] | North America | F4CE9484 |
| Farmall® 105V Without cab [ZDJF09419 -] | North America | F4CE9484 |

Contents

INTRODUCTION

| | |
|---|-------|
| Engine..... | 10 |
| [10.001] Engine and crankcase | 10.1 |
| Clutch | 18 |
| [18.100] Clutch mechanical release control | 18.1 |
| [18.104] Clutch hydraulic release control..... | 18.2 |
| [18.110] Clutch and components | 18.3 |
| Transmission..... | 21 |
| [21.114] Mechanical transmission | 21.1 |
| [21.130] Mechanical transmission external controls..... | 21.2 |
| [21.140] Mechanical transmission internal components..... | 21.3 |
| [21.112] Power shuttle transmission..... | 21.4 |
| [21.134] Power shuttle transmission external controls | 21.5 |
| [21.154] Power shuttle transmission internal components | 21.6 |
| [21.145] Gearbox internal components..... | 21.7 |
| [21.160] Creeper | 21.8 |
| [21.162] Reverser | 21.9 |
| [21.168] Hi-Lo unit..... | 21.10 |
| [21.182] Differential..... | 21.11 |
| Four-Wheel Drive (4WD) system | 23 |
| [23.202] Electro-hydraulic control | 23.1 |
| [23.304] Four-Wheel Drive (4WD) gearbox | 23.2 |
| [23.314] Drive shaft..... | 23.3 |
| Front axle system | 25 |
| [25.100] Powered front axle | 25.1 |
| [25.102] Front bevel gear set and differential | 25.2 |

| | |
|---|-----------|
| [25.108] Final drive hub, steering knuckles, and shafts | 25.3 |
| [25.122] Axle suspension control | 25.4 |
| [25.310] Final drives | 25.5 |
| [25.400] Non-powered front axle | 25.6 |
| Rear axle system..... | 27 |
| [27.100] Powered rear axle..... | 27.1 |
| [27.106] Rear bevel gear set and differential | 27.2 |
| [27.120] Planetary and final drives | 27.3 |
| [27.126] Spur gear and final drives | 27.4 |
| Power Take-Off (PTO)..... | 31 |
| [31.101] Rear mechanical control | 31.1 |
| Brakes and controls | 33 |
| [33.202] Hydraulic service brakes | 33.1 |
| [33.110] Parking brake or parking lock | 33.2 |
| [33.220] Trailer brake hydraulic control..... | 33.3 |
| Hydraulic systems..... | 35 |
| [35.000] Hydraulic systems..... | 35.1 |
| [35.300] Reservoir, cooler, and filters..... | 35.2 |
| [35.104] Fixed displacement pump | 35.3 |
| [35.204] Remote control valves | 35.4 |
| [35.600] High flow hydraulics | 35.5 |
| [35.100] Main lift system..... | 35.6 |
| [35.114] Three-point hitch control valve | 35.7 |
| [35.116] Three-point hitch cylinder | 35.8 |
| Hitches, drawbars, and implement couplings..... | 37 |
| [37.110] Rear three-point hitch | 37.1 |
| [37.108] Rear three-point hitch external controls | 37.2 |
| Steering..... | 41 |

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$