Service Manual



506C, 506CHL, 508C Loadalls

Section 1 - General Information

Section 2 - Care and Safety

Section 3 - Routine Maintenance

Section A - Attachments

Section B - Body and Framework

Section C - Electrics

Section D - Controls


Section E - Hydraulics

Section F - Transmissions

Section G - Brakes

Section H - Steering

Section K - Engine

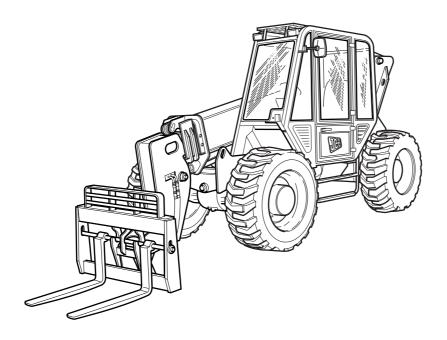

Publication No. **9803/3640U-8**



Copyright © 2004 JCB SERVICE. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any other means electronic, mechanical, photocopying or otherwise, without prior permission from JCB SERVICE.

World Class

Section 1



General Information

Service Manual - 506C, 506CHL, 508C Loadalls

Section 1 - General Information

Section 2 - Care and Safety

Section 3 - Routine Maintenance

Section A - Attachments

Section B - Body and Framework

Section C - Electrics

Section D - Controls


Section E - Hydraulics

Section F - Transmissions

Section G - Brakes

Section H - Steering

Section K - Engine

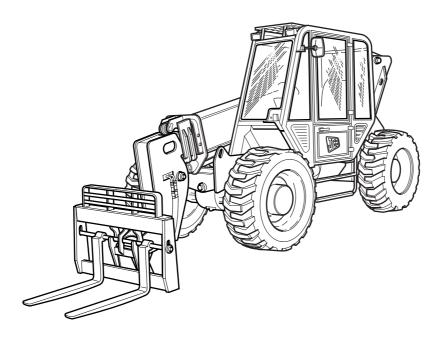

Publication No. **9803/3640U-8**



Copyright © 2004 JCB SERVICE. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any other means, electronic, mechanical, photocopying or otherwise, without prior permission from JCB SERVICE.

World Class



Section 1 - General Information

Notes:		



Section 1 - General Information

Contents Page No.
Introduction
About This Manual 1 - 1
Machine Model and Serial Number1 - 1
Using the Service Manual1 - 1
Units of Measurement1 - 1
Section Numbering1 - 1
Left Side, Right Side1 - 2
Using the Machine1 - 2
Cab/Canopy1 - 2
Cross References1 - 2
Identifying Your Machine 1 - 3
Machine Identification Plate1 - 3
Component Identification Plates1 - 5
Standard Torque Settings
Zinc Plated Fasteners and Dacromet Fasteners
Introduction
Bolts and Screws
Hydraulic Connections
'O' Ring Face Seal System1 - 12
'Torque Stop' Hose System1 - 15
Service Tools
Numerical List
Tool Detail Reference
Section B - Frame and Bodywork1 - 19
Section C - Electrics1 - 23
Section E - Hydraulics1 - 24
Section F - Transmission1 - 29
Section H - Steering1 - 30
Section K - Engine1 - 31
Service Consumables
Sealing and Retaining Compounds
Terms and Definitions
Colour Coding 1 - 33
Hydraulic Schematic Colour Codes 1 - 33



Page left intentionally blank

1-ii 1-ii

It's a preview. You can download the full file by clicking the link below.

https://shopservicemanual.com/

Service Manuals from 2\$