

Shop Manual

D51EXi-24

D51PXi-24

CRAWLER DOZER

SERIAL NUMBERS **D51EXi-24 B20001 and up**
 D51PXi-24 B20001 and up

ENGINE **4D107E-3**

This material is proprietary to Komatsu America Corp. and is not to be reproduced, used, or disclosed except in accordance with written authorization from Komatsu America Corp.

It is our policy to improve our products whenever it is possible and practical to do so. We reserve the right to make changes or improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, revisions may be made to this publication. It is recommended that customers contact their distributor for information on the latest revision.

Copyright 2017 Komatsu
Printed in U.S.A.
Komatsu America Corp.

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD	00-1
ABBREVIATION LIST	00-20
FOREWORD, SAFETY, BASIC INFORMATION	00-26
HOW TO READ THE SHOP MANUAL	00-26
SAFETY NOTICE FOR OPERATION	00-28
PRECAUTIONS TO PREVENT FIRE	00-36
ACTIONS IF FIRE OCCURS	00-38
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS	00-39
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS	00-40
PRECAUTIONS FOR DEF	00-41
STORE AdBlue/DEF	00-42
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-43
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS	00-46
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT	00-52
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-54
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-55
PRACTICAL USE OF KOMTRAX	00-56
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER	00-57
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-61
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-65
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-66
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-68
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-69
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-71
HOW TO READ ELECTRICAL WIRE CODE	00-72
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD	00-76
STANDARD TIGHTENING TORQUE TABLE	00-79
CONVERSION TABLE	00-86
01 SPECIFICATIONS	01-1
CONTENTS	01-2
ABBREVIATION LIST	01-3
SPECIFICATIONS	01-9
SPECIFICATION DRAWING	01-9
SPECIFICATIONS	01-13
WEIGHT TABLE	01-24
FUEL, COOLANT, LUBRICANTS (FOR NORTH AMERICA)	01-28
FUEL, COOLANT, LUBRICANTS (FOR EUROPEAN UNION)	01-30
10 STRUCTURE AND FUNCTION	10-1
CONTENTS	10-2
ABBREVIATION LIST	10-5
UREA SCR SYSTEM	10-11
LAYOUT DRAWING OF UREA SCR SYSTEM	10-11
UREA SCR SYSTEM DIAGRAM	10-13
FUNCTION OF UREA SCR SYSTEM	10-14
COMPONENT PARTS OF UREA SCR SYSTEM	10-32
BOOT-UP SYSTEM	10-41
LAYOUT DRAWING OF BOOT-UP SYSTEM	10-41
SYSTEM OPERATING LAMP SYSTEM	10-42
BATTERY DISCONNECT SWITCH	10-44
ENGINE SYSTEM	10-45
LAYOUT DRAWING OF ENGINE SYSTEM	10-45
ENGINE CONTROL SYSTEM	10-47
AUTOMATIC IDLE STOP SYSTEM	10-53
COMPONENT PARTS OF ENGINE SYSTEM	10-56
COOLING SYSTEM	10-73

LAYOUT DRAWING OF COOLING SYSTEM	10-73
COOLING FAN CONTROL SYSTEM.....	10-75
COMPONENT PARTS OF COOLING SYSTEM.....	10-78
CONTROL SYSTEM.....	10-87
LAYOUT DRAWING OF CONTROL SYSTEM	10-87
MACHINE MONITOR SYSTEM	10-88
KOMTRAX SYSTEM.....	10-89
COMPONENT PARTS OF CONTROL SYSTEM.....	10-90
HYDRAULIC SYSTEM.....	10-122
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-122
CLSS	10-123
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-126
POWER TRAIN SYSTEM	10-158
LAYOUT DRAWING OF HST SYSTEM	10-158
OPERATION OF HST SYSTEM.....	10-159
STEERING AND BRAKE CONTROL SYSTEM	10-161
HST CONTROL SYSTEM.....	10-163
PARKING BRAKE CONTROL SYSTEM	10-174
COMPONENT PARTS OF POWER TRAIN SYSTEM.....	10-177
WORK EQUIPMENT SYSTEM	10-213
WORK EQUIPMENT CONTROL	10-213
LAYOUT DRAWING OF FRONT WORK EQUIPMENT	10-215
LAYOUT OF FIXED MULTI-SHANK RIPPER.....	10-216
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-217
ICT SYSTEM	10-233
LAYOUT DRAWING OF ICT SYSTEM.....	10-233
ICT CONTROL SYSTEM DIAGRAM.....	10-235
BLADE CONTROL SYSTEM	10-237
SMOOTH START SYSTEM	10-243
SLIP CONTROL SYSTEM	10-245
ASSIST CONTROL SYSTEM	10-246
HST SPEED RANGE CONTROL SYSTEM	10-248
COMPONENT PARTS OF ICT SYSTEM	10-250
UNDERCARRIAGE AND FRAME.....	10-272
MAIN FRAME	10-272
SUSPENSION	10-273
TRACK FRAME AND IDLER CUSHION	10-276
WORK EQUIPMENT.....	10-278
STRUCTURE OF FRONT WORK EQUIPMENT.....	10-278
STRUCTURE OF FIXED MULTI-SHANK RIPPER.....	10-279
CAB AND ITS ATTACHMENTS	10-280
ROPS CAB	10-280
CAB MOUNT	10-282
20 STANDARD VALUE TABLE	20-1
CONTENTS	20-2
ABBREVIATION LIST	20-3
STANDARD VALUE TABLE FOR ENGINE	20-9
STANDARD VALUE TABLE FOR ENGINE: D51EXI-24	20-9
STANDARD VALUE TABLE FOR ENGINE: D51PXI-24	20-13
STANDARD VALUE TABLE FOR MACHINE.....	20-17
STANDARD VALUE TABLE FOR MACHINE: D51EXI-24	20-17
STANDARD VALUE TABLE FOR MACHINE: D51PXI-24	20-34
MACHINE POSTURE AND PROCEDURE FOR MEASURING PERFORMANCE	20-49
30 TESTING AND ADJUSTING	30-1
CONTENTS	30-2
ABBREVIATION LIST	30-6
RELATED INFORMATION ON TESTING AND ADJUSTING	30-12
TOOLS FOR TESTING AND ADJUSTING.....	30-12

SKETCH OF TOOLS FOR TESTING AND ADJUSTING	30-19
ENGINE AND COOLING SYSTEM.....	30-23
TEST ENGINE SPEED	30-23
TEST BOOST PRESSURE.....	30-25
TEST EXHAUST GAS COLOR.....	30-27
TEST AND ADJUST VALVE CLEARANCE.....	30-29
TEST COMPRESSION PRESSURE.....	30-31
TEST BLOWBY PRESSURE	30-36
TEST ENGINE OIL PRESSURE.....	30-38
TEST FUEL PRESSURE	30-39
TEST FUEL DISCHARGE, RETURN AND LEAKAGE	30-44
BLEED AIR FROM FUEL SYSTEM	30-50
TEST FUEL CIRCUIT FOR LEAKAGE	30-51
HANDLE CYLINDER CUT-OUT MODE OPERATION.....	30-53
HANDLE NO-INJECTION CRANKING OPERATION.....	30-54
TEST KDOC, SCR AND MUFFLER STACK FOR LOOSENESS AND DAMAGE	30-55
TEST INSTALLED CONDITION OF CYLINDER HEADS AND MANIFOLDS.....	30-56
TEST ENGINE PIPING FOR DAMAGE AND LOOSENESS.....	30-57
WRITE ASH IN SOOT ACCUMULATION CORRECTION TO ENGINE CONTROLLER	30-58
TEST SCR RELATED FUNCTIONS.....	30-59
CLEAN AdBlue/DEF TANK	30-87
CLEAN AdBlue/DEF TANK MOUNTING PORTION	30-91
POWER TRAIN.....	30-92
TEST AND ADJUST HST OIL PRESSURE	30-92
BLEED AIR FROM HST PUMP	30-97
TEST OUTLET PRESSURE OF SOLENOID VALVE	30-99
TEST TRAVEL DEVIATION	30-103
TEST BRAKE PERFORMANCE SIMPLY	30-105
TEST AND ADJUST DECELERATION/BRAKE PEDAL.....	30-106
ADJUST PARKING BRAKE LEVER.....	30-110
MOVE MACHINE WHEN IT CANNOT TRAVEL.....	30-112
UNDERCARRIAGE AND FRAME.....	30-115
CHECK AND ADJUST IDLER CLEARANCE	30-115
TESTING SPROCKET WEAR	30-117
TEST AND ADJUST TRACK TENSION.....	30-118
HYDRAULIC SYSTEM.....	30-120
RELEASE REMAINING PRESSURE FROM HYDRAULIC SYSTEM.....	30-120
TEST AND ADJUST WORK EQUIPMENT OIL PRESSURES	30-121
TEST AND ADJUST OIL PRESSURE OF CONTROL CIRCUIT.....	30-124
TEST OUTLET PRESSURE OF EPC SOLENOID VALVE	30-126
BLEED AIR FROM WORK EQUIPMENT AND COOLING FAN PUMP	30-128
TEST COOLING FAN SPEED	30-129
TEST COOLING FAN CIRCUIT OIL PRESSURE	30-130
TEST THE PARTS CAUSING HYDRAULIC DRIFT IN WORK EQUIPMENT.....	30-132
TEST INTERNAL OIL LEAKAGE OF WORK EQUIPMENT CYLINDER	30-135
BLEED AIR FROM WORK EQUIPMENT CYLINDERS.....	30-138
WORK EQUIPMENT.....	30-139
ADJUST WORK EQUIPMENT LOCK LEVER.....	30-139
ELECTRICAL SYSTEM	30-141
SET AND OPERATE MACHINE MONITOR.....	30-141
METHOD FOR STARTING UP KOMTRAX TERMINAL	30-268
ADJUSTMENT WHEN HST CONTROLLER HAS BEEN REPLACED	30-273
ADJUSTMENT WHEN ELECTRIC OR HYDRAULIC DEVICE HAS BEEN REPLACED.....	30-279
ADJUST REARVIEW CAMERA ANGLE	30-281
HANDLE VOLTAGE CIRCUIT OF ENGINE CONTROLLER	30-282
HANDLE BATTERY DISCONNECT SWITCH	30-283
TEST DIODES	30-284
ICT SYSTEM	30-285

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$