

Shop Manual

HYDRAULIC
EXCAVATOR

HB215LC-2

SERIAL NUMBERS 50001 and up

Hybrid

KOMATSU

SHOP MANUAL

HYDRAULIC EXCAVATOR

HB215LC-2

Model Serial Number

HB215LC-2 50001 and up

00 Index and foreword

Index (ALL-0310-001-A-00-A)

| | |
|---|-------|
| 00 Index and foreword | 00-1 |
| Index | 00-2 |
| Foreword, safety and general information | 00-16 |
| Important safety notice (Hybrid) | 00-16 |
| How to read the shop manual | 00-23 |
| Explanation of terms for maintenance standard | 00-25 |
| Handling equipment of fuel system devices | 00-27 |
| Handling of intake system parts | 00-28 |
| Handling of hydraulic equipment | 00-29 |
| Method of disconnecting and connecting of push-pull type coupler | 00-31 |
| Handling of electrical equipment | 00-34 |
| How to read electric wire code (Hybrid) | 00-42 |
| Precautions when performing operation | 00-47 |
| Practical use of KOMTRAX | 00-52 |
| Handling hybrid components and high voltage wiring harness | 00-53 |
| Standard tightening torque table | 00-56 |
| List of abbreviation | 00-62 |
| Conversion table | 00-67 |
| 01 Specification | 01-1 |
| Table of contents | 01-2 |
| Specifications | 01-3 |
| Specification drawing | 01-3 |
| Working range drawings | 01-4 |
| Specifications | 01-5 |
| Weight table | 01-9 |
| Table of fuel, coolant, and lubricants | 01-11 |
| 10 Structure and function | 10-1 |
| Table of contents | 10-2 |
| Engine and cooling system | 10-3 |
| Engine related parts | 10-3 |
| VFT | 10-5 |
| EGR system piping drawing | 10-9 |
| EGR system circuit diagram | 10-11 |
| EGR valve | 10-12 |
| EGR cooler | 10-14 |
| KCCV layout drawing | 10-16 |
| KCCV ventilator | 10-18 |
| KDOC muffler | 10-20 |
| Cooling system | 10-22 |
| Hybrid system | 10-24 |
| Outline of hybrid system | 10-24 |
| Configuration of hybrid system | 10-25 |
| Protective function of hybrid component | 10-26 |
| Protection function for workers when disassembling hybrid component | 10-28 |
| Cooling system of hybrid component | 10-30 |
| Interlock function | 10-31 |
| Motor-generator | 10-32 |
| Electric swing motor | 10-34 |
| Electric control unit | 10-36 |
| High voltage wiring harness (power cable) | 10-37 |
| Water pump | 10-38 |
| Power train | 10-39 |
| Power train system | 10-39 |
| Swing circle | 10-41 |
| Swing machinery with swing brake | 10-42 |
| Final drive | 10-44 |
| Undercarriage and frame | 10-46 |
| Track frame and idler cushion | 10-46 |

| | |
|---|--------|
| Hydraulic system | 10-48 |
| Hydraulic component layout | 10-48 |
| Valve control | 10-50 |
| Hydraulic tank | 10-52 |
| CLSS | 10-54 |
| Main pump | 10-59 |
| Control valve | 10-89 |
| Travel motor | 10-144 |
| PPC valve | 10-157 |
| Solenoid valve | 10-180 |
| Attachment circuit selector valve (for high pressure circuit) | 10-183 |
| Attachment circuit selector valve (for low pressure circuit) | 10-185 |
| Center swivel joint | 10-188 |
| Accumulator | 10-190 |
| Work equipment | 10-191 |
| Work equipment | 10-191 |
| Work equipment shim | 10-192 |
| Bucket play adjustment shim | 10-193 |
| Cab and its attachments | 10-194 |
| Cab mount and cab tipping stopper | 10-194 |
| ROPS cab | 10-195 |
| Electrical system | 10-196 |
| Electrical control system | 10-196 |
| Machine monitor system | 10-253 |
| KOMTRAX system | 10-277 |
| Sensor | 10-280 |
| 20 Standard value tables | 20-1 |
| Table of contents | 20-2 |
| Standard service value table | 20-3 |
| Standard value table for engine | 20-3 |
| Standard value table for machine | 20-5 |
| Standard value table for electrical system | 20-20 |
| 30 Testing and adjusting | 30-1 |
| Table of contents | 30-2 |
| Related information on testing and adjusting | 30-3 |
| Tools for testing and adjusting | 30-3 |
| Sketch of tools for testing and adjusting | 30-6 |
| Engine and cooling system | 30-8 |
| Testing engine speed | 30-8 |
| Testing boost pressure | 30-10 |
| Testing exhaust gas color | 30-13 |
| Testing and adjusting valve clearance | 30-14 |
| Testing compression pressure | 30-17 |
| Testing blowby pressure | 30-21 |
| Testing engine oil pressure | 30-22 |
| Testing fuel pressure | 30-23 |
| Testing fuel discharge, return and leakage | 30-28 |
| Bleeding air from fuel system | 30-30 |
| Testing fuel circuit for leakage | 30-32 |
| Handling cylinder cutout mode operation | 30-33 |
| Handling no-injection cranking operation | 30-34 |
| Testing and adjusting air conditioner compressor belt tension | 30-35 |
| Replacing fan belt | 30-36 |
| Hybrid system | 30-37 |
| Precautions related to hybrid equipment | 30-37 |
| Bleeding air from hybrid cooling system | 30-38 |
| Testing water pressure of hybrid coolant | 30-40 |
| Testing swing parking brake | 30-42 |
| Cleaning and replacing oil filter of electric swing motor | 30-43 |

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$