

Shop Manual

HD785-7

DUMP TRUCK

SERIAL NUMBERS **A10001 & UP**

KOMATSU[®]

DUMP TRUCK

HD785-7

Machine model	Serial number
HD785-7	A10001 and up

00 Index and foreword

Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN01274-12
00 Index and foreword	SEN01275-12
Index	SEN01276-12 ●
Foreword and general information	SEN01277-04
01 Specification	SEN01278-03
Specification and technical data	SEN01279-03
10 Structure, function and maintenance standard	SEN01280-07
Engine and cooling system	SEN01281-01
Power train, Part 1	SEN01282-03
Power train, Part 2	SEN01283-01
Steering system	SEN01284-01
Brake system	SEN01285-04 ●
Undercarriage and frame	SEN01286-02
Hydraulic system	SEN01287-03
Work equipment (Body)	SEN04681-00
Cab and its attachments	SEN01288-01
Electrical system, Part 1	SEN01289-01
Electrical system, Part 2	SEN01290-05 ●
Electrical system, Part 3	SEN01291-03
Electrical system, Part 4	SEN01292-02
20 Standard value table	SEN01293-01
Standard service value table	SEN01769-01
30 Testing and adjusting	SEN01294-04
Testing and adjusting, Part 1	SEN01770-02 ●
Testing and adjusting, Part 2	SEN01771-04 ●
Testing and adjusting, Part 3	SEN01772-03
Testing and adjusting, Part 4	SEN01773-02
Testing and adjusting, Part 5	SEN01774-03
40 Troubleshooting	SEN01295-03
Failure code table and fuse locations	SEN01936-02

General information on troubleshooting	SEN01937-03
Troubleshooting by failure code, Part 1	SEN01938-01
Troubleshooting by failure code, Part 2	SEN01939-02
Troubleshooting by failure code, Part 3	SEN01940-02
Troubleshooting by failure code, Part 4	SEN01941-02
Troubleshooting by failure code, Part 5	SEN01942-02
Troubleshooting by failure code, Part 6	SEN01943-02
Troubleshooting by failure code, Part 7	SEN01944-01
Troubleshooting by failure code, Part 8	SEN01945-02
Troubleshooting by failure code, Part 9	SEN01946-02
Troubleshooting by failure code, Part 10	SEN01947-01
Troubleshooting of electrical system (E-mode)	SEN01948-03
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN01949-01
Troubleshooting of engine (S-mode)	SEN01950-01
50 Disassembly and assembly	SEN01296-04
General information on disassembly and assembly	SEN01951-03
Engine and cooling system	SEN01952-02
Power train, Part 1	SEN01953-02
Power train, Part 2	SEN02106-03
Steering system	SEN04641-00
Brake system	SEN04642-01
Undercarriage and frame	SEN04643-01
Hydraulic system	SEN04644-00
Body	SEN04645-00
Cab and its attachments	SEN04646-00
Electrical system	SEN04647-01
90 Diagrams and drawings	SEN01297-06
Hydraulic diagrams and drawings	SEN01298-03
Electrical diagrams and drawings	SEN01299-06

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$