

# Shop Manual

HYDRAULIC  
EXCAVATOR

**PC1250 -8**

**PC1250SP-8**

**PC1250LC -8**

SERIAL NUMBERS	PC1250- 30001	and up
	PC1250SP- 30001	
	PC1250LC- 30001	

**ecot3**

**KOMATSU**



---

# HYDRAULIC EXCAVATOR

**PC1250-8**  
**PC1250SP-8**  
**PC1250LC-8**

**Machine model      Serial number**

PC1250-8	30001 and up
PC1250SP-8	30001 and up
PC1250LC-8	30001 and up

---

## 00 Index and foreword

### Index

---

---

Composition of shop manual .....	2
Table of contents .....	4

## Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tab No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs .....	SEN00889-17
00 Index and foreword .....	SEN00890-17
Index .....	SEN00891-17 ●
Foreword and general information .....	SEN00892-04 ●
01 Specification.....	SEN00893-01
Specification and technical data.....	SEN00894-01
10 Structure, function and maintenance standard .....	SEN00895-07
Engine and cooling system.....	SEN00896-01
Power train.....	SEN00897-01
Undercarriage and frame .....	SEN00898-01
Air system .....	SEN00899-00
Hydraulic system, Part 1 .....	SEN00900-01
Hydraulic system, Part 2 .....	SEN00901-02
Work equipment.....	SEN00902-00
Cab and its attachments .....	SEN00903-00
Electrical system .....	SEN00904-05
20 Standard value table .....	SEN00905-04
Standard service value table.....	SEN01631-04
30 Testing and adjusting .....	SEN00906-06
Testing and adjusting, Part 1.....	SEN01632-04
Testing and adjusting, Part 2.....	SEN01633-02
Testing and adjusting, Part 3.....	SEN01634-02
Testing and adjusting, Part 4.....	SEN01635-05
Testing and adjusting, Part 5.....	SEN01636-01
Testing and adjusting, Part 6.....	SEN01674-02

---

40 Troubleshooting .....	SEN00907-04
Failure code table and fuse locations .....	SEN01638-01
General information on troubleshooting.....	SEN01637-04
Troubleshooting by failure code (Display of code), Part 1 .....	SEN01639-01
Troubleshooting by failure code (Display of code), Part 2 .....	SEN01640-02
Troubleshooting by failure code (Display of code), Part 3 .....	SEN01641-00
Troubleshooting by failure code (Display of code), Part 4 .....	SEN01642-00
Troubleshooting of electrical system (E-mode).....	SEN01643-01
Troubleshooting of hydraulic and mechanical system (H-mode) .....	SEN01644-00
Troubleshooting of engine (S-mode) .....	SEN01645-02
50 Disassembly and assembly .....	SEN00908-05
General information on disassembly and assembly .....	SEN01195-03
Engine and cooling system, Part 1 .....	SEN01197-03
Engine and cooling system, Part 2 .....	SEN01196-02
Power train.....	SEN01198-03
Undercarriage and frame .....	SEN01199-04
Hydraulic system .....	SEN01200-03
Work equipment.....	SEN01201-02
Cab and its attachments .....	SEN01202-01
Electrical system.....	SEN01203-02
90 Diagrams and drawings .....	SEN00909-06
Hydraulic circuit diagrams.....	SEN00910-02
Electrical diagrams and drawings .....	SEN00911-04

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$