

Shop Manual

PC290LC-11

HYDRAULIC EXCAVATOR

SERIAL NUMBERS **PC290LC-11** **A27001- UP**

ENGINE **6D107E-3**

This material is proprietary to Komatsu America Corp. and is not to be reproduced, used, or disclosed except in accordance with written authorization from Komatsu America Corp.

It is our policy to improve our products whenever it is possible and practical to do so. We reserve the right to make changes or improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, revisions may be made to this publication. It is recommended that customers contact their distributor for information on the latest revision.

Copyright 2016 Komatsu
Printed in U.S.A.
Komatsu America Corp.

January 2016

00 INDEX AND FOREWORD

INDEX

00 INDEX AND FOREWORD	00-1
ABBREVIATION LIST	00-19
FOREWORD, SAFETY, BASIC INFORMATION	00-24
HOW TO READ THE SHOP MANUAL	00-24
SAFETY NOTICE FOR OPERATION	00-26
PRECAUTIONS TO PREVENT FIRE	00-34
ACTIONS IF FIRE OCCURS	00-36
PRECAUTIONS FOR DISPOSING OF WASTE MATERIALS	00-37
ACTIONS TAKEN TO MEET EXHAUST GAS REGULATIONS	00-38
PRECAUTIONS FOR DEF	00-39
STORE AdBlue/DEF	00-40
PRECAUTIONS FOR HANDLING HYDRAULIC EQUIPMENT	00-41
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF PIPINGS	00-43
PRECAUTIONS FOR HANDLING ELECTRICAL EQUIPMENT	00-49
PRECAUTIONS FOR HANDLING FUEL SYSTEM EQUIPMENT	00-51
PRECAUTIONS FOR HANDLING INTAKE SYSTEM EQUIPMENT	00-52
PRACTICAL USE OF KOMTRAX	00-53
DISCONNECT AND CONNECT PUSH-PULL TYPE COUPLER	00-54
PRECAUTIONS FOR DISCONNECTION AND CONNECTION OF CONNECTORS	00-58
METHOD FOR DISCONNECTING AND CONNECTING DEUTSCH CONNECTOR	00-62
METHOD FOR DISCONNECTING AND CONNECTING SLIDE LOCK TYPE CONNECTOR	00-63
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PULL ..	00-65
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH LOCK TO PUSH ..	00-66
METHOD FOR DISCONNECTING AND CONNECTING CONNECTOR WITH HOUSING TO ROTATE .	00-68
HOW TO READ ELECTRICAL WIRE CODE	00-69
EXPLANATION OF TERMS FOR MAINTENANCE STANDARD	00-73
STANDARD TIGHTENING TORQUE TABLE	00-76
CONVERSION TABLE	00-83
01 SPECIFICATIONS	01-1
CONTENTS	01-2
ABBREVIATION LIST	01-3
SPECIFICATIONS	01-8
SPECIFICATION DRAWING	01-8
WORKING RANGE DRAWINGS	01-9
SPECIFICATIONS	01-10
WEIGHT TABLE	01-13
TABLE OF FUEL, COOLANT, AND LUBRICANTS	01-15
10 STRUCTURE AND FUNCTION	10-1
CONTENTS	10-2
ABBREVIATION LIST	10-5
UREA SCR SYSTEM	10-10
LAYOUT DRAWING OF UREA SCR SYSTEM	10-11
UREA SCR SYSTEM DIAGRAM	10-16
FUNCTION OF UREA SCR SYSTEM	10-17
COMPONENT PARTS OF UREA SCR SYSTEM	10-25
BOOT-UP SYSTEM	10-34
LAYOUT DRAWING OF BOOT-UP SYSTEM	10-34
SYSTEM OPERATING LAMP SYSTEM	10-36
BATTERY DISCONNECT SWITCH	10-37
ENGINE SYSTEM	10-38
LAYOUT DRAWING OF ENGINE SYSTEM	10-38
ENGINE CONTROL SYSTEM	10-40
AUTO-DECELERATION SYSTEM	10-43
ENGINE AUTOMATIC WARM-UP SYSTEM	10-45
OVERHEAT PREVENTION SYSTEM	10-47

TURBOCHARGER PROTECTION SYSTEM	10-50
AUTOMATIC IDLE STOP SYSTEM	10-52
COMPONENT PARTS OF ENGINE SYSTEM	10-55
COOLING SYSTEM.....	10-73
LAYOUT DRAWING OF COOLING SYSTEM	10-73
CONTROL SYSTEM.....	10-75
LAYOUT DRAWING OF CONTROL SYSTEM	10-75
MACHINE MONITOR SYSTEM	10-78
KOMTRAX SYSTEM.....	10-79
COMPONENT PARTS OF CONTROL SYSTEM.....	10-80
HYDRAULIC SYSTEM.....	10-111
LAYOUT DRAWING OF HYDRAULIC SYSTEM	10-111
CLSS	10-117
ENGINE AND PUMP COMBINED CONTROL SYSTEM.....	10-135
PUMP AND VALVE CONTROL SYSTEM	10-141
COMPONENT PARTS OF HYDRAULIC SYSTEM	10-144
WORK EQUIPMENT SYSTEM	10-231
LAYOUT DRAWING OF WORK EQUIPMENT SYSTEM	10-231
STRUCTURE OF VALVE CONTROL.....	10-236
PPC LEVERS	10-238
ONE-TOUCH POWER MAXIMIZING SYSTEM	10-240
PPC LOCK SYSTEM	10-242
WORK EQUIPMENT AND TRAVEL AUTOMATIC LOCK SYSTEM	10-243
OIL FLOW ADJUSTER SYSTEM FOR ATTACHMENT.....	10-245
COMPONENT PARTS OF WORK EQUIPMENT SYSTEM.....	10-247
SWING SYSTEM.....	10-272
LAYOUT DRAWING OF SWING SYSTEM	10-272
SWING CONTROL SYSTEM DIAGRAM	10-276
COMPONENT PARTS OF SWING SYSTEM.....	10-280
TRAVEL SYSTEM.....	10-294
LAYOUT DRAWING OF TRAVEL SYSTEM.....	10-294
TRAVEL CONTROL SYSTEM DIAGRAM.....	10-298
COMPONENT PARTS OF TRAVEL SYSTEM	10-300
UNDERCARRIAGE AND FRAME.....	10-320
LAYOUT DRAWING OF UNDERCARRIAGE	10-320
WORK EQUIPMENT.....	10-322
STRUCTURE OF WORK EQUIPMENT	10-322
FUNCTION OF WORK EQUIPMENT	10-323
WORK EQUIPMENT CLEARANCE ADJUSTMENT SHIM.....	10-324
BUCKET CLEARANCE ADJUSTMENT SHIM	10-325
CAB AND ITS ATTACHMENTS	10-326
ROPS CAB	10-326
CAB MOUNT	10-327
CAB TIPPING STOPPER	10-328
20 STANDARD VALUE TABLE	20-1
CONTENTS	20-2
ABBREVIATION LIST	20-3
STANDARD VALUE TABLE FOR ENGINE	20-8
STANDARD VALUE TABLE FOR ENGINE: PC290LC-11	20-8
STANDARD VALUE TABLE FOR MACHINE.....	20-12
STANDARD VALUE TABLE FOR MACHINE: PC290LC-11	20-12
MACHINE POSTURE AND PROCEDURE FOR MEASURING PERFORMANCE	20-25
STANDARD VALUE TABLE FOR ELECTRICAL	20-29
STANDARD VALUE TABLE FOR ELECTRICAL	20-29
30 TESTING AND ADJUSTING.....	30-1
CONTENTS	30-2
ABBREVIATION LIST	30-5
RELATED INFORMATION ON TESTING AND ADJUSTING	30-10

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$