Shop Manual

HYDRAULIC EXCAVATOR

PC450-8 PC450LC-8 PC450LCD-8 PC450LCHD-8

SERIAL NUMBERS

PC450-8 PC450LC-8 PC450LCD-8 PC450LCHD-8

K50001 and up

ecot3



HYDRAULIC EXCAVATOR

PC450-8 PC450LC-8 PC450LCD-8 PC450LCHD-8

Machine model Serial number

PC450-8 K50001 and up PC450LC-8 K50001 and up PC450LCD-8 K50001 and up PC450LCHD-8 K50001 and up

00 Index and foreword

Index

Composition of shop manual	2
and the same of th	_
Table of contents	4

UEN02225-03 00 Index and foreword

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly. The marks shown to the right of Form No. denote the following:

- O: New issue (to be filed additionally) •: Revision (to be replaced for each Form No.)
- Note 2: This shop manual can be supplied for each Form No.
- Note 3: To file this shop manual in the special binder for management, handle it as follows:
 - Place a divider on the top of each section in the file after matching the Tab No. with No. indicated next to each Section Name shown in the table below:
 - File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	UEN02223-03 ●
00 Index and foreword Index Foreword and general information	UEN02225-03 ● UEN02226-00
01 Specification Specification and technical data	UEN02228-01
10 Structure, function and maintenance standard Engine and cooling system Power train Undercarriage and frame Hydraulic system, Part 1 Hydraulic system, Part 2 Hydraulic system, Part 3 Work equipment Cab and its attachments Electrical system Auto Grease system	UEN02230-00 UEN02231-00 UEN02232-00 UEN02233-00 UEN02234-00 UEN02235-01 UEN02236-00 UEN02237-00 UEN02238-02 UEN02239-00
20 Standard value table Standard service value table	UEN02643-01
30 Testing and adjusting Testing and adjusting, part 1 Testing and adjusting, Part 2 Testing and adjusting, Part 3	UEN02644-00 UEN02645-00 UEN02662-01
40 Troubleshooting Failure code table and fuse locations General information on troubleshooting Troubleshooting by failure code (Display of code), Part 1 Troubleshooting by failure code (Display of code), Part 2 Troubleshooting by failure code (Display of code), Part 3 Troubleshooting of electrical system (E-mode)	UEN02646-00 UEN02647-02 UEN02648-00 UEN02649-00 UEN02650-00 UEN02651-01

PC450/LC/LCD/LCHD-8

00 Index and foreword UEN02225-03

Troubleshooting of hydraulic and mechanical system (H-mode)	UEN02652-00
Troubleshooting of engine (S-mode)	UEN02653-00
Troubleshooting of Auto Grease system	UEN02663-00
50 Disassembly and assembly	
General information on disassembly and assembly	UEN02654-00
Engine and cooling system	UEN02655-00
Power train	UEN02656-00
Undercarriage and frame	UEN02657-00
Hydraulic system	UEN02658-00
Work equipment	UEN02659-00
Cab and its attachments	UEN02660-00
Electrical system	UEN02661-01
90 Diagrams and drawings	
Hydraulic diagrams and drawings	UEN02244-02●
Electrical diagrams and drawings	UEN02245-02
Lioution anglaino and diawingo	OLINOLL-10-0L

PC450/LC/LCD/LCHD-8

It's a preview. You can download the full file by clicking the link below.

https://shopservicemanual.com/

Service Manuals from 2\$