

# Shop Manual

WHEEL LOADER

**GALEO**

**WA600-6**

SERIAL NUMBERS 60001 and up

**KOMATSU**

---

# **WHEEL LOADER**

## **WA600-6**

**Machine model      Serial number**

**WA600-6              60001 and up**

---

## **00 Index and foreword**

### **Index**

---

---

|                                 |   |
|---------------------------------|---|
| Composition of shop manual..... | 2 |
| Table of contents .....         | 4 |

## Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

| Section Title   | Form Number   |
|---|---------------|
| Shop Manual, contents binder, binder label and tabs       | SEN00235-05   |
| 00 Index and foreword                                     | SEN00397-05   |
| Index   | SEN00398-05 ● |
| Foreword and general information                          | SEN00415-01   |
| 01 Specification  | SEN00399-02   |
| Specification and technical data                          | SEN00400-02 ● |
| 10 Structure, function and maintenance standard           | SEN00401-02   |
| Engine and cooling system                                 | SEN00402-01 ● |
| Power train, Part 1                                       | SEN00403-02 ● |
| Power train, Part 2                                       | SEN02455-00 ○ |
| Steering system   | SEN00404-01 ● |
| Brake system  | SEN00405-01 ● |
| Undercarriage and frame                                   | SEN00406-00   |
| Hydraulic system, Part 1                                  | SEN00407-01 ● |
| Hydraulic system, Part 2                                  | SEN02456-00 ○ |
| Work equipment  | SEN00408-01 ● |
| Cab and its attachments                                   | SEN00409-01 ● |
| Electrical system, Part 1                                 | SEN01009-01 ● |
| Electrical system, Part 2                                 | SEN00410-02 ● |
| Electrical system, Part 3                                 | SEN00411-02 ● |
| 20 Standard value table                                   | SEN00566-01   |
| Standard service value table                              | SEN00552-01 ● |
| 30 Testing and adjusting                                  | SEN00567-01   |
| Testing and adjusting, Part 1                             | SEN00553-01 ● |
| Testing and adjusting, Part 2                             | SEN00554-01 ● |
| Testing and adjusting, Part 3                             | SEN00555-01 ● |
| Testing and adjusting, Part 4                             | SEN00556-01 ● |
| 40 Troubleshooting  | SEN00568-01   |
| General information on troubleshooting                    | SEN00557-00   |
| Troubleshooting by failure code (Display of code), Part 1 | SEN00558-01 ● |

|   |               |
|---|---------------|
| Troubleshooting by failure code (Display of code), Part 2   | SEN00559-01 ● |
| Troubleshooting by failure code (Display of code), Part 3   | SEN00560-00   |
| Troubleshooting by failure code (Display of code), Part 4   | SEN00561-01 ● |
| Troubleshooting by failure code (Display of code), Part 5   | SEN00562-01 ● |
| Troubleshooting by failure code (Display of code), Part 6   | SEN00569-01 ● |
| Troubleshooting by failure code (Display of code), Part 7   | SEN00570-01 ● |
| Troubleshooting by failure code (Display of code), Part 8   | SEN00571-01 ● |
| Troubleshooting by failure code (Display of code), Part 9   | SEN00572-01 ● |
| Troubleshooting by failure code (Display of code), Part 10  | SEN00573-01 ● |
| Troubleshooting by failure code (Display of code), Part 11  | SEN00574-01 ● |
| Troubleshooting of electrical system (E-mode)               | SEN00563-01 ● |
| Troubleshooting of hydraulic and mechanical system (H-mode) | SEN00564-00   |
| Troubleshooting of engine (S-mode)                          | SEN00565-00   |
| <b>50 Disassembly and assembly</b>                          | SEN00583-01   |
| General information on disassembly and assembly             | SEN01156-01   |
| Engine and cooling system, Part 1                           | SEN01157-00   |
| Engine and cooling system, Part 2                           | SEN01158-00   |
| Power train, Part 1   | SEN01160-00   |
| Power train, Part 2   | SEN01162-00   |
| Power train, Part 3   | SEN01164-00   |
| Power train, Part 4   | SEN01165-00   |
| Brake system  | SEN01167-00   |
| Undercarriage and frame                                     | SEN01169-00   |
| Hydraulic system  | SEN01171-00   |
| Work equipment  | SEN01174-00   |
| Cab and its attachments                                     | SEN01175-00   |
| Electrical system   | SEN01177-00   |
| <b>90 Diagrams and drawings</b>                             | SEN00414-03   |
| Hydraulic diagrams and drawings                             | SEN00412-02 ● |
| Electrical diagrams and drawings                            | SEN00413-02 ● |

## Table of contents

|   |             |
|---|-------------|
| 00 Index and foreword   |             |
| Index   | SEN00398-05 |
| Composition of shop manual .....                                    | 2           |
| Table of contents.....  | 4           |
| Foreword and general information                                    | SEN00415-01 |
| Safety notice .....   | 2           |
| How to read the shop manual.....                                    | 7           |
| Explanation of terms for maintenance standard .....                 | 9           |
| Handling electric equipment and hydraulic component .....           | 11          |
| How to read electric wire code.....                                 | 23          |
| Precautions when carrying out operation .....                       | 26          |
| Method of disassembling and connecting push-pull type coupler ..... | 29          |
| Standard tightening torque table.....                               | 32          |
| Conversion table.....   | 36          |
| 01 Specification  |             |
| Specification and technical data                                    | SEN00400-02 |
| Specification and technical data .....                              | 2           |
| Specification dimension drawing.....                                | 2           |
| Specifications .....  | 3           |
| Weight table .....  | 10          |
| Table of fuel, coolant and lubricants .....                         | 12          |
| 10 Structure, function and maintenance standard                     |             |
| Engine and cooling system   | SEN00402-01 |
| Engine and cooling system .....                                     | 2           |
| Engine mount and transmission mount .....                           | 2           |
| Cooling system .....  | 6           |
| Cooling fan pump.....   | 10          |
| Cooling fan motor .....   | 18          |
| Power train, Part 1   | SEN00403-02 |
| Power train, Part 1.....  | 2           |
| Power train.....  | 2           |
| Power train system diagram .....                                    | 3           |
| Torque converter and transmission piping diagram .....              | 4           |
| Torque converter.....   | 6           |
| Modulation clutch.....  | 15          |
| Torque converter regulator valve .....                              | 16          |
| Transmission.....   | 18          |
| Transfer.....   | 38          |
| Transmission control valve .....                                    | 40          |
| ECMV .....  | 43          |
| Main relief valve and torque converter relief valve .....           | 50          |
| Lubrication relief valve.....                                       | 52          |
| Power train, Part 2   | SEN02455-00 |
| Power train, Part 2.....  | 2           |
| Torque converter oil cooler .....                                   | 2           |
| Torque converter oil filter .....                                   | 3           |
| Drive shaft.....  | 5           |
| Center support.....   | 6           |
| Axle.....   | 8           |
| Differential.....   | 12          |
| Limited slip differential .....                                     | 21          |
| Final drive .....   | 26          |

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$