



CRAWLER EXCAVATOR

**E215B
TIER III**

**REPAIR
MANUAL**

87612178 NA

Issued 01-2007





REPAIR MANUAL

CRAWLER EXCAVATOR

E215B
TIER III

CNH America LLC reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

All data given in this publication is subject to production variations. Dimensions and weights are only approximate. Illustrations do not necessarily show products in standard condition. For exact information about any particular product, please consult your Dealer.

REVISION HISTORY			
Issue	Issue Date	Applicable Machines	Remarks
First Edition	01-2007	E215B TIER III	87612178 NA

E215B TABLE OF CONTENTS

SPECIFICATIONS SECTION

0-SAFETY

0.1 GENERAL SAFETY INFORMATION	0-2
0.2 SAFETY PRECAUTIONS	0-3

1-OUTLINE

1.1 GENERAL PRECAUTIONS FOR MAKING REPAIRS	1-3
1.1.1 PREPARATION BEFORE DISASSEMBLING	1-3
1.1.2 SAFETY WHEN DISASSEMBLING AND ASSEMBLING.....	1-3
1.1.3 DISASSEMBLING AND ASSEMBLING HYDRAULIC EQUIPMENT	1-3
1.1.4 ELECTRICAL EQUIPMENT	1-4
1.1.5 HYDRAULIC PARTS	1-5
1.1.6 WELD REPAIR	1-5
1.1.7 ENVIRONMENTAL ISSUES.....	1-5
1.2 INTERNATIONAL UNIT SYSTEM	1-6

2-SPECIFICATIONS

2.1 NAME OF COMPONENTS	2-3
2.2 GENERAL DIMENSIONS	2-4
2.2.1 SK210-8 [5.65m (18ft-6in) Boom+2.94m (9ft-8in) Standard Arm+0.80m ³ (1.05cu•yd) Bucket Shoe]	2-4
2.2.2 SK210-8 [5.65m (18ft-6in) Boom+3.5m (11ft-6in) Long Arm+0.70m ³ (0.92cu•yd) Bucket Shoe]	2-4
2.3 WEIGHT OF COMPONENTS	2-5
2.4 TRANSPORTATION	2-7
2.4.1 OVERALL DIMENSIONS OF MACHINE ON A TRAILER	2-7
2.4.2 DIMENSIONS OF ATTACHMENT.....	2-8
2.5 SPECIFICATIONS AND PERFORMANCE.....	2-9
2.5.1 SPEED AND CLIMBING CAPABILITY	2-9
2.5.2 ENGINE	2-9
2.5.3 HYDRAULIC COMPONENTS	2-9
2.5.4 WEIGHT.....	2-9
2.6 TYPE OF CRAWLER.....	2-10
2.7 COMBINATIONS OF ATTACHMENT	2-12
2.8 ENGINE SPECIFICATIONS	2-13
2.8.1 SPECIFICATIONS	2-13

3-ATTACHMENT DIMENSIONS

3.1	BOOM	3-3
3.1.1	BOOM DIMENSIONAL DRAWING	3-3
3.1.2	BOOM MAINTENANCE STANDARD	3-4
3.2	ARM	3-6
3.2.1	ARM DIMENSIONAL DRAWING	3-6
3.2.2	ARM MAINTENANCE STANDARD	3-7
3.3	BUCKET AND PIN	3-10
3.3.1	BUCKET AND PIN DIMENSIONAL DRAWING	3-10
3.3.2	BUCKET AND PIN DIMENSIONAL TABLE	3-11

MAINTENANCE SECTION

11-TOOLS

11.1	STANDARD TORQUE SPECIFICATIONS FOR CAPSCREWS AND NUTS	11-3
11.2	SCREW SIZE	11-5
11.2.1	CAPSCREW (BOLT)	11-5
11.2.2	CAPSCREW (SOCKET BOLT)	11-5
11.2.3	SOCKET SET SCREW	11-5
11.3	TORQUE SPECIFICATIONS FOR HOSE AND FITTINGS	11-6
11.3.1	JOINT (O-RING TYPE)	11-6
11.3.2	HYDRAULIC HOSE (30° FLARE TYPE)	11-6
11.3.3	JOINT (ORS TYPE)	11-6
11.3.4	SPLIT FLANGE	11-6
11.4	TORQUE SPECIFICATIONS FOR NUTS AND SLEEVES	11-7
11.5	PLUG	11-8
11.5.1	PLUG FOR HYDRAULIC PIPE JOINT	11-8
11.5.2	PLUG FOR HYDRAULIC EQUIPMENT	11-9
11.6	SPECIAL SPANNER FOR TUBE	11-11
11.7	SPECIAL TOOLS	11-12
11.8	APPLICATION OF SCREW LOCKING COMPOUND AND SEALING COMPOUND	11-14
11.9	SUCTION STOPPER	11-15
11.9.1	COMPONENTS	11-15
11.9.2	DIMENSION	11-15
11.9.3	APPLICABLE MODEL	11-15
11.10	COUNTER WEIGHT LIFTING JIG	11-16
11.10	UPPER FRAME LIFTING JIG	11-17
11.11	ENGINE TURNOVER STAND	11-18
11.13	TRACK SPRING SET JIG	11-19

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$