

# SERVICE MANUAL

**FI40B VHP**

**FI70B VHP**

**F200B VHP**

Motor Graders

**Part Number**

**48050427D**

4<sup>th</sup> Edition

English 10/2017



**NEW HOLLAND**

**CONSTRUCTION**



## **SERVICE MANUAL**

**F140B Torque converter transmission, Tier 3, made in Brazil [NAAF08001 - ]**  
**F170B Direct drive transmission, Tier 3, made in Brazil [HBZN0170HBAF00360**  
**- ]**  
**F170B Torque converter transmission, Tier 3, made in Brazil [NAAF09000 - ]**  
**F200B Direct drive transmission, Tier 3, made in Brazil [NAAF11000 - ]**  
**F200B Torque converter transmission, Tier 3, made in Brazil**  
**[HBZN0200TBAF00511 - ]**

## Link Product / Engine

<b>Product</b>	<b>Market Product</b>	<b>Engine</b>
F140B Transmissão do conversor de torque, Tier 3, produzido no Brasil [NAAF08001 - ]	Australia New Zealand	F4HE9687W*J101
F140B Transmissão do conversor de torque, Tier 3, produzido no Brasil [NAAF08001 - ]	Middle East Africa	F4HE9687W*J101
F140B Transmissão do conversor de torque, Tier 3, produzido no Brasil [NAAF08001 - ]	Asia Pacific	F4HE9687W*J101
F170B Transmissão de acionamento direto, Tier 3, produzido no Brasil [HBZN0170HBAF00360 - ]	Australia New Zealand	F4HE9687C*J100
F170B Transmissão de acionamento direto, Tier 3, produzido no Brasil [HBZN0170HBAF00360 - ]	Middle East Africa	F4HE9687C*J100
F170B Transmissão de acionamento direto, Tier 3, produzido no Brasil [HBZN0170HBAF00360 - ]	Asia Pacific	F4HE9687C*J100
F170B Transmissão do conversor de torque, Tier 3, produzido no Brasil [NAAF09000 - ]	Middle East Africa	F4HE9687C*J100
F170B Transmissão do conversor de torque, Tier 3, produzido no Brasil [NAAF09000 - ]	Asia Pacific	F4HE9687C*J100
F170B Transmissão do conversor de torque, Tier 3, produzido no Brasil [NAAF09000 - ]	Australia New Zealand	F4HE9687C*J100
F200B Transmissão de acionamento direto, Tier 3, produzido no Brasil [NAAF11000 - ]	Asia Pacific	F4HE9684L*J100
F200B Transmissão de acionamento direto, Tier 3, produzido no Brasil [NAAF11000 - ]	Middle East Africa	F4HE9684L*J100
F200B Transmissão de acionamento direto, Tier 3, produzido no Brasil [NAAF11000 - ]	Australia New Zealand	F4HE9684L*J100
F200B Transmissão do conversor de torque, Tier 3, produzido no Brasil [HBZN0200TBAF00511 - ]	Australia New Zealand	F4HE9687K*J105
F200B Transmissão do conversor de torque, Tier 3, produzido no Brasil [HBZN0200TBAF00511 - ]	Asia Pacific	F4HE9687K*J105
F200B Transmissão do conversor de torque, Tier 3, produzido no Brasil [HBZN0200TBAF00511 - ]	Middle East Africa	F4HE9687K*J105

# Contents

---

## INTRODUCTION

<b>Transmission</b> .....	<b>21</b>
[21.113] Powershift transmission .....	21.1
[21.135] Powershift transmission external controls.....	21.2
[21.105] Powershift transmission hydraulic components.....	21.3
[21.155] Powershift transmission internal components.....	21.4
[21.700] Torque converter .....	21.5
[21.900] Hydraulic pump drive.....	21.6
<b>Front axle system</b> .....	<b>25</b>
[25.400] Non-powered front axle .....	25.1
<b>Rear axle system</b> .....	<b>27</b>
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential.....	27.2
[27.120] Planetary and final drives .....	27.3
<b>Brakes and controls</b> .....	<b>33</b>
[33.110] Parking brake or parking lock .....	33.1
<b>Hydraulic systems</b> .....	<b>35</b>
[35.000] Hydraulic systems.....	35.1
<b>Frames and ballasting</b> .....	<b>39</b>
[39.100] Frame .....	39.1
[39.140] Ballasts and supports .....	39.2
<b>Steering</b> .....	<b>41</b>
[41.200] Hydraulic control components.....	41.1
<b>Cab climate control</b> .....	<b>50</b>
[50.100] Heating .....	50.1
[50.104] Ventilation .....	50.2

[50.200] Air conditioning .....	50.3
<b>Electrical systems .....</b>	<b>55</b>
[55.000] Electrical system .....	55.1
[55.100] Harnesses and connectors .....	55.2
[55.201] Engine starting system .....	55.3
[55.301] Alternator .....	55.4
[55.302] Battery .....	55.5
[55.010] Fuel injection system .....	55.6
[55.024] Transmission control system .....	55.7
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls .....	55.8
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system .....	55.9
[55.020] Transmission speed sensors .....	55.10
[55.DTC] FAULT CODES .....	55.11
<b>Dozer blade and arm .....</b>	<b>86</b>
[86.110] Dozer blade .....	86.1
<b>Tools .....</b>	<b>89</b>
[89.128] Ripper assembly .....	89.1

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$