

SERVICE MANUAL

H8060 / H8080 Self-Propelled Windrower

from PIN YCG667001 and above

Part number 47487696

1st edition English
January 2013



Contents

INTRODUCTION

| | |
|--|-----------|
| Engine..... | 10 |
| [10.001] Engine and crankcase | 10.1 |
| [10.202] Air cleaners and lines | 10.2 |
| [10.206] Fuel filters | 10.3 |
| [10.216] Fuel tanks | 10.4 |
| [10.218] Fuel injection system..... | 10.5 |
| [10.254] Intake and exhaust manifolds and muffler | 10.6 |
| [10.400] Engine cooling system | 10.7 |
| Front axle system | 25 |
| [25.310] Final drives | 25.1 |
| Rear axle system..... | 27 |
| [27.550] Non-powered rear axle..... | 27.1 |
| Hydrostatic drive..... | 29 |
| [29.100] Transmission and steering hydrostatic control | 29.1 |
| [29.202] Hydrostatic transmission | 29.2 |
| [29.218] Pump and motor components..... | 29.3 |
| Power Take-Off (PTO) | 31 |
| [31.226] Hydraulic pump drive..... | 31.1 |
| Brakes and controls | 33 |
| [33.110] Parking brake / Parking lock | 33.1 |
| Hydraulic systems..... | 35 |
| [35.000] Hydraulic systems | 35.1 |
| [35.102] Pump control valves..... | 35.2 |
| [35.104] Fixed displacement pump..... | 35.3 |
| [35.105] Charge pump..... | 35.4 |

| | |
|--|-----------|
| [35.300] Reservoir, cooler, and filters..... | 35.5 |
| [35.565] Cutter control circuit..... | 35.6 |
| [35.910] Draper header hydraulic drive..... | 35.7 |
| Steering..... | 41 |
| [41.101] Steering control | 41.1 |
| Wheels..... | 44 |
| [44.520] Rear wheels..... | 44.1 |
| Cab climate control | 50 |
| [50.100] Heating | 50.1 |
| [50.104] Ventilation | 50.2 |
| [50.200] Air conditioning..... | 50.3 |
| Electrical systems | 55 |
| [55.000] Electrical system | 55.1 |
| [55.010] Fuel injection system..... | 55.2 |
| [55.013] Engine oil system | 55.3 |
| [55.014] Engine intake and exhaust system..... | 55.4 |
| [55.015] Engine control system..... | 55.5 |
| [55.019] Hydrostatic drive control system | 55.6 |
| [55.031] Parking brake electrical system | 55.7 |
| [55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system..... | 55.8 |
| [55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls..... | 55.9 |
| [55.100] Harnesses and connectors..... | 55.10 |
| [55.201] Engine starting system..... | 55.11 |
| [55.202] Cold start aid | 55.12 |
| [55.404] External lighting | 55.13 |
| [55.512] Cab controls..... | 55.14 |
| [55.518] Wiper/Washer system..... | 55.15 |
| [55.520] Cab harvesting controls | 55.16 |

| | |
|--|-----------|
| [55.634] Merger electrical control system | 55.17 |
| [55.661] Cab header controls..... | 55.18 |
| [55.662] Header height control | 55.19 |
| [55.830] Rotary screen drive and cleaning | 55.20 |
| [55.DTC] FAULT CODES..... | 55.21 |
| Attachments/Headers..... | 58 |
| [58.110] Attachment/Header cutting mechanism..... | 58.1 |
| [58.130] Attachment/Header frame..... | 58.2 |
| Platform, cab, bodywork, and decals | 90 |
| [90.124] Pneumatically-adjusted operator seat..... | 90.1 |
| [90.150] Cab..... | 90.2 |
| [90.151] Cab interior..... | 90.3 |
| [90.154] Cab doors and hatches | 90.4 |



INTRODUCTION

It's a preview. You can download the full file by
clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$