

# SERVICE MANUAL

**T5.95 / T5.105**

**T5.115**

Tractor

Part number 84568014


English

March 2013





## SERVICE MANUAL

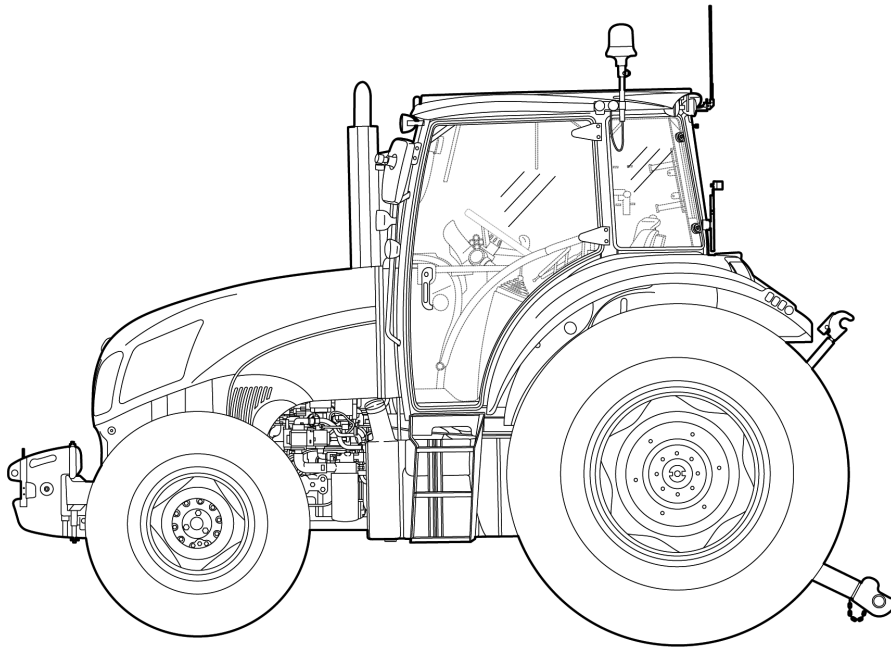

**T5.105**

**T5.115**

**T5.95**

## Link Product / Engine

---

<b>Product</b>	<b>Market Product</b>	<b>Engine</b>
T5.105	Europe	F5DFL413B*A006
T5.105	North America	F5DFL413B*A006
T5.105	International Region	F5DFL413B*A006
T5.115	North America	F5DFL413A*A002
T5.115	International Region	F5DFL413A*A002
T5.115	Europe	F5DFL413A*A002
T5.95	Europe	F5DFL413C*A003
T5.95	International Region	F5DFL413C*A003
T5.95	North America	F5DFL413C*A003

# Contents

---

## INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase .....	10.1
[10.414] Fan and drive .....	10.2
[10.501] Exhaust Gas Recirculation (EGR) - Diesel Particulate Filter (DPF) exhaust treatment .....	10.3
Clutch .....	18
[18.112] Slip clutch or flywheel damper .....	18.1
Transmission.....	21
[21.118] Transmission/Rear drive .....	21.1
[21.112] Power shuttle transmission.....	21.2
[21.104] Power shuttle transmission lubrication system.....	21.3
[21.134] Power shuttle transmission external controls .....	21.4
[21.148] Transmission/Rear drive internal components .....	21.5
[21.154] Power shuttle transmission internal components .....	21.6
[21.145] Gearbox internal components.....	21.7
[21.160] Creeper .....	21.8
[21.168] Hi-Lo unit.....	21.9
Four-Wheel Drive (4WD) system .....	23
[23.202] Electro-hydraulic control .....	23.1
[23.304] Four-Wheel Drive (4WD) gearbox .....	23.2
[23.314] Drive shaft.....	23.3
Front axle system .....	25
[25.100] Powered front axle .....	25.1
[25.102] Front bevel gear set and differential .....	25.2
[25.108] Final drive hub, steering knuckles, and shafts .....	25.3
Rear axle system.....	27

[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential.....	27.2
[27.120] Planetary and final drives .....	27.3
<b>Power Take-Off (PTO).....</b>	<b>31</b>
[31.104] Rear electro-hydraulic control.....	31.1
[31.116] Three-speed rear Power Take-Off (PTO) .....	31.2
[31.114] Two-speed rear Power Take-Off (PTO) .....	31.3
<b>Brakes and controls .....</b>	<b>33</b>
[33.202] Hydraulic service brakes .....	33.1
[33.204] Front axle brake.....	33.2
[33.110] Parking brake or parking lock .....	33.3
[33.220] Trailer brake hydraulic control.....	33.4
<b>Hydraulic systems.....</b>	<b>35</b>
[35.000] Hydraulic systems.....	35.1
[35.355] Hydraulic hand control .....	35.2
[35.204] Remote control valves .....	35.3
[35.114] Three-point hitch control valve .....	35.4
<b>Hitches, drawbars, and implement couplings.....</b>	<b>37</b>
[37.110] Rear three-point hitch .....	37.1
<b>Steering.....</b>	<b>41</b>
[41.200] Hydraulic control components.....	41.1
[41.206] Pump.....	41.2
[41.216] Cylinders .....	41.3
<b>Wheels.....</b>	<b>44</b>
[44.511] Front wheels.....	44.1
<b>Electrical systems.....</b>	<b>55</b>
[55.000] Electrical system .....	55.1

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$