

VG70 Ventilator

Service Manual

Content

1	Safety Information	1-1
2	Notices	2-1
2.1	Warranty Notice.....	2-1
2.2	Copyright Notice	2-1
2.3	EMC Notice.....	2-1
2.4	MRI Notice.....	2-1
2.5	Intended Use Notice	2-2
2.6	IEC Classification	2-2
2.7	Declaration of Conformity Notice	2-2
3	Equipment Symbols.....	3-1
4	Introduction	4-1
4.1	General description.....	4-1
4.2	Abbreviations and Definitions.....	4-2
5	Theory of Operation	5-4
5.1	Pneumatic System	5-4
5.1.1	Pneumatic Theory	5-4
5.1.2	Main Pneumatic Assemblies Overview	5-6
5.2	Electrical System.....	5-15
5.2.1	Electrical Box	5-15
5.2.2	Expiratory Valve Heating Module.....	5-15
5.2.3	Rear Panel View.....	5-16
5.2.4	Display Inside View.....	5-18
5.2.5	UI Mother Board	5-19
5.2.6	UI Interface Board	5-20
5.2.7	Interface Board.....	5-20
5.2.8	Mother Board.....	5-22
5.2.9	Core Board.....	5-24
5.2.10	Main Control Board.....	5-25
5.2.11	Power Supply Board	5-26
5.2.12	System Wiring Diagram	5-27
5.3	Software System.....	5-30
5.3.1	Software Units and Their Relationship.....	5-30
5.3.2	Structure of the Software System	5-31
5.3.3	Hardware and Software Interface	5-32
6	Disassemble and Functional Testing	6-1
6.1	General.....	6-1

6.2	Main Assemblies Disassemble	6-1
6.2.1	Disassembling of the Display from the Host	6-1
6.2.2	Disassembling of the Host from the Trolley	6-2
6.2.3	Disassembling of the Arm Assembly from the Host.....	6-3
6.2.4	Disassembling of the Humidification Assembly from the Host	6-3
6.3	Disassembling of Maintenance Spare Parts	6-4
6.3.1	Disassembling of the Gas Supply Inlet Filter	6-4
6.3.2	Disassembling of Oxygen Sensor.....	6-5
6.3.3	Disassembling of Pressure Sensor Board	6-6
6.3.4	Disassembling of Supply O ₂ Assembly.....	6-6
6.3.5	Disassembling of TSI Mass Flow Sensor	6-8
6.3.6	Disassembling of Expiration Flow Sensor	6-9
6.3.7	Disassembling of Diaphragm and Scale Board	6-10
6.3.8	Disassembling of Core Board and Main Control Board	6-11
6.3.9	Disassembling of Components in the Display	6-12
6.3.10	Disassembling of Electric Panel Assembly.....	6-14
6.3.11	Disassembling of One-way Diaphragm.....	6-15
6.3.12	Disassembling of Fan Filter Cotton.....	6-16
6.3.13	Disassembling of Filter Element of Gas Inlet.....	6-16
6.3.14	Disassembling of Filter (Part No.:130003930).....	6-17
6.4	Functional Testing	6-17
7	User Maintenance	7-1
7.1	General.....	7-2
7.1.1	Basic Guidelines	7-2
7.1.2	Disinfection and Sterilization.....	7-3
7.2	Regular Maintenance	7-4
7.2.1	Maintenance Principles.....	7-4
7.2.2	User Maintenance.....	7-5
7.2.3	Service Life of Product/Accessories.....	7-5
7.3	Maintenance in Operation and Transportation.....	7-6
7.3.1	Transportation.....	7-6
7.3.2	Storage	7-7
7.4	Fuse Replacement	7-7
7.5	Battery maintenance.....	7-8
7.5.1	Battery specification.....	7-8
7.5.2	Precautions.....	7-9
7.5.3	Battery storage	7-9
7.5.4	Battery replacement.....	7-9
7.6	Oxygen Sensor.....	7-10
7.6.1	Oxygen Sensor Replacement.....	7-10
7.6.2	Oxygen Sensor Calibration	7-11
7.6.3	Technical Specifications of Oxygen Sensor.....	7-11
7.6.4	Oxygen Sensor Maintenance.....	7-12

7.7	Disposal	7-12
7.8	Manufacturing techniques and materials:	7-13
7.9	Free Obligations:	7-13
7.10	Security, reliability and operating condition:	7-14
7.11	Return.....	7-14
8	Pre-Use Test	8-1
8.1	Pre-use test procedure.....	8-1
8.2	Pre-use test failure analysis.....	8-2
9	Service Menu	9-1
9.1	Calibration	9-2
9.1.1	Calibration operation guidance.....	9-2
9.1.2	Calibration failure analysis.....	9-8
9.2	Event/Alarm Log.....	9-9
9.3	Machine Information	9-10
9.4	Language	9-10
9.5	Test Page	9-10
9.5.1	Demo.....	9-11
9.5.2	Vlt. Monitor	9-11
9.5.3	Schematic	9-12
9.5.4	Cali. Data	9-13
9.5.5	Service Timer.....	9-13
9.6	Update.....	9-13
10	Troubleshooting	10-1
10.1	Technical Error.....	10-1
10.1.1	Technical Test Error Code	10-1
10.1.2	Other Errors.....	10-4
10.1.3	Service Tools.....	10-4
11	Appendix A Contact & Ordering Information	11-1
12	Appendix B Diagrams and Schematics.....	12-1
13	Appendix C Specifications	13-1
14	Appendix D Spare parts and configurations	14-1

It's a preview. You can download the full file by
clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$