

**Content**

**1 Safety Information ..... 1-1**

**2 Notices ..... 2-1**

2.1 Warranty Notice .....2-1

2.2 Copyright Notice .....2-1

2.3 EMC Notice.....2-1

2.4 MRI Notice.....2-1

2.5 Intended Use Notice.....2-2

2.6 IEC Classification.....2-2

2.7 Declaration of Conformity Notice .....2-2

**3 Equipment Symbols..... 3-1**

**4 Introduction ..... 4-1**

4.1 General description .....4-1

4.2 Abbreviations and Definitions .....4-2

**5 Theory of Operation ..... 5-1**

5.1 Pneumatic System .....5-1

5.1.1 Pneumatic Theory .....5-1

5.1.2 Main Pneumatic Assemblies Overview .....5-3

5.2 Electrical System..... 5-12

5.2.1 Electrical Box ..... 5-12

5.2.2 Expiratory Valve Heating Module ..... 5-13

5.2.3 Rear Panel View..... 5-14

5.2.4 Display Inside View..... 5-15

5.2.5 ARM platform circuit board..... 5-16

5.2.6 Display interface board ..... 5-17

5.2.7 Interface Board..... 5-18

5.2.8 Mother Board ..... 5-19

5.2.9 Core Board..... 5-21

5.2.10 Main Control Board ..... 5-22

5.2.11 Power Supply Board ..... 5-23

5.2.12 System Wiring Diagram ..... 5-24

5.3 Software System..... 5-30

5.3.1 Software Units and Their Relationship ..... 5-30

5.3.2 Structure of the Software System ..... 5-31

5.3.3 Hardware and Software Interface ..... 5-32

**6 Disassemble and Functional Testing ..... 6-1**

6.1 General.....6-1

6.2	Main Assemblies Disassemble .....	6-1
6.2.1	Disassembling of the Display from the Host .....	6-1
6.2.2	Disassembling of the Host from the Trolley .....	6-2
6.2.3	Disassembling of the Arm Assembly from the Host.....	6-3
6.2.4	Disassembling of the Humidification Assembly from the Host.....	6-4
6.3	Disassembling of Maintenance Spare Parts .....	6-5
6.3.1	Disassembling of Oxygen Sensor .....	6-5
6.3.2	Disassembling of Pressure Sensor Board .....	6-6
6.3.3	Disassembling of Supply O <sub>2</sub> Assembly.....	6-7
6.3.4	Disassembling of TSI Mass Flow Sensor .....	6-9
6.3.5	Disassembling of Differential Pressure Transmitter .....	6-10
6.3.6	Disassembling of Diaphragm and Scale Board .....	6-12
6.3.7	Disassembling of Core Board and Main Control Board .....	6-13
6.3.8	Disassembling of Components in the Display .....	6-14
6.3.9	Disassembling of Electric Panel Assembly.....	6-16
6.3.10	Disassembling of One-way Diaphragm.....	6-17
6.3.11	Disassembling of Fan Filter Cotton.....	6-18
6.3.12	Disassembling of Filter Element of Gas Inlet.....	6-19
6.3.13	Disassembling of Filter (Part No.:130003930).....	6-20
6.4	Functional Testing .....	6-21

**7 User Maintenance ..... 7-1**

7.1	Cleaning and Disinfection.....	7-2
7.1.1	Cleaning and Disinfecting Agents/ Autoclaving.....	7-3
7.1.2	Cleaning and Disinfection Methods .....	7-3
7.1.3	Cleaning and Disinfection of Components .....	7-4
7.2	Regular Maintenance .....	7-6
7.2.1	Maintenance Principles.....	7-6
7.2.2	User Maintenance .....	7-6
7.2.3	Service Life of Product/Accessories.....	7-7
7.3	Maintenance in Operation and Transportation.....	7-8
7.3.1	Transportation .....	7-8
7.3.2	Storage .....	7-9
7.4	Fuse Replacement .....	7-9
7.5	Battery Maintenance.....	7-10
7.5.1	Battery Specification .....	7-10
7.5.2	Precautions.....	7-11
7.5.3	Battery Storage.....	7-11
7.5.4	Battery Replacement.....	7-11
7.5.5	Battery Charging and Calibration .....	7-12
7.6	Oxygen Sensor .....	7-12
7.6.1	Oxygen Sensor Replacement.....	7-12
7.6.2	Oxygen Sensor Calibration .....	7-13
7.6.3	Technical Specifications of Oxygen Sensor .....	7-13

7.6.4	Oxygen Sensor Maintenance.....	7-14
7.7	Paramagnetic Oxygen Sensor (optional) .....	7-14
7.7.1	Paramagnetic Oxygen Sensor Calibration .....	7-15
7.7.2	Technical Specifications of Paramagnetic Oxygen Sensor .....	7-15
7.8	Disposal .....	7-16
7.9	Manufacturing techniques and materials: .....	7-16
7.10	Free Obligations: .....	7-17
7.11	Security, reliability and operating condition: .....	7-17
7.12	Return.....	7-17
<b>8</b>	<b>Pre-Use Test .....</b>	<b>8-1</b>
8.1	Pre-use test procedure.....	8-1
8.2	Pre-use test failure analysis.....	8-2
<b>9</b>	<b>Network .....</b>	<b>9-1</b>
9.1	Overview .....	9-1
9.2	What is Exported?.....	9-1
9.3	Establishing a Connection .....	9-1
9.4	Interface Instructions .....	9-2
9.5	Transmits and Receives Data.....	9-4
9.6	Troubleshooting .....	9-5
<b>10</b>	<b>Service Menu.....</b>	<b>10-1</b>
10.1	Calibration .....	10-2
10.1.1	Calibration operation guidance.....	10-2
10.1.2	Calibration failure analysis .....	10-8
10.2	Event/Alarm Log.....	10-9
10.3	Machine Information .....	10-10
10.4	Language .....	10-10
10.5	Test Page.....	10-10
10.5.1	Demo.....	10-11
10.5.2	Vlt. Monitor.....	10-11
10.5.3	Schematic .....	10-12
10.5.4	Cali. Data .....	10-13
10.5.5	Service Timer.....	10-13
10.5.6	Error Code .....	10-14
10.5.7	PT100 Cali.....	10-14
10.6	Update.....	10-15
10.7	Optional.....	10-16
<b>11</b>	<b>Troubleshooting.....</b>	<b>11-1</b>
11.1	Technical Error.....	11-1
11.1.1	Technical Test Error Code .....	11-1
11.1.2	Other Errors.....	11-4

	11.1.3 Service Tools.....	11-4
<b>12</b>	<b>Appendix A Contact &amp; Ordering Information .....</b>	<b>12-1</b>
<b>13</b>	<b>Appendix B Diagrams and Schematics.....</b>	<b>13-1</b>
<b>14</b>	<b>Appendix C Specifications .....</b>	<b>14-1</b>
<b>15</b>	<b>Appendix D Spare parts and configurations .....</b>	<b>15-1</b>

# 1 Safety Information




The operator of this ventilator must recognize their full responsibility for choosing appropriate ventilation settings to ensure proper ventilation and patient safety. The responsibility for the selection of the appropriate level of patient monitoring depends solely on the equipment operator.


All the monitoring information is for reference only; it should not be used as the sole basis for therapeutic or diagnostic decisions.

Whenever a patient is connected to the ventilator, constant attention by qualified medical personnel is required in order to provide immediate corrective action in case of a malfunction and alarm occurrence.


## Terms


This manual uses three special indicators to convey information of a specific nature. They include:

 <b>WARNING:</b>	Identify conditions or practices that could result in serious adverse reactions or potential safety hazards.
 <b>CAUTION:</b>	Identify conditions or practices that could result in damage to the ventilator or other equipment
 <b>NOTE:</b>	Identify supplemental information to help you better understand how the ventilator works.

 **WARNING:** Do not use the system until you have read and understood this manual including:

- All connections of the system
- All warnings and cautions
- Operation procedure of each and every component of the system
- Test procedure of each and every component of the system

 **WARNING:** The VG70 Ventilator System is intended for use by authorized and trained medical personnel only.

 **WARNING:** The users must familiarize themselves with the operation and use of this machine prior to first clinical use with a patient.

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$