

Backhoe Loader

[Section 1 - General Information](#)

[Section 2 - Care and Safety](#)

[Section 3 - Maintenance](#)

[Section A - Attachments](#)

[Section B - Body and Framework](#)

[Section C - Electrics](#)

[Section D - Controls](#)

[Section E - Hydraulics](#)

[Section F - Transmission](#)

[Section G - Brakes](#)

[Section H - Steering](#)

[Section K - Engine](#)

[Section L - Servo Controls](#)



Publication No.
9803/3290-16



Copyright © 2004 JCB SERVICE. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any other means, electronic, mechanical, photocopying or otherwise, without prior permission from JCB SERVICE.

Issued by JCB Technical Publications, JCB Aftermarket Training, Woodseat, Rocester, Staffordshire, ST14 5BW, England. Tel +44 1889 591300 Fax +44 1889 591400

World Class
Customer Support

General Information

Service Manual - Backhoe Loader

[Section 1 - General Information](#)

[Section 2 - Care and Safety](#)

[Section 3 - Maintenance](#)

[Section A - Attachments](#)

[Section B - Body and Framework](#)

[Section C - Electrics](#)

[Section D - Controls](#)

[Section E - Hydraulics](#)

[Section F - Transmission](#)

[Section G - Brakes](#)

[Section H - Steering](#)

[Section K - Engine](#)

[Section L - Servo Controls](#)



Publication No.
9803/3290-16



Copyright © 2004 JCB SERVICE. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any other means, electronic, mechanical, photocopying or otherwise, without prior permission from JCB SERVICE.

Issued by JCB Technical Publications, JCB Aftermarket Training, Woodseat, Rocester, Staffordshire, ST14 5BW, England. Tel +44 1889 591300 Fax +44 1889 591400

World Class
Customer Support



Section 1 - General Information

Notes:



Section 1 - General Information

Contents	Page No.
Introduction	
About this Publication	1-1
Using the Service Manual	1-1
Section Numbering	1-1
Units of Measurement	1-1
Left Side, Right Side	1-2
Cab/Canopy	1-2
Cross References	1-2
Machine Nomenclature	1-2
Identifying the Machine	1-3
Machine Identification Plate	1-3
Component Identification Plates	1-4
Fuel	1-8
Types of Fuel	1-8
Torque Settings	
Zinc Plated Fasteners and Dacromet Fasteners	1-11
Introduction	1-11
Bolts and Screws	1-11
Hydraulic Connections	1-15
'O' Ring Face Seal System	1-15
'Torque Stop' Hose System	1-18
'Quick-Connect' Pilot Hoses	1-19
Disconnecting	1-19
Connecting	1-19
Service Tools	
Numerical List	1-20
Service Aids	
Sealing and Retaining Compounds	1-23
Terms and Definitions	
Colour Coding	1-24
Hydraulic Schematic Colour Codes	1-24



Section 1 - General Information

Contents

Page No.

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$