

## Backhoe Loader

[Section 1 - General Information](#)

[Section 2 - Operator Manual](#)

[Section A - Attachments](#)

[Section B - Body and Framework](#)

[Section C - Electrics](#)

[Section E - Hydraulics](#)

[Section F - Transmission](#)

[Section G - Brakes](#)

[Section H - Steering](#)

[Section K - Engine](#)

[Section M - Electronic Control Systems](#)



Publication No.  
**9813/0250-07**



Copyright © 2004 JCB SERVICE. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any other means, electronic, mechanical, photocopying or otherwise, without prior permission from JCB SERVICE.

Issued by JCB Technical Publications, JCB Aftermarket Training, Woodseat, Rocester, Staffordshire, ST14 5BW, England. Tel +44 1889 591300 Fax +44 1889 591400

World Class  
Customer Support

## General Information

Service Manual - Backhoe Loader

[Section 1 - General Information](#)

[Section 2 - Operator Manual](#)

[Section A - Attachments](#)

[Section B - Body and Framework](#)

[Section C - Electrics](#)

[Section E - Hydraulics](#)

[Section F - Transmission](#)

[Section G - Brakes](#)

[Section H - Steering](#)

[Section K - Engine](#)

[Section M - Electronic Control Systems](#)



Publication No.  
**9813/0250-07**



Copyright © 2004 JCB SERVICE. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any other means, electronic, mechanical, photocopying or otherwise, without prior permission from JCB SERVICE.





# Section 1 - General Information

---

<b>Contents</b>	<b>Page No.</b>
<b>Introduction</b>	
Identifying Your Machine .....	1-1-1
<b>Safety</b>	
Introduction .....	1-2-1
<b>Use</b>	
Introduction .....	1-3-1
Scope .....	1-3-2
Personnel .....	1-3-2
Applications .....	1-3-2
Newest Data .....	1-3-2
Format .....	1-3-3
Left and Right Sides .....	1-3-4
Left Side, Right Side .....	1-3-4
Hydraulic Schematic Codes .....	1-3-5
Colour Codes .....	1-3-5
<b>Routine Maintenance</b>	
Maintenance Schedules .....	1-4-1
<b>General Procedures</b>	
Introduction .....	1-5-1
Parking the Machine and Making it Safe .....	1-5-2
Venting the Hydraulic Pressure .....	1-5-3
Connecting/Disconnecting Hydraulic Hoses .....	1-5-4
Venting the Brake System Pressure .....	1-5-5
Hammer Option - Advanced EasyControl .....	1-5-5
Battery Disconnection/Connection .....	1-5-6
Removing and Replacing Components .....	1-5-7
Preparation .....	1-5-7
Original Components .....	1-5-7
New Components .....	1-5-7
Torques and Fixings .....	1-5-7
Battery Charging System Precautions .....	1-5-8
Gas Hydraulic Bladder Accumulators .....	1-5-9
Replacement .....	1-5-9
Charging .....	1-5-9
'Quick-Connect' Hoses .....	1-5-11
Disconnecting .....	1-5-11
Connecting .....	1-5-11
Hydraulic Contamination .....	1-5-12
Hydraulic Fluid Quality .....	1-5-12
Effects of Contamination .....	1-5-12
Cleaning Operation .....	1-5-12
Contaminant Standards .....	1-5-13
Filters .....	1-5-13
Hydraulic Rams .....	1-5-14
Installation .....	1-5-14
Caution During Use .....	1-5-14
Maintenance, Inspection Points .....	1-5-14
<b>Service Consumables</b>	
Introduction .....	1-6-1
Sealing and Retaining Compounds .....	1-6-2



<b>Contents</b>	<b>Page No.</b>
<b>Torque Settings</b>	
Introduction .....	1-7-1
Zinc Plated Fasteners and Dacromet Fasteners .....	1-7-2
Introduction .....	1-7-2
Bolts and Screws .....	1-7-2
Hydraulic Connections .....	1-7-6
'O' Ring Face Seal System .....	1-7-6
'Torque Stop' Hose System .....	1-7-12
'Positional Type' Hydraulic Adaptors .....	1-7-13
Fitting Procedure .....	1-7-13
<b>Stall Speed Combinations</b>	
Introduction .....	1-7-1
Specifications .....	1-7-2
SA, SB Engines .....	1-7-3
SC Engines .....	1-7-8
SD, SF Engines .....	1-7-9
SH Engines .....	1-7-14
<b>Service Tools</b>	
Introduction .....	1-8-1
Numerical List .....	1-8-2
Tool Detail Reference .....	1-8-5
Rivet Nuts .....	1-8-26
Fitting Procedure .....	1-8-27
Slide Hammer Kit .....	1-8-28
Fitting Procedure .....	1-8-28
Metric Test Points .....	1-8-29
Introduction .....	1-8-29
Parts Information .....	1-8-29

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$