

527-58

[Section 1 - General Information](#)

[Section 2 - Care and Safety](#)

[Section 3 - Routine Maintenance](#)

[Section B - Body and Framework](#)

[Section C - Electrics](#)

[Section E - Hydraulics](#)

[Section F - Transmission](#)

[Section G - Brakes](#)

[Section H - Steering](#)

[Section K - Engine](#)

[Section M - Electronic Data Systems](#)



Publication No.
9813/0200-6



Copyright © 2004 JCB SERVICE. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any other means, electronic, mechanical, photocopying or otherwise, without prior permission from JCB SERVICE.

General Information

[Section 1 - General Information](#)

[Section 2 - Care and Safety](#)

[Section 3 - Routine Maintenance](#)

[Section B - Body and Framework](#)

[Section C - Electrics](#)

[Section E - Hydraulics](#)

[Section F - Transmission](#)

[Section G - Brakes](#)

[Section H - Steering](#)

[Section K - Engine](#)

[Section M - Electronic Data Systems](#)



Publication No.
9813/0200-6



Copyright © 2004 JCB SERVICE. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any other means, electronic, mechanical, photocopying or otherwise, without prior permission from JCB SERVICE.



Notes:

Contents	Page No.
Applications	
Introduction	1-1
Tier 4 Final Machines	1-2
Section 1 - Applications	1-4
Use	
Introduction	1-6
Scope	1-7
Personnel	1-7
Applications	1-7
Newest Data	1-7
Format	1-8
Left and Right Sides	1-9
Hydraulic Schematic Codes	1-10
Colour Codes	1-10
Machine Identification	
Introduction	1-12
Related Topics	1-13
Machine Identification Plate	1-14
Typical Product Identification Number (PIN)	1-15
Component Identification Plates	1-17
Typical Engine Identification Number	1-17
Transmission Identification Numbers	1-18
ROPS/FOPS and OECD Certification Plates	1-20
Torque Settings	
Introduction	1-22
Zinc Plated Fasteners and Dacromet Fasteners	1-23
Introduction	1-23
Bolts and Screws	1-23
Hydraulic Connections	1-27
'O' Ring Face Seal System	1-27
'Torque Stop' Hose System	1-30
'Positional Type' Hydraulic Adaptors	1-31
Fitting Procedure	1-31
Service Tools	
Introduction	1-32
Numerical List	1-33
Tool Detail Reference	1-36
Rivet Nuts	1-60
Fitting Procedure	1-61
Slide Hammer Kit	1-62
Fitting Procedure	1-62
Service Consumables	
Introduction	1-64
Sealing and Retaining Compounds	1-65
Fuel	
Introduction	1-66
Related Topics	1-67

Contents	Page No.
Acceptable and Unacceptable Fuels	1-68
Additives	1-69
Service Requirements for use of B20 Biodiesel	1-69
Warranty	1-69
Fuel Types	1-70
Usage and Effects of Fuels	1-71
Sulphur Content	1-72
Effects of Fuel Contaminates	1-73
Fuel	
Introduction	1-74
Related Topics	1-75
Acceptable and Unacceptable Fuels	1-76
Fuel	
Introduction	1-78
Related Topics	1-79
Acceptable and Unacceptable Fuels	1-80

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$