

General Information

Service Manual - Side Engine Loadalls

[Section 1 - General Information](#)

[Section 2 - Care and Safety](#)

[Section 3 - Routine Maintenance](#)

[Section B - Body and Framework](#)

[Section C - Electrics](#)

[Section E - Hydraulics](#)

[Section F - Transmission](#)

[Section G - Brakes](#)

[Section H - Steering](#)

[Section K - Engine](#)

[Section M - Electrical and Electronic Data Systems](#)



Publication No.
9813-1500-3



Copyright © 2004 JCB SERVICE. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any other means, electronic, mechanical, photocopying or otherwise, without prior permission from JCB SERVICE.



Section 1 - General Information

Contents	Page No.
Applications	
Introduction	1-1-1
Tables	1-1-2
Use	
Introduction	1-2-1
Scope	1-2-2
Format	1-2-3
Left and Right Sides	1-2-4
Hydraulic Schematic Codes	1-2-5
Machine Identification	
Introduction	1-3-1
Related Topics	1-3-2
Machine Identification Plate	1-3-3
Component Identification Plates	1-3-7
Torque Settings	
Introduction	1-4-1
Zinc Plated Fasteners and Dacromet Fasteners	1-4-2
Hydraulic Connections	1-4-6
'Positional Type' Hydraulic Adaptors	1-4-10
Service Tools	
Introduction	1-5-1
Numerical List	1-5-2
Tool Detail Reference	1-5-5
Rivet Nuts	1-5-27
Slide Hammer Kit	1-5-29
Service Consumables	
Introduction	1-6-1
Sealing and Retaining Compounds	1-6-2
Fuel	
Introduction	1-7-1
Related Topics	1-7-2
Acceptable and Unacceptable Fuels	1-7-3
Stall Speed Combinations	
Introduction	1-8-1
Related Topics	1-8-2
Specifications	1-8-3



Section 1 - General Information

Contents

Page No.

Applications

Introduction

This manual contains topics that relate to JCB Loadall machines in the 5A and 5T groups. There are several machine model codes in the family.

Machine Group	Model Code	Model Name	Serial Number range
5A	A	531-70	TBA
5A	B	535-95	TBA
5A	C	536-60	TBA
5A	D	541-70	TBA
5A	H	533-105	TBA
5A	R	536-70	TBA
5A	S	526-56	TBA
5A	W	550-80	TBA
5T	A	531-T70	TBA
5T	B	541-T70	TBA
5T	C	536-T60	TBA
5T	D	535-T95	TBA
5T	E	536-T70	TBA
5T	W	550-T80	TBA

Machine variants: There are different machine variants within the same model name. This happens because of market requirements, or when the machine specification changes after a period of time. Where applicable information is given to help identify which machine variant is applicable for the given specifications and procedures.

Use the applications tables to see which topics relate to which machine models and variants. Where no variant information is given the topic is applicable to all machine models indicated on the table.

Important: The machine model names are NOT referred to in the topics. You must refer to the applications tables for the applicable machine model. Table entries shaded grey indicate a topic not included in this issue of the manual.

Note: For full details of machine identification refer to **Section 1 - Machine Identification**.

⇒ [Tables \(□ 1-1-2\)](#)

⇒ [Section 1 - General Information \(□ 1-1-2\)](#)

⇒ [Section 2 - Care and Safety \(□ 1-1-2\)](#)

⇒ [Section 3 - Routine Maintenance \(□ 1-1-3\)](#)

⇒ [Section B - Body and Framework \(□ 1-1-4\)](#)

⇒ [Section C - Electrics \(□ 1-1-6\)](#)

⇒ [Section E - Hydraulics \(□ 1-1-7\)](#)

⇒ [Section F - Transmission \(□ 1-1-10\)](#)

⇒ [Section G - Brakes \(□ 1-1-12\)](#)

⇒ [Section H - Steering \(□ 1-1-13\)](#)

⇒ [Section K - Engine \(□ 1-1-14\)](#)

⇒ [Section M - Electronic Data Systems \(□ 1-1-15\)](#)

It's a preview. You can download the full file by clicking the link below.

<https://shopservicemanual.com/>

Service Manuals from 2\$